



Condensing Combi wall mounted boiler

# BRAVA SLIM HE 40

INSTALLATION AND SERVICING INSTRUCTIONS



EN

Gas Safety Certificate AS/NZS 4552 LN: SAI-400196  
Watermark Certificate AS/NZS 3498 LN: WMK 26025

**CAUTION**

This product must be installed exclusively by professionally qualified personnel in accordance with the requirements of the standards AS/NZS 5601, AS/NZS 3498, AS/NZS 3500.4, AS/NZS 3000, (current version) of the local gas, water and electricity authorities and other relevant legislation.

## SAFETY WARNINGS AND REGULATIONS



### WARNINGS

- After having removed the packaging make sure that the product supplied is integral and complete in all its parts. If this is not the case, please contact the Dealer who sold the appliance.
- The appliance must be used as intended by **Sime** who is not responsible for any damage caused to persons, animals or things, improper installation, adjustment, maintenance and improper use of the appliance.
- In the event of water leaks, disconnect the appliance from the mains power supply, close the water mains and promptly inform professionally qualified personnel.
- Periodically check that the operating pressure of the water heating system when cold is **1-1.2 bar (100-120 kPa)**. If this is not the case, increase the pressure or contact professionally qualified personnel.
- If the appliance is not used for a long period of time, at least one of the following operations must be carried out:
  - *set the main system switch to "OFF";*
  - *close the gas and water valves for the water heating system.*
- In order to ensure optimal appliance operations **Sime** recommends that maintenance and checks are carried out **TWICE A YEAR**.



### WARNINGS

- **It is recommended that all operators** read this manual carefully in order to use the appliance in a safe and rational manner.
- **This manual** is an integral part of the appliance. It must therefore be kept for future reference and must always accompany the appliance in the event the appliance is transferred or sold to another Owner or User or is installed on another system.
- **Installation and maintenance** of this appliance must be carried out by a qualified company or by a professionally qualified technician, or authorised person, in accordance with the instructions contained in the manual. The company or technician will, at the end of installation operations, issue a statement of compliance with national and local Technical Standards and Legislation in force
- This appliance is not suitable for pool or SPA heating

## RESTRICTIONS



### IT IS FORBIDDEN

- Do not allow appliance to be used by children or unassisted disabled persons.
- Do not use electrical devices or appliances such as switches, electrical appliances etc if you can smell fuel. If this should happen:
  - *open the doors and windows to air the room;*
  - *close the gas isolation device;*
  - *promptly call for professional assistance.*
- Do not touch the appliance with bare feet or with any wet part of the body.
- Do not carry out any technical intervention or cleaning operation before having disconnected the appliance from the mains power by setting the main switch to "OFF", and closing the gas supply.
- Do not modify the safety or adjustment devices without authorization and instructions from the manufacturer.
- Do not block the condensate drain (if present).
- Do not pull, detach or twist the electrical cables coming out of the appliance even if the appliance is disconnected from the mains power supply.
- Do not expose the boiler to atmospheric agents. These boilers can also be installed in partially covered areas, as per EN 15502, with a maximum ambient temperature of 60°C and a minimum ambient temperature of - 5°C. It is recommended that the boiler is installed below weathered roofs, on the balcony or in a protected niche, to protect it from exposure to weathering agents (rain, hail and snow). The boiler is equipped as standard with an antifreeze function.
- Do not block or reduce the size of the ventilation openings of the room where the appliance is installed, if present.
- Remove the mains power and gas supply from the appliance if the external temperature could fall below ZERO (risk of freezing).
- Do not leave containers with flammable substances in the room where the appliance is installed.
- Do not leave packaging material around since it could be dangerous. Therefore dispose of it as prescribed by legislation in force.
- Do not install the boiler in special environments that may limit its optimum operation (e.g. marine environment).

## RANGE

MODEL	CODE
Brava Slim HE 40 i - (NATURAL GAS)	8112263
Brava Slim HE 40 e - (NATURAL GAS)	8112264

## COMPLIANCE

Our company declares that **Brava Slim HE 40** boilers comply with the following Australian Standards

- AS/NZS 5601 Gas Installations
- AS/NZS 3498 Energy Audits
- AS/NZS 3500.4 plumbing and drainage
- AS/NZS 3000 Electrical installations, Buildings, structures and premises



Distributed by  
Reece Australia



WaterMark



Gas Safety  
Certified

License Number: **SAI-400196; WMK 26025.**

## SYMBOLS



### WARNING

To indicate actions which, if not carried out correctly, can result in injury of a general nature or may damage or cause the appliance to malfunction; these actions therefore require particular caution and adequate preparation.



### ELECTRICAL HAZARD

To indicate actions which, if not carried out correctly, could lead to injury of an electrical nature; these actions therefore require particular caution and adequate preparation.



### IT IS FORBIDDEN

To indicate actions which **MUST NOT BE** carried out.



### CAUTION

To indicate particularly important and useful information.

## TABLE OF CONTENTS

### USER INSTRUCTIONS

TABLE OF CONTENTS	5
-------------------	---

### DESCRIPTION OF THE APPLIANCE

TABLE OF CONTENTS	13
-------------------	----

### INSTALLATION AND SERVICING INSTRUCTIONS

TABLE OF CONTENTS	21
-------------------	----





# USER INSTRUCTIONS

---

## TABLE OF CONTENTS

<b>1 USING THE BOILER BRAVA SLIM HE 40</b>	<b>6</b>	<b>3 MAINTENANCE</b>	<b>9</b>
1.1 Control panel.....	6	3.1 Adjustments.....	9
1.2 Preliminary checks .....	7	3.2 External cleaning.....	9
1.3 Ignition .....	7	3.2.1 <i>Cleaning the cladding</i> .....	9
1.4 Adjusting the heating temperature .....	7		
1.5 Adjusting the domestic hot water temperature .....	7	<b>4 DISPOSAL</b>	<b>9</b>
1.6 Fault / malfunction codes.....	8	4.1 Disposal of the equipment (European Directive 2002/96/CE) .....	9
<b>2 SHUTDOWN</b>	<b>8</b>	<b>5 HANDOVER INSTRUCTIONS</b>	<b>10</b>
2.1 Temporary shutdown.....	8	<b>6 SERVICE RECORDS</b>	<b>10</b>
2.2 Shutting down for long periods .....	8		

# 1 USING THE BOILER BRAVA SLIM HE 40

## 1.1 Control panel

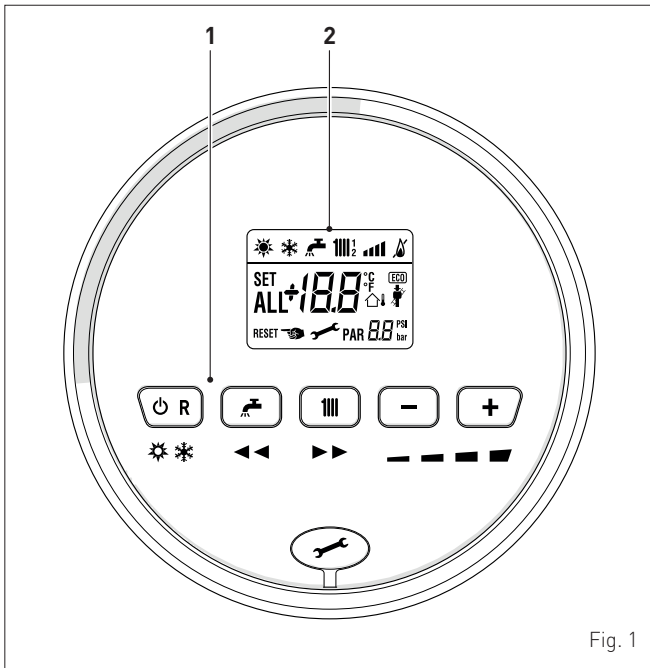


Fig. 1

### 1 FUNCTIONAL BUTTONS

**⏻ R** If pressed once or more than once for at least 1 second during normal operation, this button allows the user to change the boiler operating mode in a cyclical sequence (Stand-by – Summer – Winter). If the boiler is experiencing a fault which can be reset, it allows boiler operation to be unblocked.

**🚰** During normal operation, pressing the button displays the domestic hot water set point which can be between 10 and 60°C. In "parameter setting", the user can scroll through the parameter index (decreasing) by pressing this button.

**🔥** During normal operation, pressing the button displays the heating set point which can be between 20 and 80°C. In "parameter setting", the user can scroll through the parameter index (increasing) by pressing this button.

**-** During normal operation, pressing this button allows the user to reduce the heating or DHW set point on the basis of the selection made previously. If there is a Remote Control (Open Therm), after having selected the heating button, the user can modify the incline of the climatic curve (decreasing it) by pressing the button (-). In "parameter setting/display", the user can modify the parameter setting or value (decreasing) by pressing this button.

**+** During normal operation, pressing this button allows the user to increase the heating or DHW set point on the basis of the selection made previously. If there is a Remote Control (Open Therm), after having selected the heating button, the user can modify the incline of the climatic curve (increasing it) by pressing the button (+). In "parameter setting/display", the user can modify the parameter setting or value (increasing) by pressing this button.

**🔧** Programming connector cover plug.



### CAUTION

- In accordance with AS/NZS 3498 a temperature control device such as a tempering valve must be fitted when hot water is supplied to sanitary fixtures used primarily for the purposes of personal hygiene.
- pressing any one of these buttons for more than 30 seconds generates a fault on the display without preventing boiler operation. The warning disappears when normal conditions are restored.

### 2 DISPLAY



**"SUMMER"**. This symbol appears when the boiler is operating in "Summer" mode or if only the domestic hot water mode is enabled via the remote control. If the symbols and are flashing, this indicates that the chimney sweep function is active.



**"WINTER"**. This symbol appears when the boiler is operating in "Winter" mode or if both the domestic hot water and heating modes are enabled via the remote control. With the remote control, if no operating modes have been enabled both symbols and will be off.



**"RESET REQUIRED"**. The message indicates that after having repaired the fault, normal boiler operation can be restored by pressing the button **⏻ R**.



**"DOMESTIC HOT WATER"**. This symbol is present during a DHW request or during the "chimney sweep function". It flashes during the selection of the domestic hot water set point.



**"HEATING"**. This symbol lights up during heating operation or during the "chimney sweep function". It flashes during the selection of the heating set point.



**"BLOCK" DUE TO NO FLAME.**



**"FLAME PRESENCE"**.

**"POWER LEVEL"**. This indicates the power level at which the boiler is operating.



**"PARAMETER"**. This indicates that the user may be in parameter setting/display, or "info" or "counter", or in "activated alarms" (history).



**"ALARM"**. This indicates that a fault has occurred. The number specifies the cause which generated the alarm.



**"CHIMNEY SWEEP"**. This indicates that the "chimney sweep function" has been activated.



**"ECO", ALTERNATIVE ENERGY SOURCES.** Where active, it indicates that there is a solar system available.



### CAUTION

- Access to the control panel of model **Brava Slim HE 40 e** is possible after loosening screw (1) and removing panel (2).
- On completion of the operations, refit the panel on the control panel and secure fully.

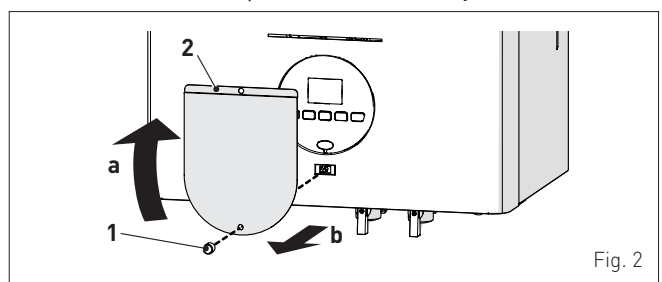


Fig. 2

## 1.2 Preliminary checks

Commissioning of the **Brava Slim HE 40** boiler must be carried out by professionally qualified personnel after which the boiler can operate automatically. It may however be necessary for the User to start the appliance autonomously without involving a technician: for example, after a holiday.

First of all check that the gas isolation and water system valves are open.

## 1.3 Ignition

After having carried out the preliminary checks, perform the following to start the boiler:

- set the main system switch to "ON" in order for the display to show the pressure level in the system during refilling
- **make sure that the operating mode is set to "Stand-by"**; if this is not the case, press the button until "Stand-by" mode has been selected

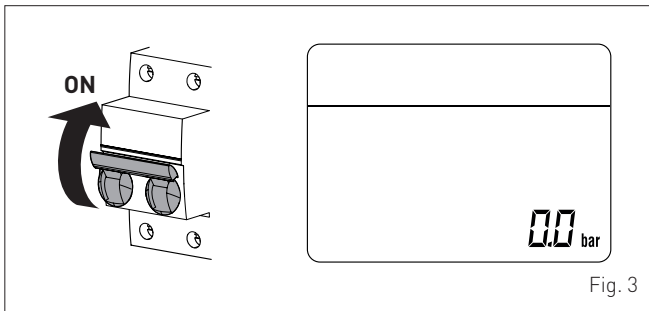


Fig. 3

- on the display (1), check that the heating system pressure when cold is **1-1.2 bar (100-120 kPa)**. Otherwise, open the filling valve, which is to be prearranged on the system return, and fill until a pressure of **1-1.2 bar (100-120 kPa)** is shown on the display (1)
- close the filling valve (2)


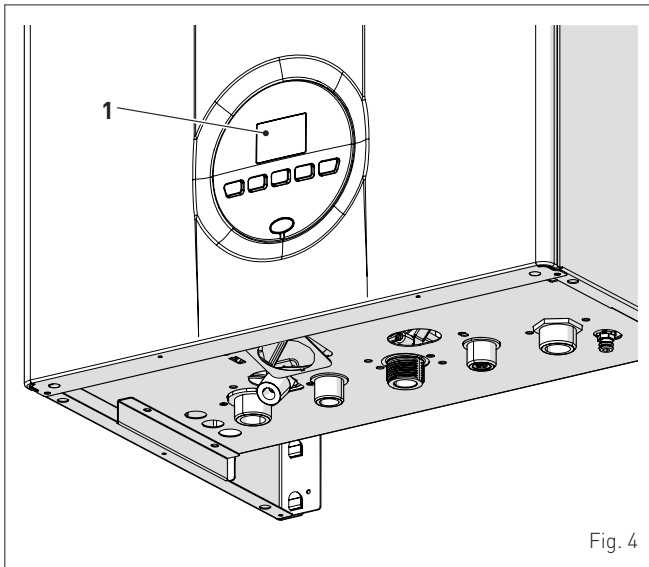



Fig. 4

- select the "SUMMER" operating mode by pressing and holding the button for at least 1 second. the value of the delivery sensor detected at that moment will appear on the display

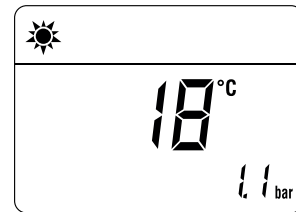


- open one or more than one hot water tap. The boiler will work at maximum power until the taps are closed.

Once the boiler has been commissioned in "SUMMER mode" , "WINTER mode" can be selected by pressing and holding the button for at least 1 second. The value of the delivery water temperature detected at that moment will appear on the display. In this case it is necessary to adjust the air thermostat/s to the required temperature or if the system has a chrono-thermostat, check that this is "active" and adjusted.

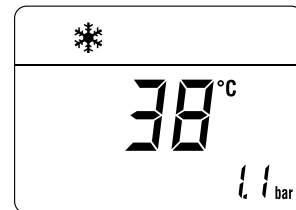


## 1.4 Adjusting the heating temperature

If the heating temperature is to be increased or decreased, press the button followed by the buttons **+** or **-** until the desired temperature is reached. The temperature can be set to between 20 and 80°C.

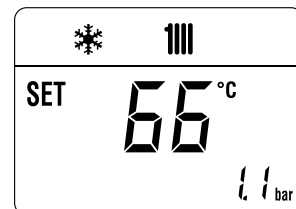

## 1.5 Adjusting the domestic hot water temperature


If the domestic hot water temperature is to be increased or decreased, press the button followed by the buttons **+** or **-** until the desired temperature is reached. The temperature can be set to between 10 and 60°C.

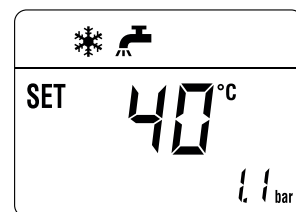

## 1.6 Fault / malfunction codes


If a fault/malfunction is detected during boiler operation, the message "ALL" will appear on the display followed by the fault code (eg. "06" - no flame detected).

If the message **RESET** also appears, press and hold the button **OR** for more than 3 seconds and check that the normal operating conditions are restored.

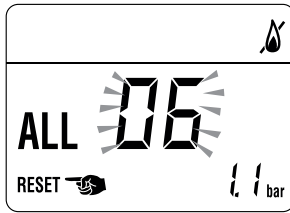

If this operation is not successful, **ONLY ONE MORE ATTEMPT** can be made, therefore:

- close the gas isolation valve
- set the main system switch to "OFF"
- contact the Qualified Technical Personnel.

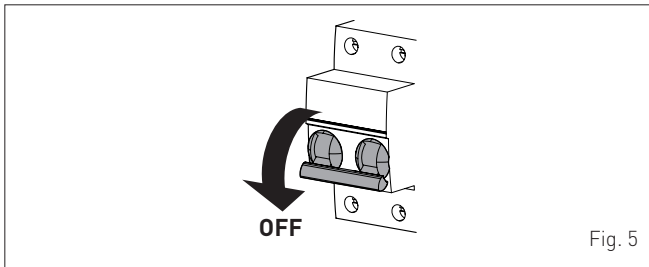


### CAUTION

In case of failure, the fault code appears on the display. The list of all fault codes, with their descriptions, can be found in the section **Commissioning**.

## 2 SHUTDOWN

### 2.1 Temporary shutdown

If the user wishes to interrupt boiler operation, press and hold the button **OR** for at least one second, once if in "WINTER mode" or twice if in "SUMMER mode" . "- -" will appear on the display.

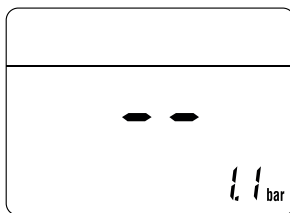

### ELECTRICAL HAZARD

The boiler will still be powered.

If the user is away temporarily, for a weekend, short trip etc and if the outside temperature is at ZERO:

- press and hold the button **OR** once if in "WINTER mode" or twice if in "SUMMER mode" to put the boiler into stand-by

- set the main system switch to "OFF"
- close the gas valve.

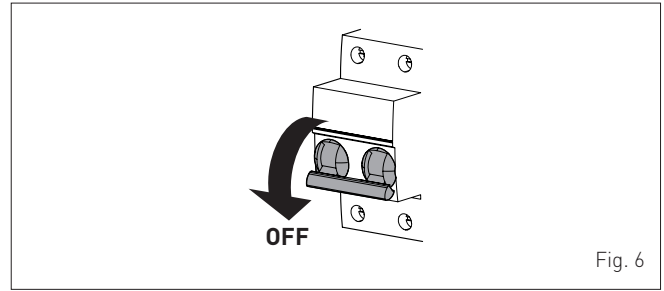


Fig. 6



### CAUTION


If the outside temperature might fall below ZERO, since the appliance is equipped with an "antifreeze function"

- ONLY PUT THE BOILER INTO STAND-BY
- leave the main system switch set to "ON" (boiler is powered)
- leave the gas valve open.

### 2.2 Shutting down for long periods

If the boiler is to be left unused for a long period, the following operations need to be carried out:

- press and hold the button **OR** for at least 1 second, once if in "WINTER mode" or twice if in "SUMMER mode" to put the boiler into stand-by "- -" will appear on the display

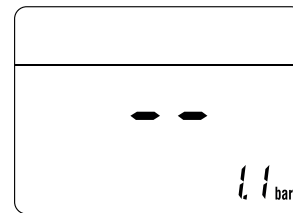

- set the main system switch to "OFF"

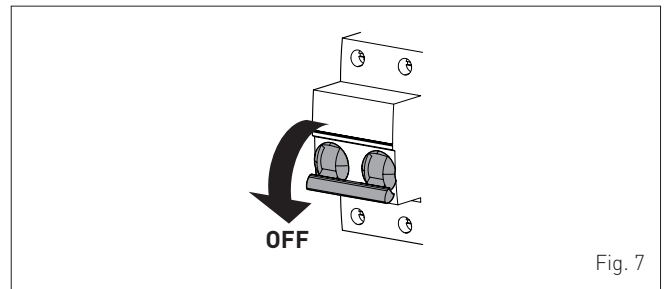


Fig. 7

- close the gas valve
- close the heating and domestic hot water isolation valves
- drain the heating and domestic hot water system if there is the risk of freezing.



### CAUTION

Contact the Qualified Technical Personnel if the procedure described above cannot be easily carried out.

## 3 MAINTENANCE

### 3.1 Adjustments

For the appliance to operate correctly and efficiently it is recommended that the User calls upon the services of a Professionally Qualified Technician to carry out **BI-ANNUAL** maintenance.



#### CAUTION

Maintenance interventions must **ONLY** be carried out by professionally qualified personnel who will follow the indications authorised in the **INSTALLATION AND MAINTENANCE INSTRUCTIONS**.

### 3.2 External cleaning

#### 3.2.1 Cleaning the cladding

When cleaning the cladding, use a cloth dampened with soap and water or alcohol for stubborn marks.



#### IT IS FORBIDDEN

to use abrasive products.

## 4 DISPOSAL

### 4.1 Disposal of the equipment (European Directive 2002/96/CE)

Once it reaches the end of its operating life, the equipment **MUST BE RECYCLED** in line with current legislation.

It can be handed over to recycling centres, if there are any, or to retailers that offer this service.


Recycling prevents potential damage to the environment and health. It allows to recover a number of recyclable materials, with considerable savings in terms of money and energy.



#### IT IS FORBIDDEN

dispose of the product with urban waste.

## 5 HANDOVER INSTRUCTIONS

N°	Description	 <b>When done</b>
1	Fill in all the details on this Boiler manual.	
2	Instruct the owner /users on the correct operation of the heating system, including how to turn the systems on and off, adjust the time and temperature settings.	
3	Instruct how to turn the heating system off in summer and on for winter.	
4	Locate all major components, understand their functions and how to turn them on and off, their functions and how to check and turn them on or off. Simple fault resolution i.e. power on.	
5	Instruct how to check and remove air in the radiators. Provide a bleed key.	
6	Turn ON gas, bleed air out at the isolation valve unions. Reseal and check for gas leaks. Turn gas OFF.	
7	Underline the importance of these SERVICE RECORDS, keeping them safe & accessible.	
8	Recommend that the boiler should be serviced at/ before the start of winter next year and then every two years.	

For any needs please contact Reece Customer Care 1800 080 055 or [customercare@reece.com.au](mailto:customercare@reece.com.au).

## 6 SERVICE RECORDS

Service – 1 – Year 1	Date
Service technician	Name <span style="float: right;">PIC Licence No.</span>
Service Company	
Contact phone number	
Work Completed	
Notes	

Service – 2 – Year 3	Date
Service technician	Name PIC Licence No.
Service Company	
Contact phone number	
Work Completed	
Notes	
Service – 3 – Year 5	Date
Service technician	Name PIC Licence No.
Service Company	
Contact phone number	
Work Completed	
Notes	
Service – 4 – Year 7	Date
Service technician	Name PIC Licence No.
Service Company	
Contact phone number	
Work Completed	
Notes	

Service – 5 – Year 9	Date
Service technician	Name PIC Licence No.
Service Company	
Contact phone number	
Work Completed	
Notes	
Service – 7 – Year 11	Date
Service technician	Name PIC Licence No.
Service Company	
Contact phone number	
Work Completed	
Notes	
Service – 8 – Year 13	Date
Service technician	Name PIC Licence No.
Service Company	
Contact phone number	
Work Completed	
Notes	

For any needs please contact Reece Customer Care 1800 080 055 or [customercare@reece.com.au](mailto:customercare@reece.com.au).



## DESCRIPTION OF THE APPLIANCE

---

### TABLE OF CONTENTS

<b>7</b>	<b>DESCRIPTION OF THE APPLIANCE</b>	<b>14</b>		
	7.1 Characteristics .....	14		7.5 Technical features .....
	7.2 Check and safety devices .....	14		17
	7.3 Identification .....	14		7.6 Main water circuit .....
	7.4 Structure .....	15		18
	<b>7.4.1 Brava Slim HE 40 i</b> .....	<b>15</b>		7.7 Sensors.....
	<b>7.4.2 Brava Slim HE 40 e</b> .....	<b>16</b>		18
				7.8 Expansion vessel .....
				18
				7.9 Circulation pump.....
				18
				7.10 Control panel.....
				19
				7.11 Wiring diagram .....
				20

## 7 DESCRIPTION OF THE APPLIANCE

### 7.1 Characteristics

**Brava Slim HE 40** are last generation condensing wall mounted boilers which **Sime** has produced for heating and domestic hot water production. The model **40 i** is designed for installation in rooms, while model **40 e** is designed specifically for outdoor installation, protected against atmospheric agents. The main elements choices made by **Sime** for the **Brava Slim HE 40** boilers are:

- the total pre-mix microflame burner combined with a steel heat exchanger for heating and a rapid heat exchanger for DHW
- the sealed combustion chamber, with respect to the room where the boiler is installed
- the command and control microprocessor electronic board provides efficient management of both heating and hot water production. It can also be connected to a remote control with an Open Therm protocol or to room thermostat and/or external sensor. If connected to an external sensor, the boiler temperature varies on the basis of the external temperature according to a selected optimal climatic curve providing significant energy and economic savings.

Other special features of the **Brava Slim HE 40** boilers are:

- use of a smoke probe to control the relative temperatures. If the temperature exceeds 110°C the boiler will shut down in safety status, requiring intervention of the Technical Service department of qualified professional personnel
- the anti-freeze function which activates automatically if the temperature of the water inside the boiler falls below the threshold of the value set at parameter "PAR 10" and, if there is an external sensor, if the external temperature falls below the threshold of the value set at parameter "PAR 11"
- the anti-blocking function of the pump and diverter valve, this activates automatically every 24 hours if no request for heat has been made
- the chimney sweep function lasts 15 minutes and makes the job of the qualified technician easier when measuring the parameters and combustion efficiency
- domestic hot water comfort function which allows the time necessary for the hot water to become available to be reduced and ensures that the temperature is stable
- screen display of the operating and self-diagnostic parameters with error code display when the fault occurs. This makes repair interventions easier and allows appliance operation to be restored correctly.

### 7.2 Check and safety devices

The **Brava Slim HE 40** boilers are equipped with the following check and safety devices:

- thermal safety thermostat 100°C
- 3 bar (300 kPa) relief valve
- heating water pressure transducer
- delivery sensor
- DHW sensor
- smoke flue gas probe.

**NOTE:** the proper fan operation of this boiler is checked electronically from the control panel. Then the use of an air pressure switch is not required.



#### IT IS FORBIDDEN

to commission the appliance with safety devices which do not work or which have been tampered with.



#### WARNING

Safety device may only be replaced by professional qualified personnel using **Sime** original spare parts.

### 7.3 Identification

The **Brava Slim HE 40** boilers can be identified by means of:

- 1 Packaging label:** this is located on the outside of the packaging and provides a code, the serial number of the boiler and the bar code
- 2 Technical Data Plate:** this is located inside the front panel of the boiler and provides the technical specification, appliance performance and any other information required by law.

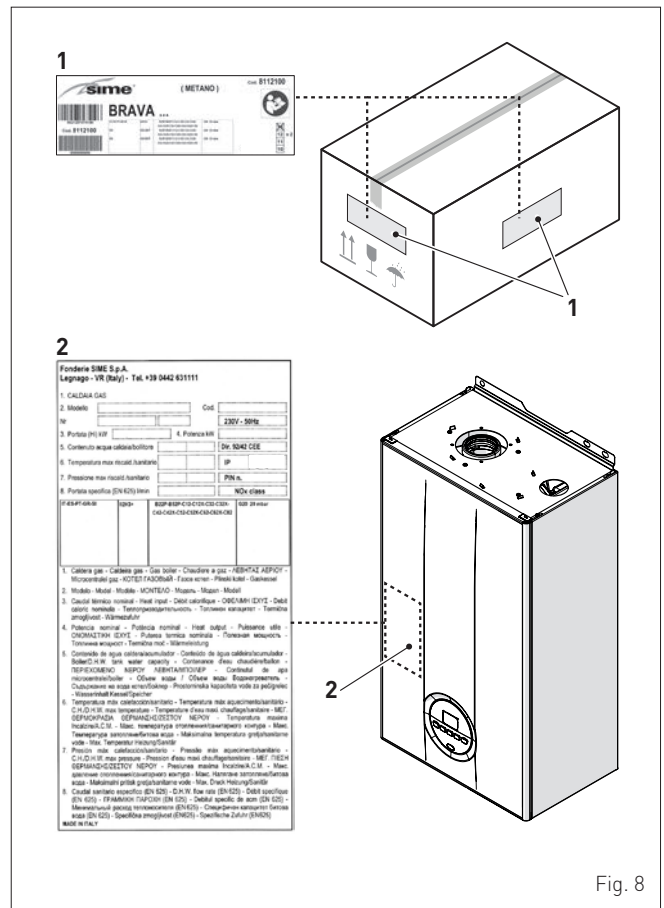


Fig. 8

KEY:

- 1 Packaging label
- 2 Technical Data Plate




#### CAUTION

Tampering with, removing or failing to display the identification plate or carrying out any other operation which does not allow safe identification of the product or which may hinder installation and maintenance operations.

## 7.4 Structure


### 7.4.1 Brava Slim HE 40 i

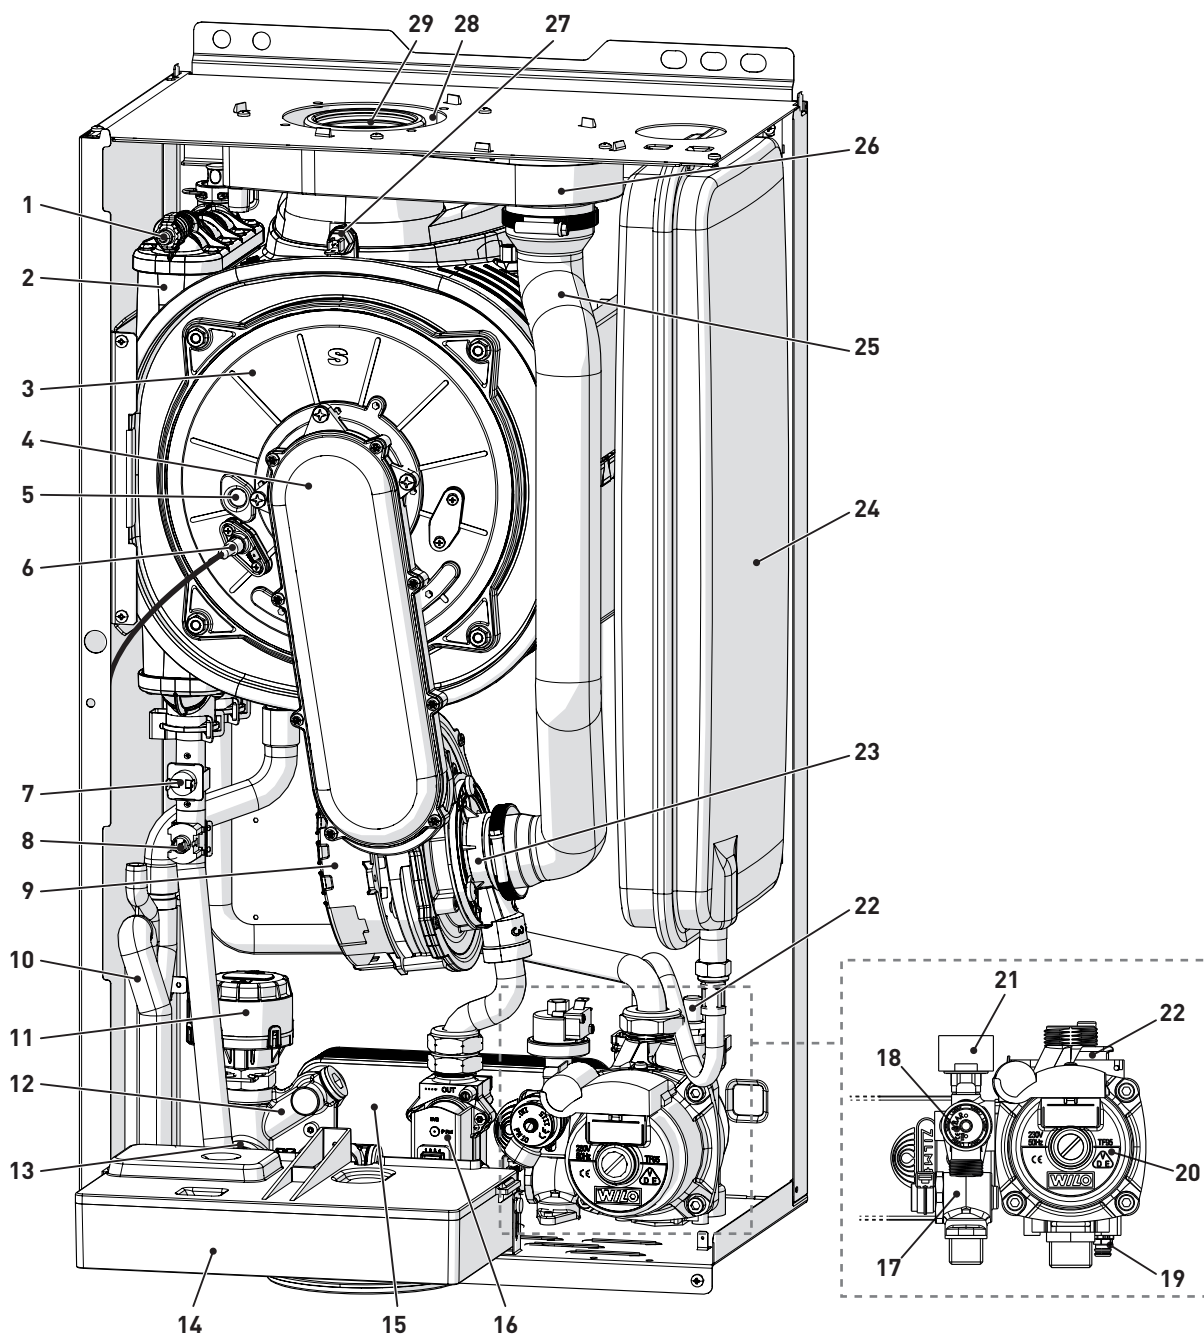

- |                                      |                              |
|--------------------------------------|------------------------------|
| 1 Heat exchanger bleed point         | 16 Gas valve                 |
| 2 Heat exchanger                     | 17 Domestic hot water filter |
| 3 Combustion chamber door            | 18 System relief valve       |
| 4 Oversleeve                         | 19 Boiler drain              |
| 5 Flame viewing window               | 20 System pump               |
| 6 Ignition/detection electrode       | 21 Water pressure transducer |
| 7 Heat safety thermostat             | 22 Automatic bleed valve     |
| 8 Delivery sensor                    | 23 Air-gas mixer             |
| 9 Fan                                | 24 Expansion vessel          |
| 10 Condensate siphon                 | 25 Air inlet pipe            |
| 11 Diverter valve                    | 26 Air-smoke chamber         |
| 12 System filling unit               | 27 Smoke flue gas probe      |
| 13 Domestic hot water sensor         | 28 Air inlet                 |
| 14 Control panel                     | 29 Smoke outlet              |
| 15 Domestic hot water heat exchanger |                              |

Fig. 9

### 7.4.2 Brava Slim HE 40 e

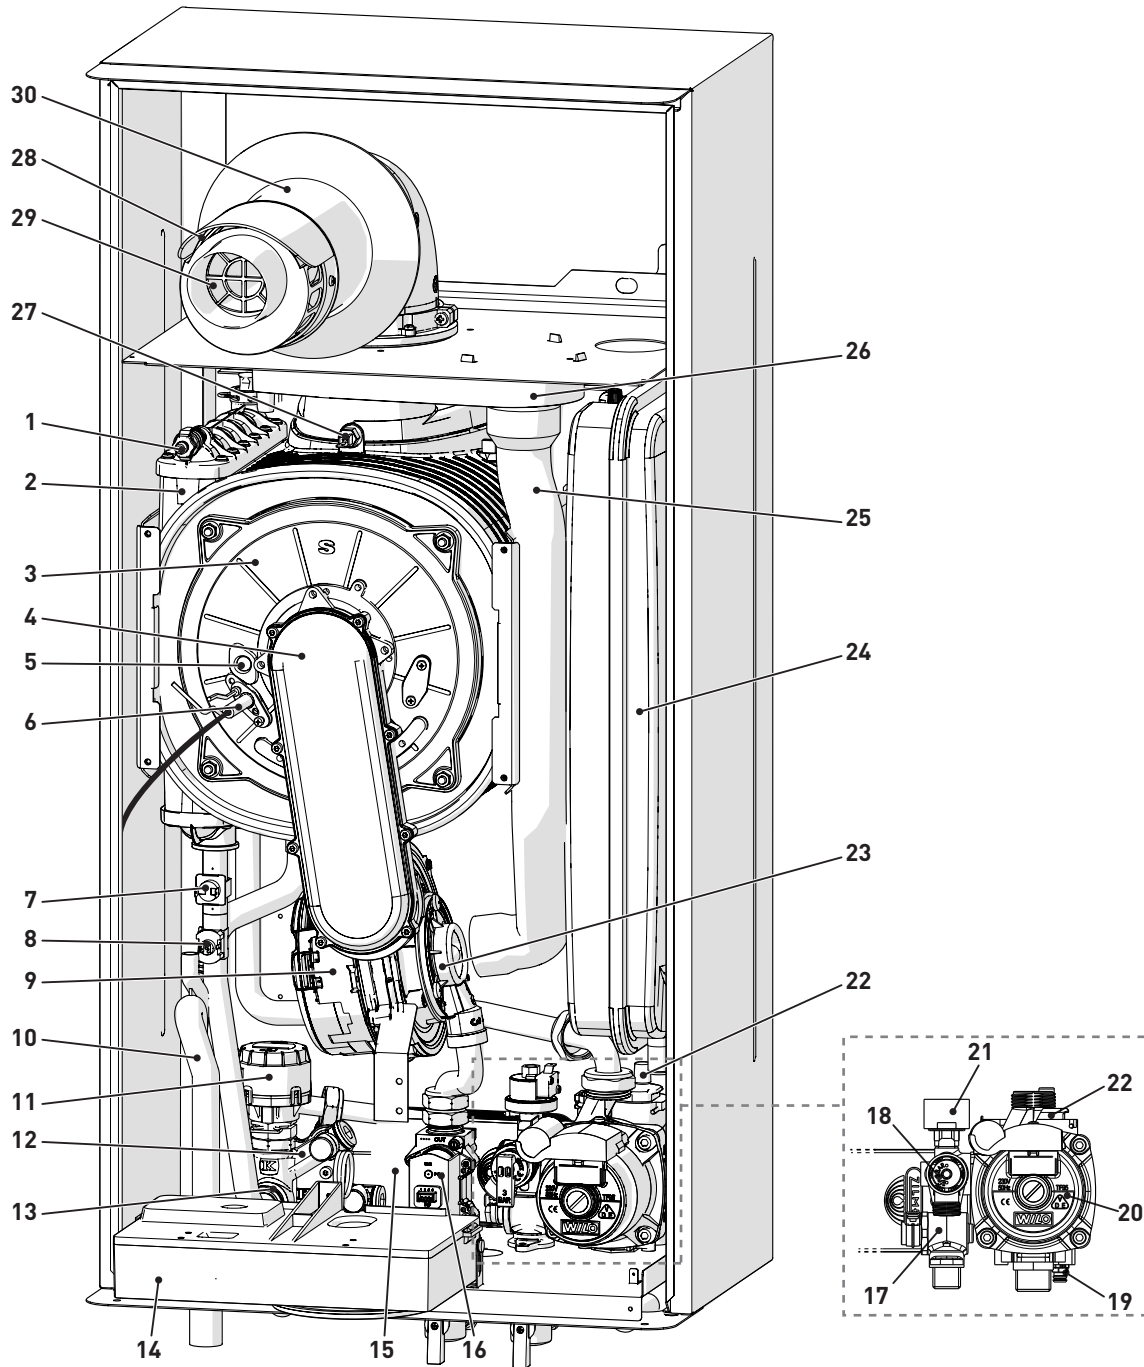

- |    |                                   |    |                           |
|----|-----------------------------------|----|---------------------------|
| 1  | Heat exchanger bleed point        | 16 | Gas valve                 |
| 2  | Heat exchanger                    | 17 | Domestic hot water filter |
| 3  | Combustion chamber door           | 18 | System relief valve       |
| 4  | Oversleeve                        | 19 | Boiler drain              |
| 5  | Flame viewing window              | 20 | System pump               |
| 6  | Ignition/detection electrode      | 21 | Water pressure transducer |
| 7  | Heat safety thermostat            | 22 | Automatic bleed valve     |
| 8  | Delivery sensor                   | 23 | Air-gas mixer             |
| 9  | Fan                               | 24 | Expansion vessel          |
| 10 | Condensate siphon                 | 25 | Air inlet pipe            |
| 11 | Diverter valve                    | 26 | Air-smoke chamber         |
| 12 | System filling unit               | 27 | Smoke flue gas probe      |
| 13 | Domestic hot water sensor         | 28 | Air inlet                 |
| 14 | Control panel                     | 29 | Smoke outlet              |
| 15 | Domestic hot water heat exchanger | 30 | Coaxial duct              |

Fig. 10

## 7.5 Technical features

DESCRIPTION	Brava Slim HE 40	
	40 i - 40 e	
<b>CERTIFICATIONS</b>		
Country of intended installation	AUS	
Fuel	NATURAL GAS / UNIVERSAL LPG	
SAI GLOBAL number	SAI-400196	
Class NO <sub>x</sub>	5 (< 70 mg/kWh)	
<b>HEATING PERFORMANCE</b>		
<b>HEAT INPUT</b>		
Nominal	MJ/h	140
Minimum	MJ/h	28.0
<b>HEAT OUTPUT</b>		
Nominal (80-60°C)	kW	34.5
Nominal (50-30°C)	kW	37.5
Minimum NATURAL GAS (80-60°C)	kW	6.9
Minimum NATURAL GAS (50-30°C)	kW	7.5
Minimum UNIVERSAL LPG (80-60°C)	kW	6.9
Minimum UNIVERSAL LPG (50-30°C)	kW	7.5
<b>EFFICIENCY</b>		
Max useful efficiency (80-60°C)	%	98.6
Min useful efficiency (80-60°C)	%	98.6
Max useful efficiency (50-30°C)	%	107.1
Min useful efficiency (50-30°C)	%	107.1
<b>DOMESTIC HOT WATER PERFORMANCE</b>		
Nominal heat input	MJ/h	160.0
Minimum heat input	MJ/h	28.0
Minimum D.H.W. flow rate	l/min	2
Max / Min Pressure	bar	7 / 0.7
	kPa	700 / 70
D.H.W. flow rate Δt 30°C (*)	l/min	19.1
D.H.W. flow rate Δt 25°C (*)	l/min	22.9
<b>ELECTRICAL SPECIFICATIONS</b>		
Power supply voltage	V	230
Frequency	Hz	50
Absorbed electrical power	W	135
Electrical protection degree	IP	X5D
<b>COMBUSTION DATA</b>		
Smoke temperature at Max/Min flow (80-60°C)	°C	75 / 62
Smoke temperature at Max/Min flow (50-30°C)	°C	54 / 39
Smoke flow Max/Min	g/s	18.6 / 3.3
CO <sub>2</sub> at Max/Min flow rate (NATURAL GAS)	%	9.0 / 9.0
CO <sub>2</sub> at Max/Min flow rate (UNIVERSAL LPG)	%	10.0 / 10.0
<b>NOZZLES - GAS</b>		
Number of nozzles	No.	1
Nozzle diameter (NATURAL GAS-UNIVERSAL LPG)	mm	6.5
Gas consumption at Max/Min flow rate (NATURAL GAS)	m <sup>3</sup> /h	4.23 / 0.74
Gas consumption at Max/Min flow rate (UNIVERSAL LPG)	kg/m <sup>3</sup>	3.10 / 0.74
Gas supply pressure (NATURAL GAS/UNIVERSAL LPG)	mbar	11.3 / 27.5
	kPa	1.13 / 2.75
<b>TEMPERATURE - PRESSURE</b>		
Max operating temperature	°C	85
Heating adjustment range	°C	20÷80
Domestic hot water adjustment range	°C	10÷60
Max operating pressure	bar	3
	kPa	300
Water content in boiler	l	5.60

(\*) Flow rates given without flow reducer

Lower Heat Output (Hs)

**NATURAL GAS Hs.** 37.78 MJ/m<sup>3</sup> (15°C, 1013 mbar/101.3 kPa) - **UNIVERSAL LPG Hs.** 95.65 MJ/m<sup>3</sup> (15°C, 1013 mbar/101.3 kPa)

## 7.6 Main water circuit

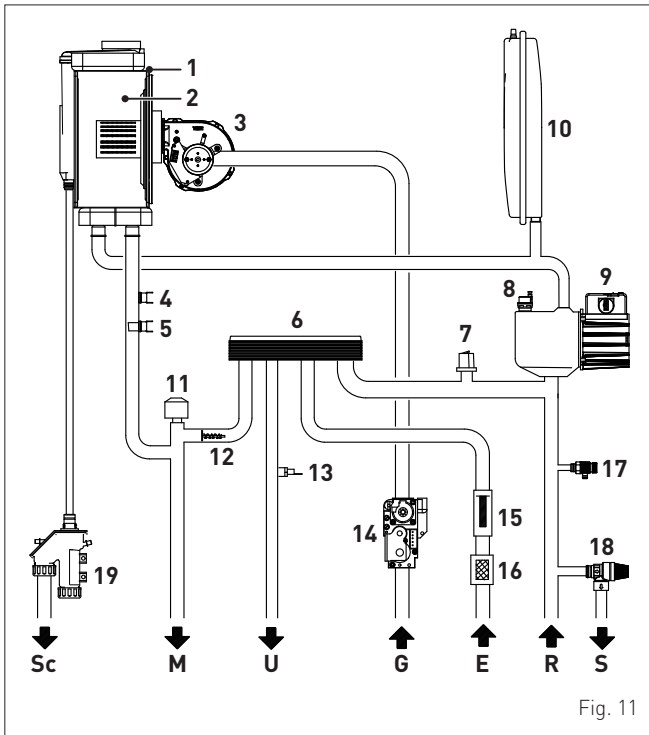


Fig. 11

### KEY:

- M System delivery
- R System return
- U Domestic hot water outlet
- E Domestic hot water inlet
- S Safety valve outlet
- G Gas supply
- Sc Condensate outlet

- 1 Condensing heat exchanger
- 2 Combustion chamber
- 3 Fan
- 4 Thermal safety thermostat
- 5 Delivery sensor
- 6 Domestic hot water heat exchanger
- 7 Pressure transducer
- 8 Automatic bleed valve
- 9 Pump
- 10 System expansion vessel
- 11 Diverter valve
- 12 Automatic by-pass
- 13 Domestic hot water sensor
- 14 Gas valve
- 15 Domestic hot water flow meter
- 16 Domestic hot water filter
- 17 Boiler drain
- 18 System relief valve
- 19 Condensate siphon outlet

## 7.7 Sensors

- The sensors installed have the following characteristics:
- Dual sensor (thermal safety/output) NTC R25°C; 10kΩ B25°-85°C: 3435
  - domestic hot water sensor NTC R25°C; 10kΩ B25°-85°C: 3435
  - external sensor NTC R25°C; 10kΩ B25°-85°C: 3435

### Correspondence of Temperature Detected/Resistance

- Examples of reading:  
 TR=75°C → R=1925Ω  
 TR=80°C → R=1669Ω.

TR	0°C	1°C	2°C	3°C	4°C	5°C	6°C	7°C	8°C	9°C
0°C	27279	26135	25044	24004	23014	22069	21168	20309	19489	18706
10°C	17959	17245	16563	15912	15289	14694	14126	13582	13062	12565
20°C	12090	11634	11199	10781	10382	9999	9633	9281	8945	8622
30°C	8313	8016	7731	7458	7196	6944	6702	6470	6247	6033
40°C	5828	5630	5440	5258	5082	4913	4751	4595	4444	4300
50°C	4161	4026	3897	3773	3653	3538	3426	3319	3216	3116
60°C	3021	2928	2839	2753	2669	2589	2512	2437	2365	2296
70°C	2229	2164	2101	2040	1982	1925	1870	1817	1766	1717
80°C	1669	1622	1577	1534	1491	1451	1411	1373	1336	1300
90°C	1266	1232	1199	1168	1137	1108	1079	1051	1024	998
100°C	973									

Resistance R (Ω)

## 7.8 Expansion vessel

The expansion vessel installed on the boilers has the following characteristics:

Description	U/M	Brava Slim HE 40
		40 i-40 e
Total capacity	l	10.0
Prefilling pressure	kPa	100
	bar	1.0
Useful capacity	l	6.0
Maximum system content (*)	l	140

(\*) Conditions of:

- Average maximum temperature of the system 85°C
- Start temperature at system filling 10°C.



### CAUTION

- For systems with water content exceeding the maximum system content (as indicated in the table) an additional expansion vessel must be prearranged.
- The difference in height between the relief valve and the highest point of the system cannot exceed 6 metres. If the difference is greater than 6 metres, increase the prefilling pressure of the expansion vessel and the system when cold by 0.1 bar (10 kPa) for each meter increase.

## 7.9 Circulation pump

The flow-head performance curve available for the heating system is shown in the graph below.

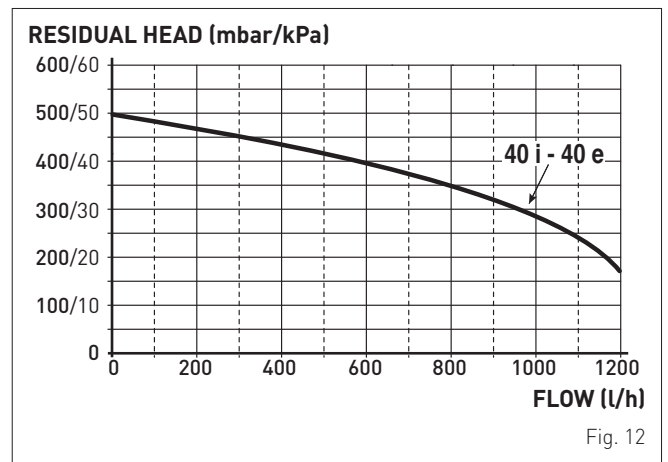


Fig. 12



### CAUTION

- The appliance is equipped with a by-pass which ensures water circulation in the boiler when the thermostatic valves or manual valves are used in the system.



## 7.10 Control panel

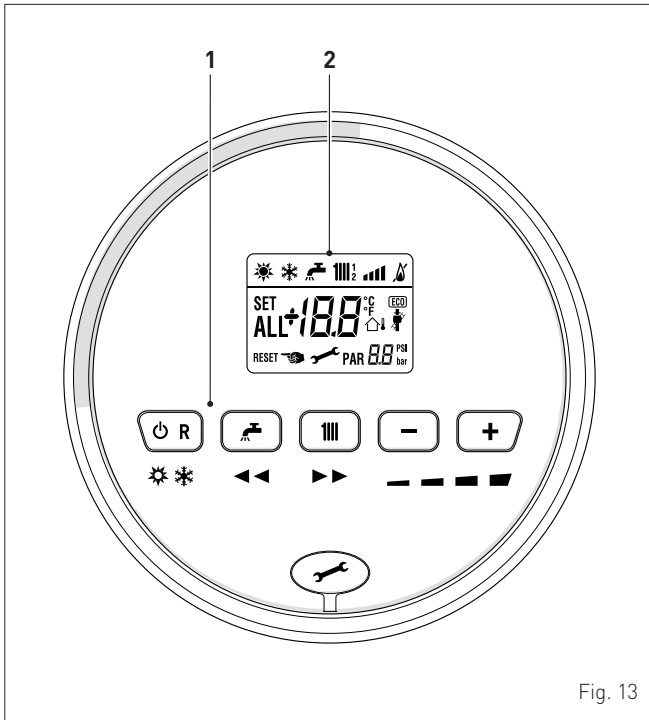


Fig. 13

### 1 FUNCTIONAL BUTTONS

**⏻ R** If pressed once or more than once for at least 1 second during normal operation, this button allows the user to change the boiler operating mode in a cyclical sequence (Stand-by – Summer – Winter). If the boiler is experiencing a fault which can be reset, it allows boiler operation to be unblocked.



During normal operation, pressing the button displays the domestic hot water set point which can be between 10 and 60°C. In "parameter setting", the user can scroll through the parameter index (decreasing) by pressing this button.



During normal operation, pressing the button displays the heating set point which can be between 20 and 80°C. In "parameter setting", the user can scroll through the parameter index (increasing) by pressing this button.



During normal operation, pressing this button allows the user to reduce the heating or DHW set point on the basis of the selection made previously. If there is a Remote Control (Open Therm), after having selected the heating button, the user can modify the incline of the climatic curve (decreasing it) by pressing the button (-). In "parameter setting/display", the user can modify the parameter setting or value (decreasing) by pressing this button.



During normal operation, pressing this button allows the user to increase the heating or DHW set point on the basis of the selection made previously. If there is a Remote Control (Open Therm), after having selected the heating button, the user can modify the incline of the climatic curve (increasing it) by pressing the button (+). In "parameter setting/display", the user can modify the parameter setting or value (increasing) by pressing this button.



Programming connector cover plug.



### CAUTION

– In accordance with AS/NZS 3498 a temperature control device such as a tempering valve must be fitted when hot water is supplied to sanitary fixtures used primarily for the purposes of personal hygiene.

– pressing any one of these buttons for more than 30 seconds generates a fault on the display without preventing boiler operation. The warning disappears when normal conditions are restored.

### 2 DISPLAY



"SUMMER". This symbol appears when the boiler is operating in "Summer" mode or if only the domestic hot water mode is enabled via the remote control. If the symbols and are flashing, this indicates that the chimney sweep function is active.



"WINTER". This symbol appears when the boiler is operating in "Winter" mode or if both the domestic hot water and heating modes are enabled via the remote control. With the remote control, if no operating modes have been enabled both symbols and will be off.



"RESET REQUIRED". The message indicates that after having repaired the fault, normal boiler operation can be restored by pressing the button R.



"DOMESTIC HOT WATER". This symbol is present during a DHW request or during the "chimney sweep function". It flashes during the selection of the domestic hot water set point.



"HEATING". This symbol lights up during heating operation or during the "chimney sweep function". It flashes during the selection of the heating set point.



"BLOCK" DUE TO NO FLAME.



"FLAME PRESENCE".



"POWER LEVEL". This indicates the power level at which the boiler is operating.



"PARAMETER". This indicates that the user may be in parameter setting/display, or "info" or "counter", or in "activated alarms" (history).



"ALARM". This indicates that a fault has occurred. The number specifies the cause which generated the alarm.



"CHIMNEY SWEEP". This indicates that the "chimney sweep function" has been activated.



"ECO", ALTERNATIVE ENERGY SOURCES. Where active, it indicates that there is a solar system available.



### CAUTION

– Access to the control panel of model **Brava Slim HE 40 e** is possible after loosening screw (1) and removing panel (2).

– On completion of the operations, refit the panel on the control panel and secure fully.

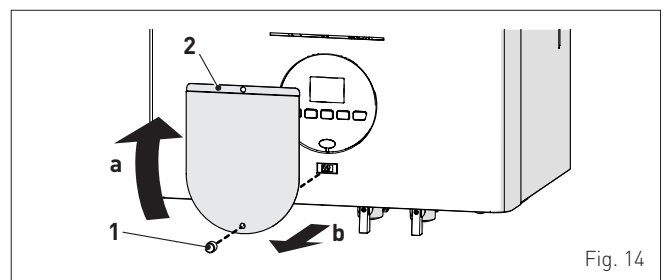


Fig. 14

## 7.11 Wiring diagram

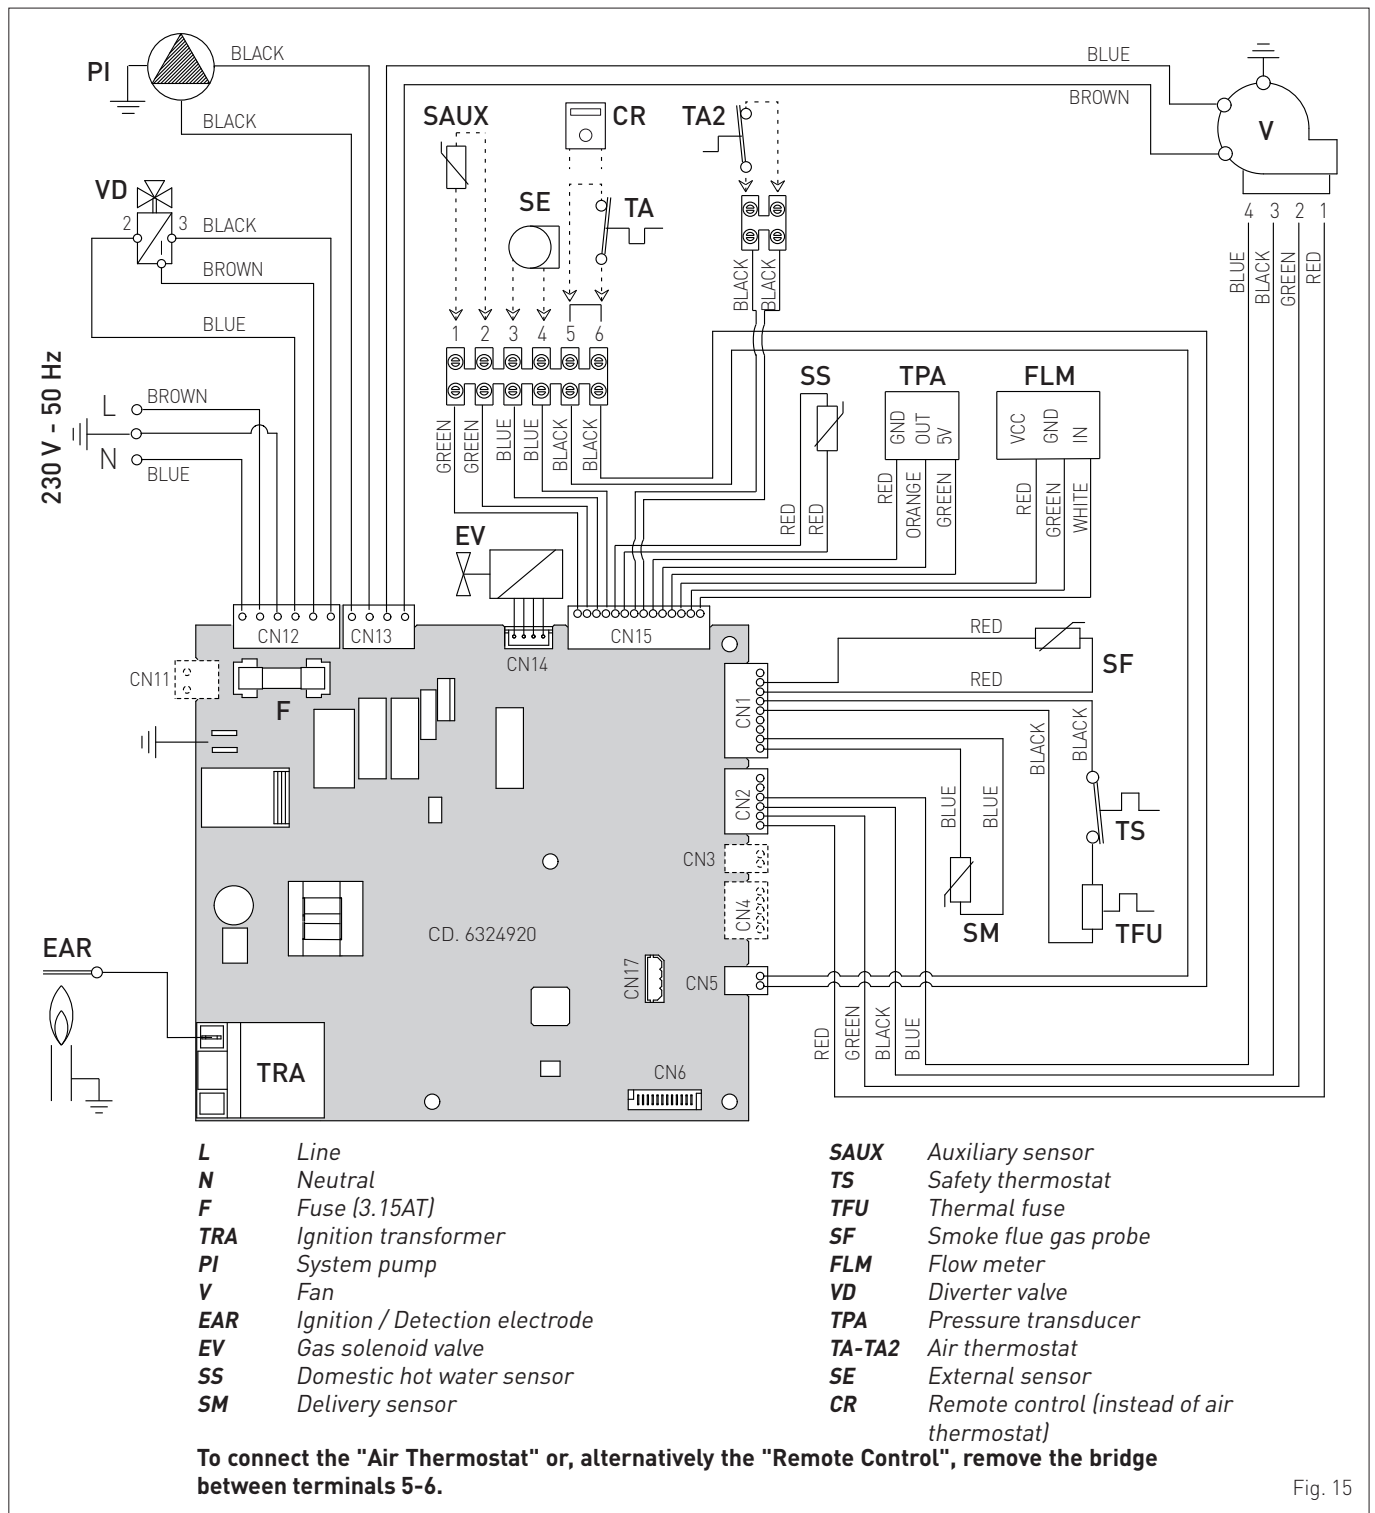


Fig. 15



### CAUTION

Users must:

- Use an omnipolar cut-off switch, disconnect switch in compliance with AS/NZS Standards
- Respect the connections L (Live) - N (Neutral)
- Ensure that the special power cable is only replaced with a cable ordered as a spare part and connected by professionally qualified personnel
- Connect the earth wire to an effective earthing system. The manufacturer is not responsible for any damage caused by failure to earth the appliance or failure to observe the information provided in the wiring diagrams.



### IT IS FORBIDDEN

To use water pipes for earthing the appliance.



# INSTALLATION AND SERVICING INSTRUCTIONS

## TABLE OF CONTENTS

<b>8</b>	<b>INSTALLATION</b>	<b>22</b>	<b>10</b>	<b>MAINTENANCE</b>	<b>37</b>
8.1	Receiving the product	22	10.1	Adjustments	37
8.2	Dimensions and weight	22	10.2	External cleaning	37
8.3	Handling	22	10.2.1	Cleaning the cladding	37
8.4	Installation room	22	10.3	Cleaning the inside of the appliance	37
8.5	New installation or installation of a replacement appliance	23	10.3.1	Removing components	37
8.6	Cleaning the system	23	10.3.2	Cleaning the burner and the combustion chamber	38
8.7	Water system treatment	23	10.3.3	Checking the ignition/detection electrode	38
8.8	Boiler installation	23	10.3.4	Final operations	38
8.9	Plumbing connections	24	10.4	Checks	38
8.10	Condensate outlet/collection	24	10.4.1	Checking the smoke duct	38
8.11	Gas supply	24	10.4.2	Checking the expansion vessel pressure	38
8.12	Connecting the flue	25	10.5	Unscheduled maintenance	39
8.12.1	Flue Terminal Positions	25	10.6	Possible faults and solutions	39
8.12.2	Installation of coaxial flues 60/100mm – 80/125mm	26	<b>11</b>	<b>COMMISSIONING BOILER CHECKLIST</b>	<b>41</b>
<b>8.12.3</b>	<b>Brava Slim HE 40 i</b>	<b>26</b>	<b>12</b>	<b>EXPLODED VIEWS</b>	<b>42</b>
8.12.4	Coaxial duct (Ø 60/100mm and Ø 80/125mm)	26	<b>13</b>	<b>REMOVING COMPONENTS</b>	<b>48</b>
<b>8.12.5</b>	<b>Brava Slim HE 40 e</b>	<b>27</b>	13.1	Remove panels	48
8.13	Electrical connections	27	13.1.1	Front panel	48
8.13.1	External sensor	28	13.1.2	Side panels	48
8.13.2	Chrono-thermostat or Air Thermostat	29	13.2	Rotate control panel	48
8.13.3	EXAMPLE of use of the command/control device on some types of heating systems	29	13.3	Remove/replace sensor and thermostat	49
8.14	Refilling or emptying	30	13.3.1	Smoke flue gas probe	49
8.14.1	REFILL operations	30	13.3.2	Domestic hot water sensor	49
8.14.2	EMPTYING operations	30	13.3.3	Delivery sensor	50
			13.3.4	Heat safety thermostat	50
<b>9</b>	<b>COMMISSIONING</b>	<b>31</b>	13.4	Remove electronic board	51
9.1	Preliminary operations	31	13.5	Remove/replace combustion head unit and fan	51
9.2	Before commissioning	31	13.6	Remove/replace the ignition and flame detection electrode	52
9.2.1	Self-calibrating procedure	31	13.7	Remove/replace the siphon	53
9.3	Parameter setting and display	32	13.8	Remove/replace gas valve	53
9.4	List of parameters	32	13.9	Remove/replace the expansion vessel	54
9.5	Fault / malfunction codes	33	13.10	Remove/replace diverter valve	54
9.6	Display of operating data and counters	34	13.11	Remove/replace system pump	55
9.7	Checks after commissioning	35	13.12	Remove/replace domestic hot water exchanger	55
9.7.1	Chimney sweeper function	35			
9.8	Domestic hot water comfort function (preheating)	36			
9.9	Gas conversion	36			

## 8 INSTALLATION



### CAUTION

The appliance must be installed by the Sime Technical Service only, or by a qualified professional.

### 8.1 Receiving the product

**Brava Slim HE 40** appliances are delivered in a single unit protected by cardboard packaging.

Open the cardboard packaging, with appropriate tool and pull out the boiler.

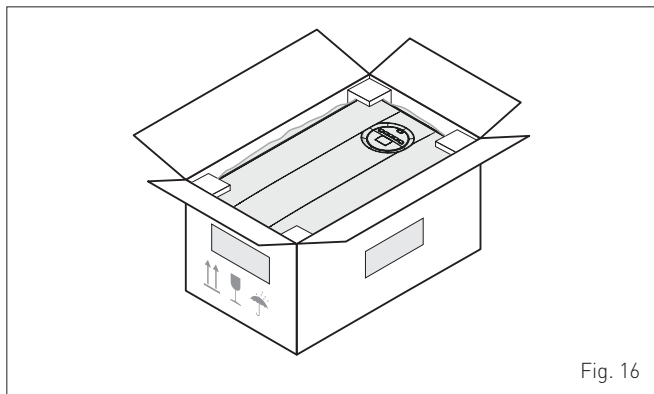


Fig. 16

The plastic bag found inside the packaging contains the following:

- Installation, use and maintenance manual
- Paper template for boiler installation
- Certificate of warranty
- Hydrostatic test certificate
- System booklet
- Bag with expansion plugs



### IT IS FORBIDDEN

Do not leave packaging material around or near children since it could be dangerous. Dispose of it as prescribed by legislation in force.

### 8.2 Dimensions and weight

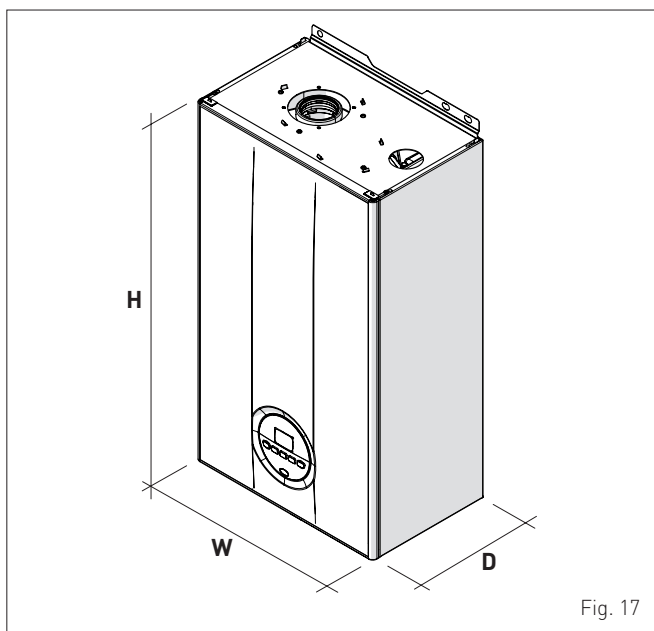


Fig. 17

Description	Brava Slim HE 40	
	40 i	40 e
W (mm)	400	450
D (mm)	300	306
H (mm)	700	917
Weight (kg)	32.5	35

### 8.3 Handling

Once the packaging has been removed, the appliance is to be handled manually, tilting it slightly, lifting it and applying pressure in the points indicated in the figure.

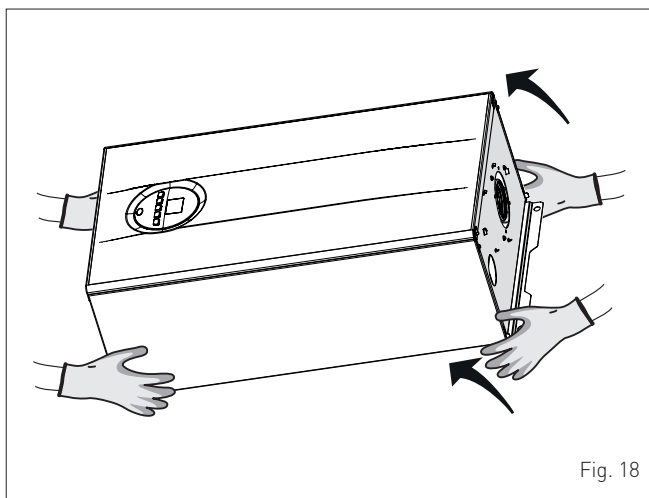


Fig. 18



### IT IS FORBIDDEN

To grip the appliance casing. Hold the "solid" parts of the appliance such as the base and structural frame.



### WARNING

Use suitable tools and accident protection when removing the packaging and when handling the appliance. Observe the maximum weight that can be lifted per person.

### 8.4 Installation room

The room where the appliance is to be installed must comply with the Technical Regulations and Legislation in force.

The minimum temperature of the installation room must NOT be lower than **-5 °C**.



### CAUTION

Remember to consider the space needed in order to access the safety/adjustment devices and to carry out maintenance interventions (see Fig. 19).

### APPROXIMATE MINIMUM DISTANCES

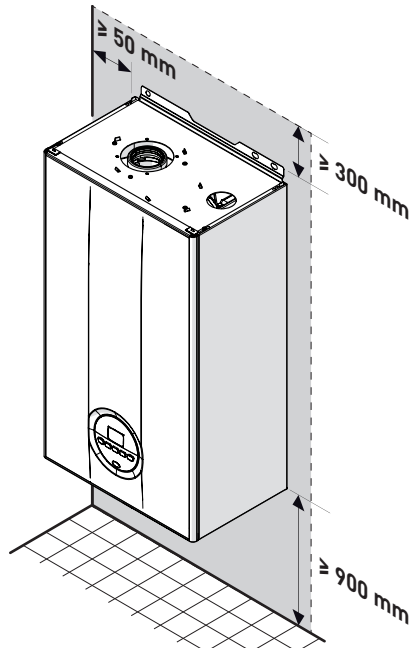


Fig. 19



#### CAUTION

These minimum clearances must be maintained also in consideration of outdoor installations in confined spaces (e.g. alcoves).

### 8.5 New installation or installation of a replacement appliance

When **Brava Slim HE 40** boilers are installed on old systems or systems requiring updating, it is recommended the installer checks with appliance supplier for advice:

- the connecting flue pipe is suitable for the combustion temperature of the appliance, calculated and manufactured in compliance with Standards, current editions, that it is as straight as possible, air tight, isolated, with no obstructions or restriction and that it has appropriate condensate collection and evacuation systems
- the electrical system has been manufactured in compliance with specific Standards and by professionally qualified personnel
- the fuel delivery line and the tank (LPG) comply fully with specific Standards
- the expansion vessel ensures total absorption of the fluid dilation in the system
- the pump flow-head performance is sufficient for the system characteristics
- the system is clean, free of any sludge, deposits, de aerated and air tight. For system cleaning, please refer to the relevant paragraph.



#### CAUTION

Gas pipe sizing, flue installation and appliance ventilation must comply with AS/NZS 5601 and AS/NZS 3500.4 "Water piping installation".



#### IT IS FORBIDDEN

Do not install the boiler in special environments that may limit its optimum operation (e.g. marine environment).

### 8.6 Cleaning the system

Before installing the appliance on a newly constructed system or replacing a heat generator on an existing system, it is important that the system is thoroughly cleaned to remove sludge, slag, dirt, residue etc.

Before removing an old heat generator from an existing system, it is recommended that the user:

- puts a descaling additive into the water system
- allows the system to work with the generator active for a few days
- drains the dirty water from the system and flushes the system with clean water once or more than once.

If the old generator has already been removed or is not available, replace it with a pump to circulate water in the system and then proceed as described above.

Once cleaning operations have been carried out and before installing the new appliance, it is recommended that a fluid is added to the water system to protect it from corrosion and deposits.



#### CAUTION

For further information on the type of additive and usage, please contact the appliance manufacturer.

### 8.7 Water system treatment

When filling and restoring the system it is good practice to use water with:

- aspect: clear if possible
- pH: 6÷8
- hardness: < 25°f.

If the water characteristics are different from those indicated, it is recommended that a safety filter is used on the water delivery pipe to retain impurities, and a chemical treatment system to protect against possible deposits and corrosion which could affect boiler operation.

If the systems are only low temperature systems, it is recommended that a product is used to prevent the development of bacteria.

In any case, please refer to and comply with Legislation and specific Technical Standards in force.

### 8.8 Boiler installation

**Brava Slim HE 40** boilers leave the factory with a template for installation onto a solid wall.

For installation:

- remove the front panel (only on model **Brava Slim HE 40 e**)
- place the steel sheet template (2) (if supplied) on the wall (1)
- make the holes and insert the expansion plugs (3)
- hook the boiler onto the plugs.

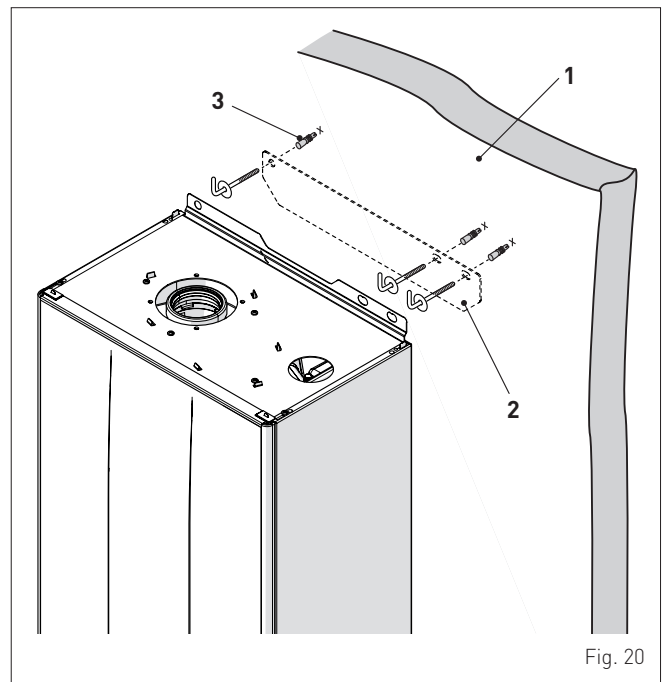


Fig. 20



**CAUTION**

- The wall on which the appliance is to be hung must be of adequate strength and capable of holding the weight of the appliance and associated components and pipework.



**CAUTION**

- The height of the boiler is to be such that disassembly and maintenance interventions are facilitated.

**8.9 Plumbing connections**

The plumbing connections have the following characteristics and dimensions.

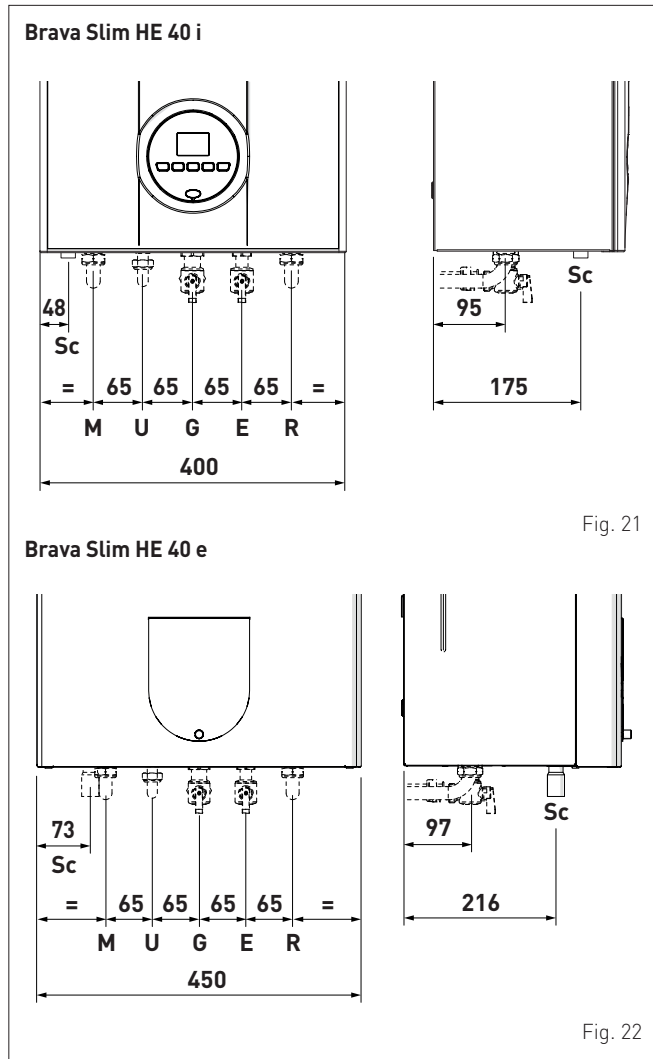


Fig. 21

Fig. 22

Description	Brava Slim HE 40	
	40 i	40 e
M - System delivery	Ø 3/4" G	
R - System return	Ø 3/4" G	
U - Domestic hot water output	Ø 1/2" G	
E - Domestic hot water inlet	Ø 1/2" G	
G - Gas supply (*)	Ø 3/4" G	
Sc - Condensate outlet	Ø 25 mm	

(\*) Brass adaptor for gas connection supplied. G3/4" to R3/4".

**8.10 Condensate outlet/collection**

In order to collect the condensate, it is recommended that:

- the appliance condensate outlets and the smoke outlet are ducted
- a neutralising device is prearranged
- the outlet incline is >3%.



**CAUTION**

- The condensate outlet duct must be airtight, suitably sized to that of the siphon and must not be restricted at any point.
- The condensate outlet must be constructed in full compliance of the National or Local regulations in force.
- Before commissioning the appliance, fill the siphon with water.

**8.11 Gas supply**

Brava Slim HE 40 boilers leave the factory prearranged for gas **NATURAL GAS** and can also work with **Universal LPG** without the need for any type of mechanical conversion. Select parameter "03" (see "**Parameter setting and display**") and set the type of gas to be used.

If changing the type of gas to be used, carry out the entire appliance "**COMMISSIONING**" phase.

Boiler connection to the gas mains must be carried out in full compliance with installation Standards in force.

Before connecting the boiler to the gas mains, the user must ensure that:

- the type of gas is correct for the appliance
- the pipes are clean
- the gas supply pipe is the same dimension as or greater than that of the boiler fitting (G3/4") and with a load loss less than or equal to that contemplated between the gas mains and the boiler.



**WARNING**

Once installation has been completed, check that the joints are air tight as indicated in the installation Standards.



**CAUTION**

It is recommended that the gas line has a suitable filter.

## 8.12 Connecting the flue

### 8.12.1 Flue Terminal Positions

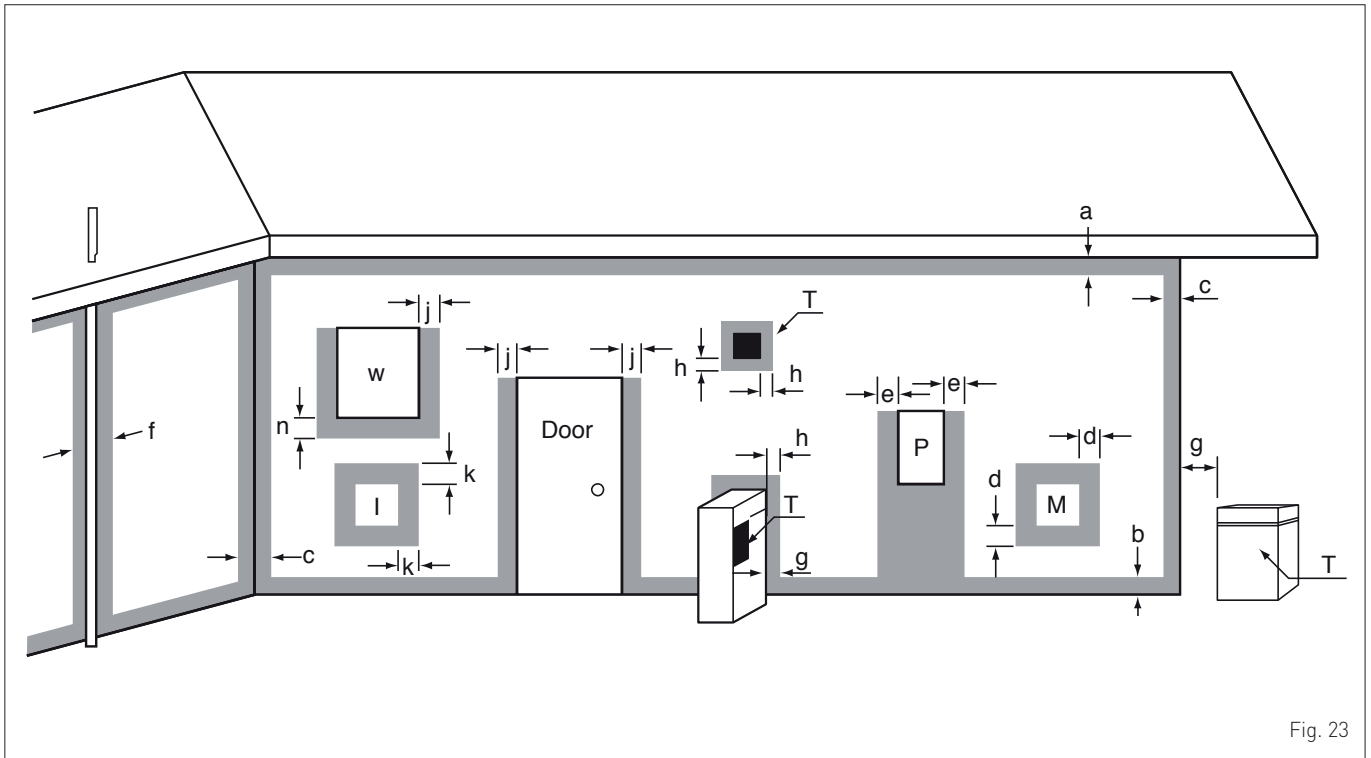


Fig. 23

DESCRIPTION	Brava Slim HE 40	
	Min. Clearance (mm)	
Flue terminal	T	
Mechanical air inlet	I	
Gas meter	M	
Electricity meter or fuse box	P	
Shaded area indicates prohibited area		
Below eaves, balconies and other projections (Appliances over 50MJ/h)	a	300
From the ground, above a balcony or other surface	b	300
From a return wall or external corner	c	300
From a gas meter	d	1000
From an electricity meter or fusebox/breaker panel	e	500
From a drain pipe or soil pipe	f	75
Horizontally from any building structure or obstruction facing a flue terminal	g	500
From any other flue terminal, cowl or combustion air intake	h	300
Horizontally from any opening window, door, non-mechanical air inlet or other opening into a building with the exception of sub-floor ventilation	j	300
From a mechanical air inlet including a spa blower.	k	1000
Vertically below an opening window, non-mechanical air inlet or any other opening into a building with the exception of sub-floor ventilation	n	500



#### CAUTION

- Use as a guide only. See AS/NZS5601 for flue design details.
- Refer to AS/NZS5601, current version, or local gas fitting rules for specific locations.



#### CAUTION

- The location of the flue terminal must comply with the clearances shown on this page. If you are unsure about clearances not indicated here, in general refer to AS/NZS 5601, or your local authority.



#### CAUTION


- All measurements are the minimum clearances required.
- Terminals must be positioned so to avoid combustion products entering the building.
- When the installer installs the flue through a wall, the wall must be adequately sealed and the hole must not affect the building structure or fire resistance.
- Install a fire proof back board if installing on combustible surfaces.
- The fixing method and the wall structure must be sufficient to hold the weight of the boiler.

### 8.12.2 Installation of coaxial flues 60/100mm – 80/125mm

Coaxial flue kits that are supplied separately. The diagrams below, illustrate some examples of fluing options allowed and the maximum lengths than can be achieved. It is essential that a flue gas analysis point is made available directly above the boiler.

#### 8.12.3 Brava Slim HE 40 i

##### Permitted outlets

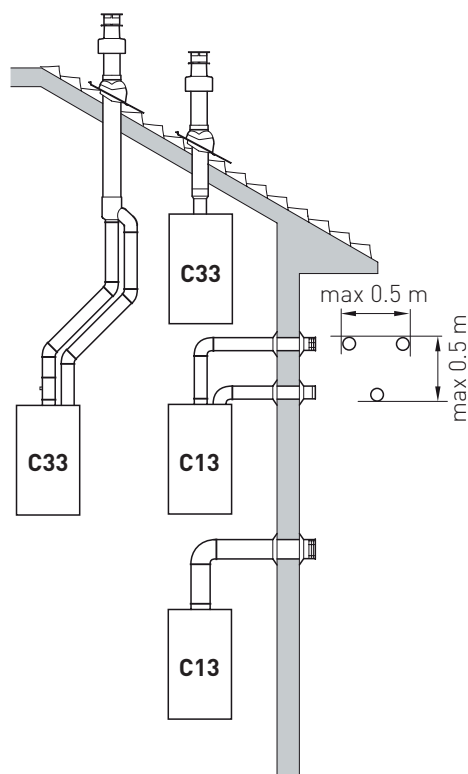

##### C13

Concentric wall smoke outlet The pipes can start from the boiler but the outlets must be concentric or close together (no more than 50 cm) to be subject to similar wind conditions.

##### C33

Concentric roof smoke outlet The pipes can start from the boiler but the outlets must be concentric or close together (no more than 50 cm) to be subject to similar wind conditions.

Fig. 24



#### WARNINGS

- The smoke flue and the connection to the flue pipe must be in compliance with the national and local Standards and Legislation in force.
- The use of rigid ducts which are resistant to temperature, condensate, mechanical stress and are air-tight is compulsory.
- Outlet ducts which are not isolated are a risk of danger.

### 8.12.4 Coaxial duct (Ø 60/100mm and Ø 80/125mm)

#### Coaxial accessories

Description	Code	
	Ø 60/100 mm	Ø 80/125 mm
Coaxial duct kit	8096250	8096253
Extension W. 1000 mm	8096150	8096171
Extension W. 500 mm	8096151	8096170
Vertical extension W. 140 mm with smoke analysis take-off point	8086950	-
Adapter for Ø 80/125 mm	-	8093150
Additional 90° curve	8095850	8095870
Additional 45° curve	8095950	8095970
Roof outlet terminal W. 1284 mm	8091205	8091205

#### Load loss - Equivalent lengths

Model	Leq (linear metres)	
	Ø 60/100 mm	Ø 80/125 mm
90° curve	1.5	2
45° curve	1	1

#### Minimum-Maximum Lengths

Model	Duct Length Ø 60/100		Duct Length Ø 80/125					
	W Horizontal (m)		H Vertical (m)					
	Min.	Max.	Min.	Max.				
Brava Slim HE 40 i	-	4	1.3	6	-	10	1.2	13

### 8.12.5 Brava Slim HE 40 e

The boiler **Brava Slim HE 40 e** is supplied already complete with coaxial ducts for smoke outlet and combustion air inlet.

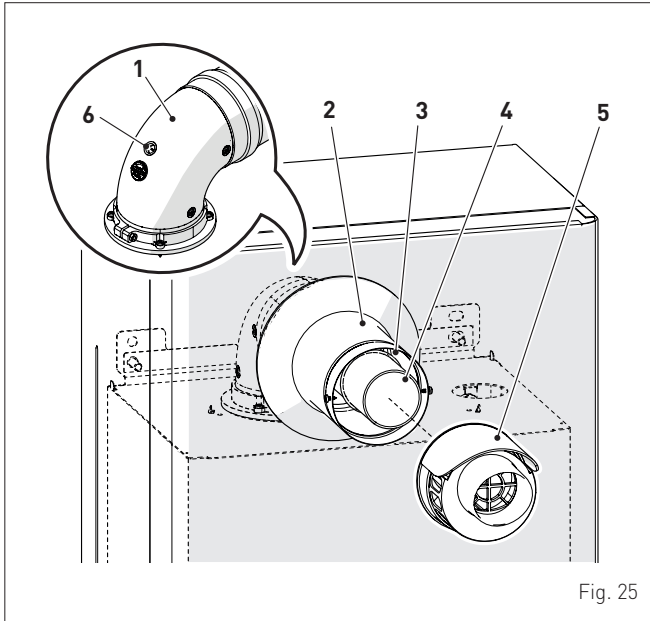


Fig. 25

**KEY:**

- 1 90° coaxial bend
- 2 Coaxial duct (supplied, but not fitted)
- 3 Air inlet
- 4 Smoke outlet
- 5 Outlet terminal (supplied, but not fitted)
- 6 Take-off point for smoke analysis

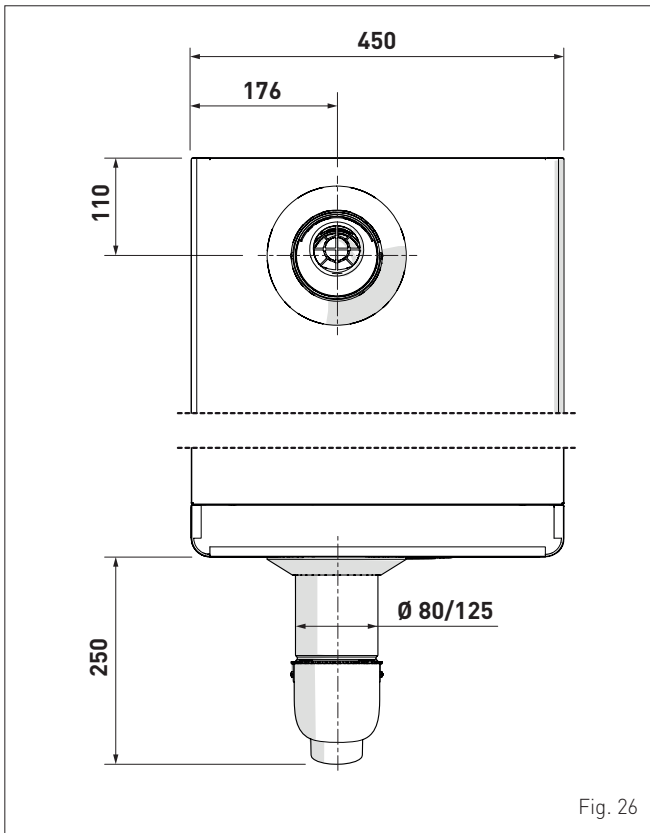


Fig. 26

### 8.13 Electrical connections

The boiler is equipped with a ready wired power cable which is to be connected to a 230V-50 Hz network.

If this cable needs to be replaced, an original spare must be requested from **Sime**.

Therefore only the connections of the original components as shown in the table are needed. These are to be ordered separately from the boiler.

DESCRIPTION	CODE
External sensor kit ( $\beta=3435$ , NTC 10KOhm at 25°C)	8094101
Remote control HOME (open therm)	8092280
Remote control HOME PLUS (open therm)	8092281



**CAUTION**

The maintenance interventions described must **ONLY** be carried out the professionally qualified personnel.



**WARNING**

Before carrying out any interventions described:

- set the main system switch to "OFF"
- close the gas valve
- make sure that no hot parts inside the appliance are touched.

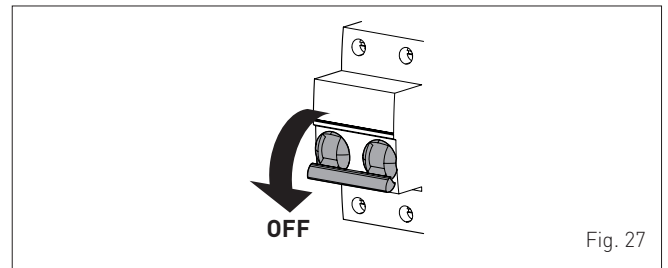


Fig. 27

To facilitate introduction of the connection wires of the optional components into the boiler:

- disassemble the smoke outlet duct of the **Brava Slim HE 40 e**
- remove the screws (1), pull the front panel (2) forwards and release it from the top by lifting it

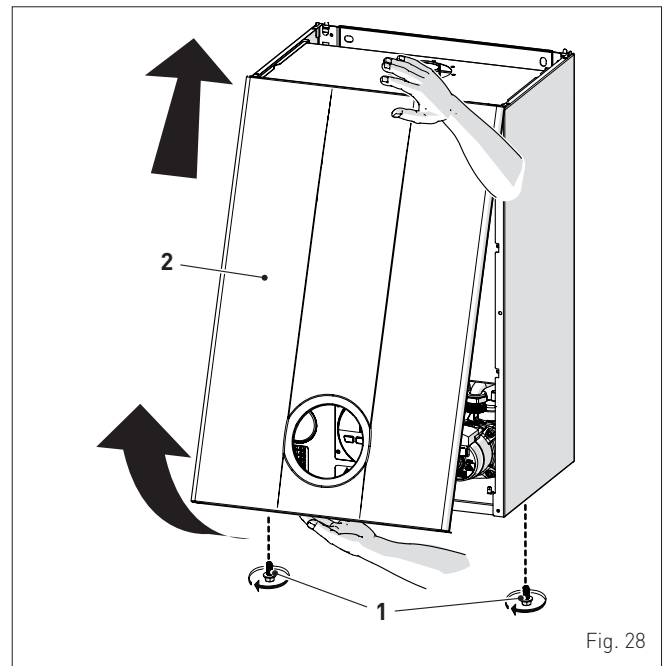


Fig. 28



- remove the screws (3) securing the control panel (4)
- move the panel (4) upwards (a) but keeping it in the side guides (5) to the end of travel
- bring it forwards and down (b) until it is horizontal

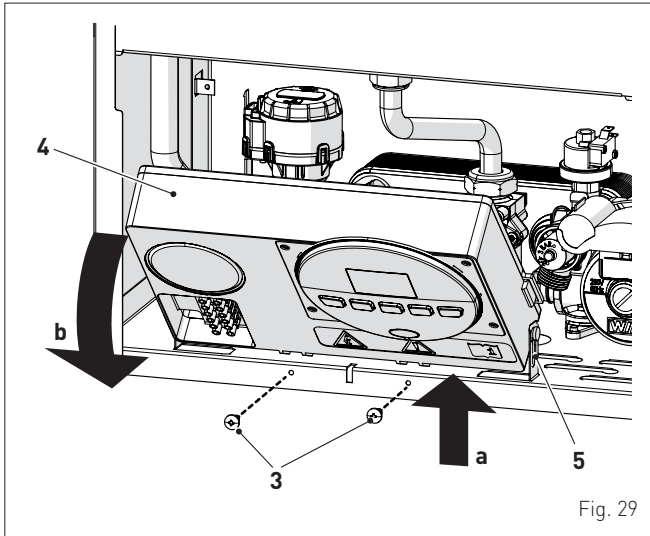


Fig. 29

- insert the connection wires into the cable gland (6) and the opening (7) on the control panel

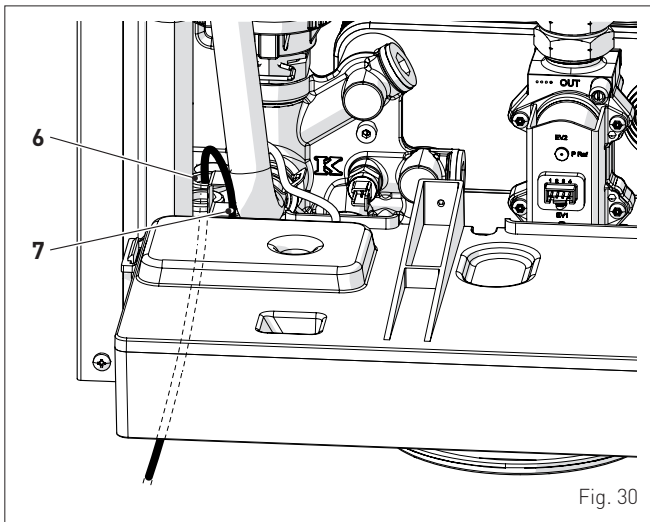


Fig. 30

- bring the control panel (4) to the original position and secure it with the screws (3) which were removed previously
- connect the component wires to the terminal board (8) following the indications provided on the data plate (9).

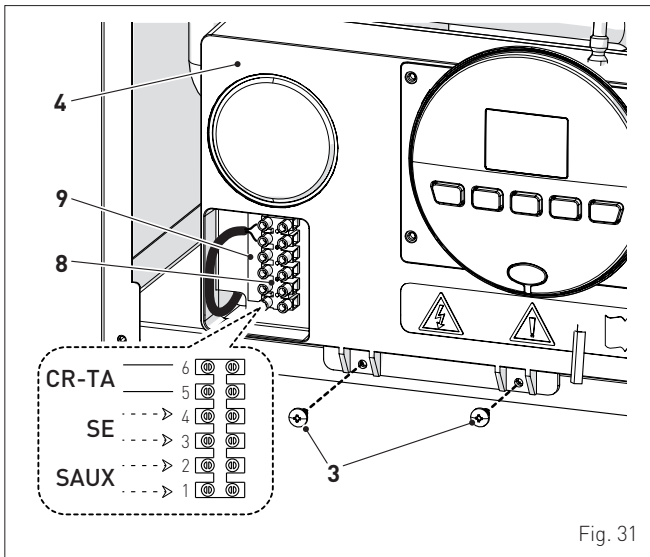


Fig. 31



**CAUTION**

It is compulsory:

- to use an omnipolar cut-off switch, disconnect switch in compliance with AS/NZS Standards
- if the power cable is to be replaced, that ONLY a special cable is used with a factory produced re-wired connector, ordered as a spare part and connected by a professionally qualified person
- to connect the earth wire to an effective earthing system (\*)
- that before any intervention on the boiler, the mains power is disconnected by setting the main system switch to "OFF".

(\*) The manufacturer is not responsible for any damage caused by failure to earth the appliance or failure to observe the information provided in the wiring diagrams.



**IT IS FORBIDDEN**

To use water pipes for earthing the appliance.

**8.13.1 External sensor**

The boiler is prearranged for connection to an external air temperature sensor and can operate with a sliding temperature. This means that the delivery temperature sent to the boiler can vary on the basis of the external temperature depending on the climatic curve selected from those shown in the diagram (Fig. 32).

When fitting the sensor on the outside of the building, follow the instructions provided on the packaging of the product itself.

**Climatic curve**

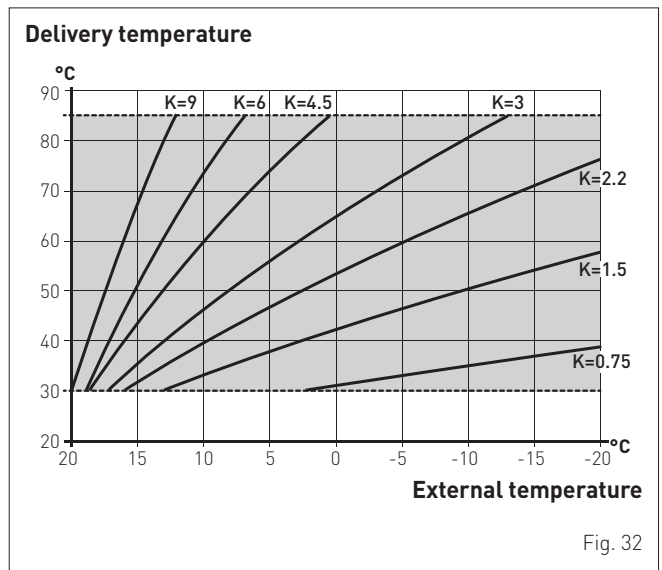


Fig. 32



**CAUTION**

If there is an external sensor, in order to select the optimal climatic curve for the system and therefore the delivery temperature based on the external temperature:

- press the button for 1 second
- press buttons + or - until the required curve K has been selected (within the range K=0.0 - K=9.0).




### 8.13.2 Chrono-thermostat or Air Thermostat

The electrical connection of the chrono-thermostat or air thermostat has already been described. When fitting the component in the room where the readings are to be taken, follow the instructions provided with the device.


### 8.13.3 EXAMPLE of use of the command/control device on some types of heating systems

- KEY**
- M System delivery
  - R System return
  - CR Remote control
  - SE External sensor
  - TA-TA3 Air thermostat for the zone
  - VZ1-VZ3 Zone valves
  - RL1-RL3 Zone relays
  - P1-P3 Zone pump
  - SP Hydraulic separator


#### ONE DIRECT ZONE system , external sensor and air thermostat.

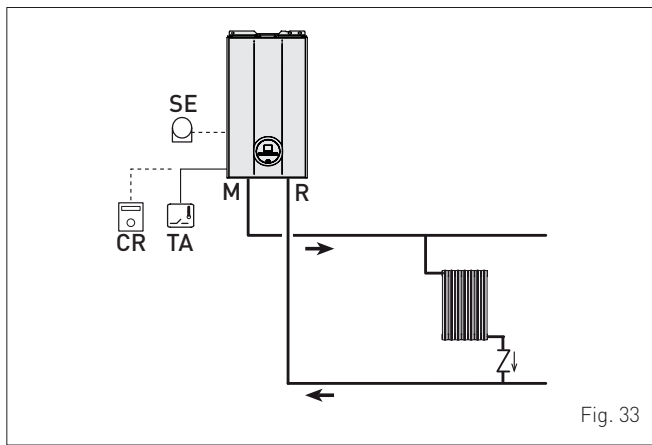

#### MULTI ZONE system - with pump, air thermostat and external sensor.

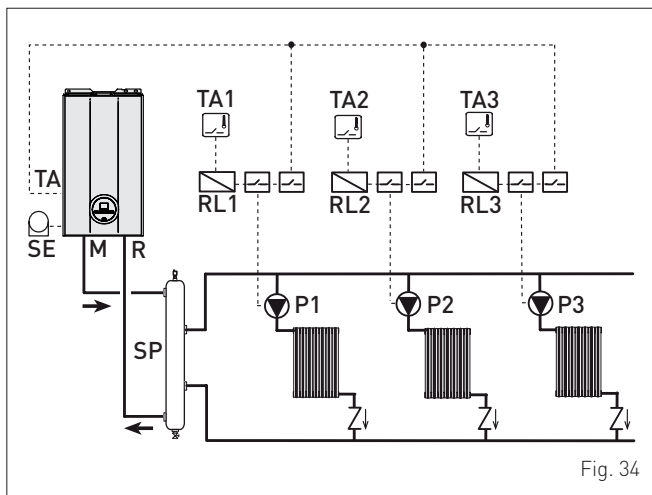

#### MULTI ZONE system - with zone valve, air thermostat and external sensor.

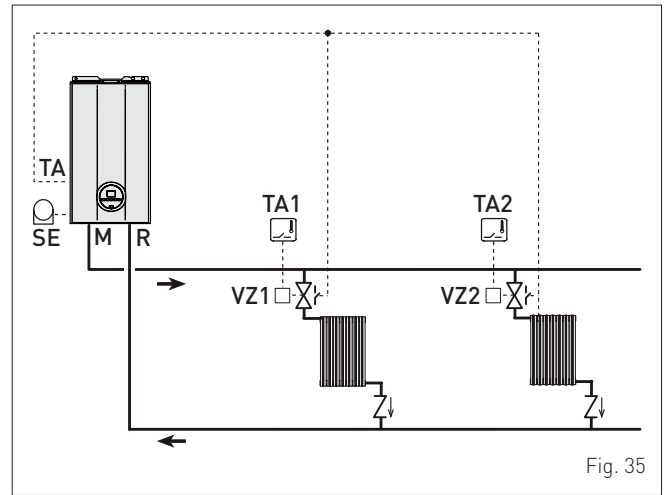


#### CAUTION

Set the parameter "tS 17 = DELAY SYSTEM PUMP ACTIVATION" to allow the opening of zone valve Vz.

## 8.14 Refilling or emptying


Before carrying out the operations described below, make sure that the main system switch is set to "ON" in order for the display to show the pressure level in the system during refilling. **Make sure that the operating mode is set to "Stand-by"**; if this is not the case, press the button for at least 1 second until this mode has been selected.

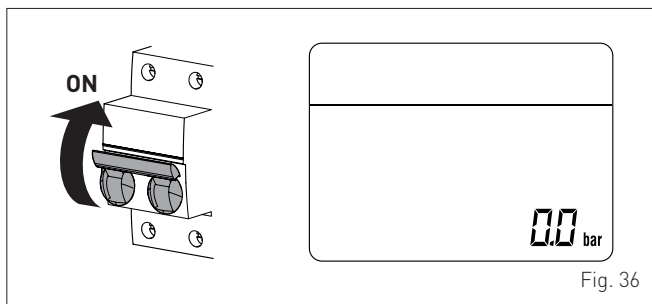

### 8.14.1 REFILL operations

#### Remove the front panel:

- disassemble the smoke outlet duct of the **Brava Slim HE 40 e**
- remove the two screws (1), pull the front panel (2) forwards and release it from the top by lifting it.

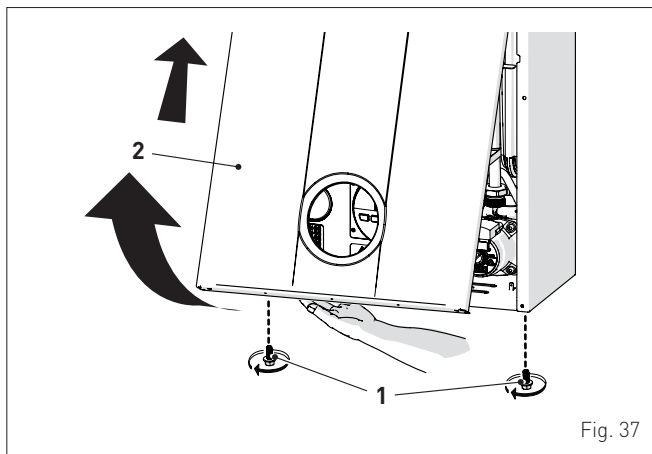


#### Domestic hot water circuit:

- open the isolation valves of the domestic hot water circuit (if present)
- open one or more than one hot water valve to fill and bleed the domestic hot water circuit
- once bleeding has been completed, close the hot water valves.

#### Heating circuit:

- open the isolation and air bleeding valves in the highest points of the system
- loosen the automatic bleed valve (3)
- open the isolation valves of the heating circuit (if present)
- Open the filling valve, which should be on the system return
- Fill until the water overflows from the air bleeding valves and shut off the valves again
- Continue filling until the pressure reaches **1-1.2 bar** (100-120 kPa) as shown on the display
- close the filling valve
- check that there is no air in the system by bleeding all the radiators and the circuit on the high points of the system
- remove the front plug (6) of the pump and use a screwdriver to check that the impeller is not blocked
- replace the plug (6)

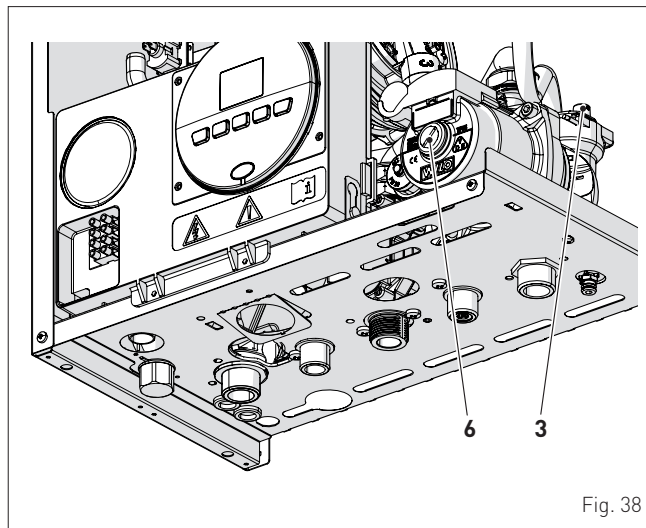

**NOTE:** to completely remove all air from the system, it is recommended that this operation is repeated a number of times.

- check the pressure on the display and if necessary top up until the correct pressure reading appears
- close the automatic bleed valve (3)
- fill the siphon disconnecting it from the pipe or using (by means of) the smoke take-off point.

Refit the front panel of the boiler hooking it on at the top, pushing it forwards and securing it with the screw (1) which was removed previously.

Fit the smoke outlet duct of the **Brava Slim HE 40 e**.


### 8.14.2 EMPTYING operations

#### Domestic hot water circuit:

- close the domestic hot water circuit isolation valve (prearranged in installation)
- open one or more than one hot water valve to fill and bleed the domestic hot water circuit.

#### Boiler:

- loosen the automatic bleed valve (3)
- close the heating circuit isolation valves
- check that the filling valve is closed
- connect a rubber hose to the boiler drain valve (7) and open it
- when it has fully emptied, close the drain valve (7)
- close the automatic bleed valve (3).

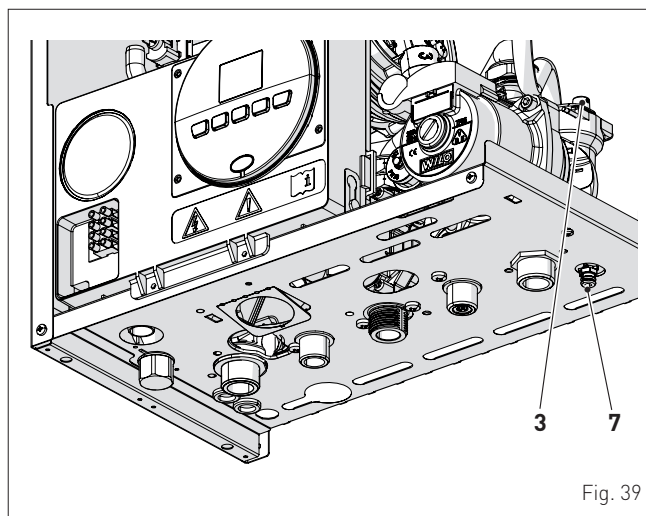

## 9 COMMISSIONING

### 9.1 Preliminary operations

Before commissioning the appliance, check that:

- the type of gas is correct for the appliance
- the gas isolation valves for the heating system and the water system are open
- the pump impeller rotates freely
- the siphon has been filled.

### 9.2 Before commissioning

After having carried out the preliminary operations, perform the following to start the boiler:

- set the main system switch to "ON"



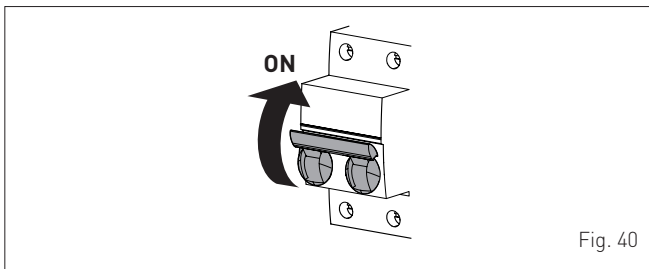


Fig. 40

- the type of gas for which the boiler has been calibrated, "nG" (methane) or "LG" (LPG,) will appear followed by the power. After this the correct representation of the symbols will be checked and finally "--" will appear on the display

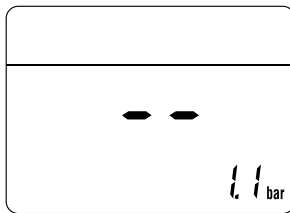


- check that the system pressure as shown on the pressure gauge when the system is cold, is between **1 and 1.2 bar (100 and 120 kPa)**
- press the button once for at least 1 second to select "SUMMER mode" ☀️. the value of the delivery sensor detected at that moment will appear on the display

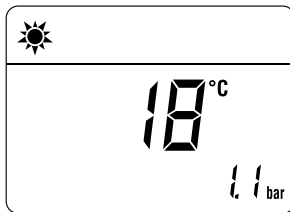

#### 9.2.1 Self-calibrating procedure

Carry out the "Automatic self-calibrating procedure" as follows:

- press button and set the DOMESTIC HOT WATER SET to maximum using the button **+**
- press and hold down the buttons **-** and **+** at the same time for approximately 10 seconds until the flashing symbols ☀️ and ❄️ appear on the display

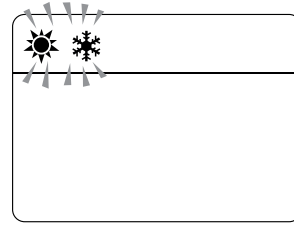


- as soon as the symbols begin to flash, release the buttons **-** and **+** and press the button , **within 3 seconds**
- the "Automatic self-calibrating procedure" starts
- **open one or more than one hot water tap**
- the values flash on the display: "100" (maximum value), followed by an "intermediate value" and finally "00" (minimum value)



The operator must wait for approximately 15 minutes for the "self-calibrating procedure" to end and the message "SUMMER mode" ☀️ to reappear on the display. Once the procedure has terminated:

- close the taps opened previously and check that the appliance shuts down.


if there is a fault, the message "ALL" will appear on the display, the fault code (eg. "06" - no flame detected) and the message **RESET**

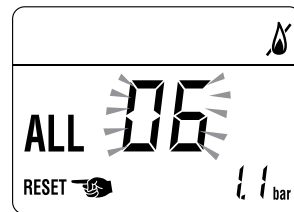

#### CAUTION

To restore the start conditions press and hold the button for more than 3 seconds. This operation can be performed up to a maximum of 6 times without the "self-calibrating procedure" being interrupted.

- press the button once for at least 1 second to select "WINTER mode" ❄️. The value of the heating water temperature detected at that moment will appear on the display

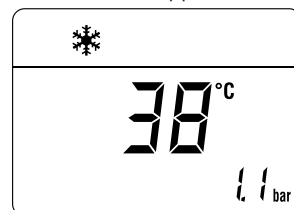


- adjust the air thermostat and check that the boiler starts and operates correctly
- carry out the procedure "Chimney sweeper function", to check the mains gas pressure, detect the combustion parameters and to measure the combustion efficiency required by legislation in force.


### 9.3 Parameter setting and display

To go into the parameter menu:

- from the selected mode (eg. WINTER)

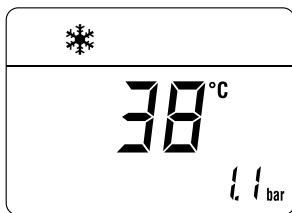


- press the buttons and (for approximately 5 seconds) at the same time until "PAR 01" (parameter number) and the value set (0÷4) appears on the display

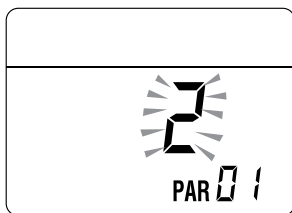


- press the button to scroll up the list of parameters and then to scroll down the list

**NOTE:** holding the buttons or increases the speed of the scrolling movement.

- once the required parameter has been reached, press the buttons or to modify the value within the permitted range. The modifications are stored automatically.

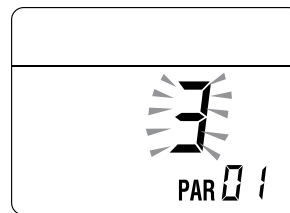

When all the parameter modifications have been made, exit the parameter menu by pressing and holding down the buttons and all at the same time for at least 5 seconds until the initial screen is displayed.

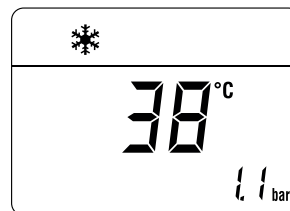


**NOTE:** In case of power failure all settings are stored.

### 9.4 List of parameters

Type	No.	Description	Range	U/M	Step	Default
<b>CONFIGURATION</b>						
PAR	01	Index showing boiler power in kW 1 = 25; 2 = 30; 3 = 35; 4 = 40	1 .. 4	-	1	4
PAR	02	Hydraulic configuration 0 = rapid 1 = storage tank with thermostat or heating only 2 = hot water tank with sensor 3 = bithermic 4=instant with solar power input 5 = open vent 6 = boiler with heat pump	0 .. 6	-	1	0
PAR	03	Gas Type Configuration 0 = NATURAL GAS; 1 = UNIVERSAL LPG	0 .. 1	-	1	0
PAR	04	Combustion configuration 0 = sealed chamber with combustion control	-	-	-	0
PAR	08	External sensor value correction	-5 .. +5	°C	1	0
PAR	09	Ignition fan speed	80 .. 160	RPMx25	1	128
<b>DOMESTIC HOT WATER - HEATING</b>						
PAR	10	Boiler Antifreeze Threshold	0 .. +10	°C	1	3
PAR	11	External Sensor Antifreeze Threshold -- = Disabled	-9 .. +5	°C	1	-2
PAR	12	Heating Curve Incline	0 .. 80	-	1	20
PAR	13	Minimum Heating Temperature Adjustment	20 .. PAR 14	°C	1	20
PAR	14	Maximum Heating Temperature Adjustment	PAR 13 .. 80	°C	1	80
PAR	15	Maximum power heating	0 .. 100	%	1	100
PAR	16	Heating Post-Circulation Time	0 .. 99	seconds x 10	1	3
PAR	17	Heating Pump Activation Delay	0 .. 60	seconds x 10	1	0
PAR	18	Re-ignition Delay	0 .. 60	Min	1	3
PAR	19	Domestic Hot Water Modulation with Flow meter 0 = Disabled 1 = Enabled	0 .. 1	-	1	1
PAR	20	Maximum power domestic hot water	0 .. 100	%	1	100
PAR	21	Minimum power heating/domestic hot water (premixed)	0 .. 100	%	1	0
PAR	22	Domestic hot water preheating enabling 0 = OFF; 1 = ON	0 .. 1	-	1	0
PAR	23	External relay 1 function 0 = not used; 1 = remote alarm NO; 2 = remote alarm NC; 3 = zone valve; 4 = automatic filling; 5 = external request; 6 = recirculation pump; 7 = zone valve with OT; 8 = relaunch pump; 9 = boiler with heat pump (circulator)	0 .. 9	-	-	0

Type	No.	Description	Range	U/M	Step	Default
<b>CONFIGURATION</b>						
PAR	24	External relay 2 function 0 = not used; 1 = remote alarm NO; 2 = remote alarm NC; 3 = zone valve; 4 = automatic filling; 5 = external request; 6 = recirculation pump; 7 = zone valve with OT; 8 = relaunch pump; 9 = boiler with heat pump	0 .. 9	-	-	0
PAR	25	Auxiliary TA function 0 = according to TA 1 = TA Antifreeze 2 = domestic hot water disabled	0 .. 2	-	1	0
PAR	26	Zone Valve / Pump Relaunch Delay	0 .. 99	Min	1	1
PAR	28	DHW activation delay with solar power	0 .. 30	Min	1	0
PAR	29	Anti-legionella Function (Only hot water tank) -- = Disabled	50 .. 80	-	1	--
PAR	30	Maximum domestic hot water temperature	35 .. 67	°C	1	60
PAR	35	Digital / analogue Pressure switch 0 = water pressure switch 1 = water pressure transducer 2 = water pressure transducer (only pressure displayed)	0 .. 2	-	1	1
PAR	40	Modulating Pump Speed	-- = No modulation AU = Automatic 30 .. 100	%	10	AU
PAR	41	ΔT Modulating pump delivery/Return	10 .. 40	°C	1	20
PAR	42	Select heat pump or boiler convenience (only if PAR 02 = 6)	-20 .. 30	°C	1	5
PAR	43	Heat pump boiler aid activation delay (only if PAR 02 = 6)	1 .. 60	Min	1	3
PAR	47	System pump forcing (only in winter mode) 0 = Disabled 1 = Enabled	0 .. 1	-	1	0
<b>RESET</b>						
PAR	48	INST Parameter set to default	0 .. 1	-	-	0

In the event of a fault/malfunction the message "ALL" will appear on the display with the alarm number eg. "ALL 04" (Domestic Hot Water Sensor Fault).

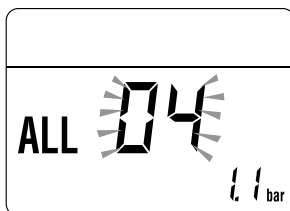

Before repairing the fault:

- disconnect the appliance from the mains power by setting the main switch to "OFF"

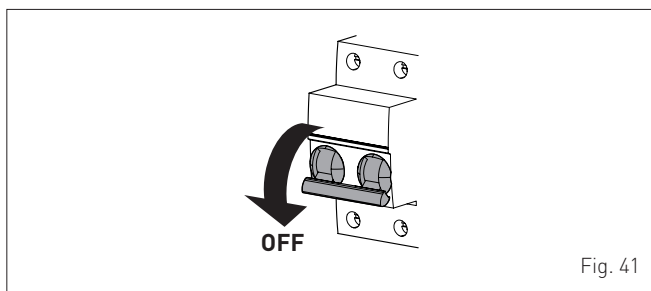


Fig. 41

- as a precautionary measure, close the gas isolation valve.


Repair the fault and start-up the boiler again.

**NOTE:** after having repaired the fault, when the alarm number appears on the display together with the message **RESET** (see figure), press the button **OR** for approximately 3 seconds to start the appliance up again.

## 9.5 Fault / malfunction codes


Type	No.	Description
ALL	02	Low water pressure in system
ALL	03	High water pressure in system
ALL	04	Domestic hot water sensor fault
ALL	05	Delivery sensor fault
ALL	06	No flame detection
ALL	07	Safety thermostat intervention
ALL	08	Fault in the flame detection circuit
ALL	09	No water circulating in the system
ALL	10	Auxiliary sensor fault
ALL	11	Gas valve modulator disconnected
ALL	12	Incorrect configuration of the open /sealed chamber
ALL	13	Smoke probe intervention
ALL	14	Smoke probe fault
ALL	15	Fan check cable disconnected
ALL	18	Condensate level fault
ALL	28	Maximum number of consecutive releases
ALL	30	Return sensor (SR) fault
ALL	37	Fault due to low network voltage
ALL	40	Incorrect network frequency detected
ALL	41	Flame loss more than 6 consecutive times
ALL	42	Button fault
ALL	43	Open Therm communication fault
ALL	44	No flame valve opening time sum anomaly

Type	No.	Description
ALL	62	Self-calibrating procedure is required
ALL	72	Incorrect positioning of the delivery sensor
ALL	77	EV2 SGV current max/min absolute limits error
ALL	78	EV2 SGV current upper limit error
ALL	79	EV2 SGV current lower limit error
ALL	80	Fault on the valve control logic line/valve cable damaged
ALL	81	Block due combustion during start-up
ALL	82	Block due to numerous combustion control failures
ALL	83	Irregular combustion (temporary error)
ALL	84	Flow rate reduced for (presumed) low pressure on mains gas
ALL	88	Internal error (board component protection)
ALL	89	Unstable combustion feedback signal error
ALL	90	Combustion set cannot be reached error
ALL	92	System has reached maximum air correction error (at the minimum flow rate)
ALL	93	Combustion set cannot be reached error
ALL	95	Flame signal micro interruptions error
ALL	96	Block due to clogging in smoke outlet
ALL	98	SW error, board start-up
ALL	99	General board error

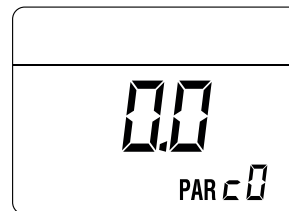

– Once in this section, proceed with button or .


When all the values have been displayed, exit the menu by pressing and holding down the button for approximately 5 seconds until the initial screen is displayed.

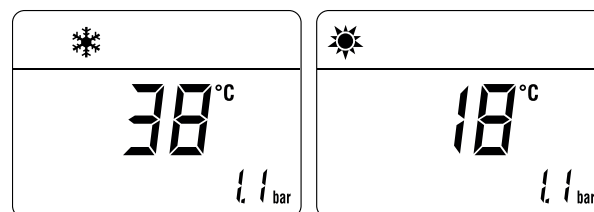


## 9.6 Display of operating data and counters

Once the boiler is operating a qualified technician can view the operating data and the counters as follows:

- from the operating screen in the mode enabled at that moment (WINTER or SUMMER )

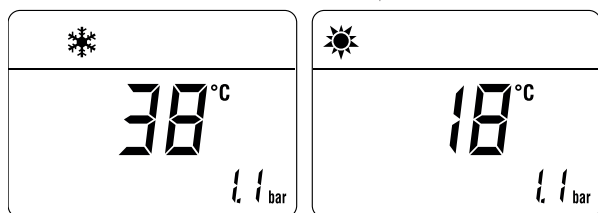


- go into “DISPLAY” by pressing the buttons and at the same time for more than 3 seconds until the following screen appears

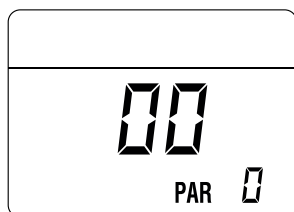

From this point, the technician has 2 options:

- scroll through the list of “information (PAR)” and “counters (PARc)” by pressing the button . Scrolling will be in sequence

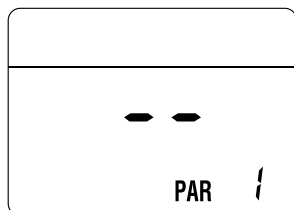

- display the “activated alarms” (no more than 10) by pressing the button

### TABLE OF INFORMATION DISPLAYED

Type	No.	Description	Range	U/M	Step
PAR	00	SW version			
PAR	01	External sensor	- 9 .. 99	°C	1
PAR	02	Delivery sensor temperature	- 9 .. 99	°C	1
PAR	03	Smoke probe	- 9 .. 99	°C	1
PAR	04	Domestic hot water sensor temperature	- 9 .. 99	°C	1
PAR	05	AUX auxiliary sensor	- 9 .. 99	°C	1
PAR	06	Actual heating SET temperature	Par. 13 ... Par. 14	°C	1
PAR	07	Power level	0 .. 99	%	1
PAR	08	Flow meter rate	0 .. 99	l/min	0.1
PAR	09	Water pressure transducer reading	0 .. 99	bar	0.1
PAR	10	Display of current fan revolutions	0 .. 99	RPM x 100	1

### TABLE OF COUNTER DISPLAYED

Type	No.	Description	Range	U/M	Step
PAR	c0	total no. of boiler operating hours	0 .. 99	h x 1000	0.1; from 0.0 to 9.9; 1; from 10 to 99
PAR	c1	total no. of burner operating hours	0 .. 99	h x 1000	0.1; from 0.0 to 9.9; 1; from 10 to 99
PAR	c2	total no. of burner ignitions	0 .. 99	h x 1000	0.1; from 0.0 to 9.9; 1; from 10 to 99
PAR	c3	total no. faults	0 .. 99	x 1	1
PAR	c4	total no. of times installer parameters "ALL" accessed	0 .. 99	x 1	1
PAR	c5	total no. of times OEM parameters accessed	0 .. 99	x 1	1
PAR	c6	time until next maintenance intervention	1 .. 199	months	1

## TABLE OF ACTIVATED ALARMS/FAULTS

Type	No.	Description
PAR	A0	Last activated alarm/fault
PAR	A1	Last but one activated alarm/fault
PAR	A2	Third from last activated alarm/fault
PAR	A3	Previous activated alarm/fault
PAR	A4	Previous activated alarm/fault
PAR	A5	Previous activated alarm/fault
PAR	A6	Previous activated alarm/fault
PAR	A7	Previous activated alarm/fault
PAR	A8	Previous activated alarm/fault
PAR	A9	Previous activated alarm/fault

## 9.7 Checks after commissioning

### 9.7.1 Chimney sweeper function

The chimney sweeper function is used by the qualified maintenance technician to check the mains gas pressure, detect the combustion parameters and to measure the combustion efficiency required by legislation in force.

This function lasts 15 minutes and is activated by proceeding as follows:

- disassemble the smoke outlet duct of the **Brava Slim HE 40 e**, if not already removed
- if the panel (2) has not already been removed, remove the two screws (1), pull the front panel (2) forwards and release it from the top by lifting it

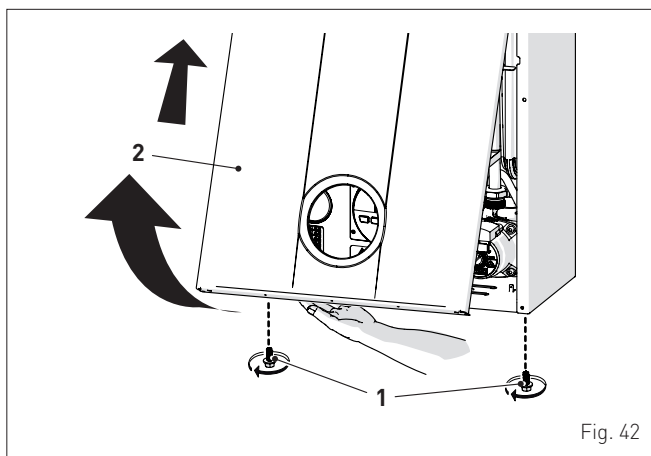


Fig. 42

- remove the screws (3) securing the control panel (4)
- move the panel (4) upwards (a) but keeping it in the side guides (5) to the end of travel
- bring it forwards and down (b) until it is horizontal

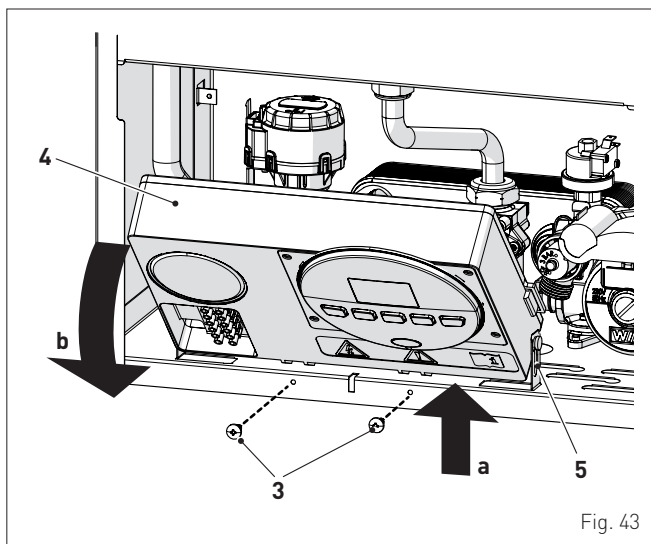


Fig. 43

- close the gas valve
- loosen the screw of the "mains pressure" point (6) and connect a pressure gauge

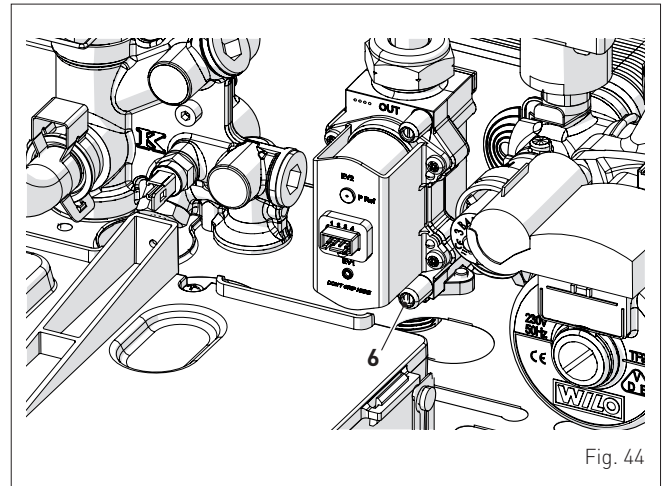


Fig. 44

- open the gas valve
- power the boiler by setting the main switch to "ON"



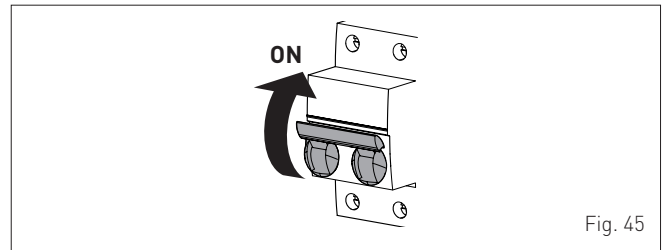


Fig. 45

- press the button **ON** for at least 1 second until "SUMMER" mode has been selected
- press and hold down the buttons **-** and **+** at the same time for approximately 10 seconds until the message "Hi" appears on the display together with the flashing symbols and

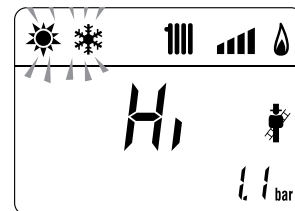


- press the button **+** to make the boiler operate at maximum power "Hi" and check that the mains gas pressure value on the pressure gauge is correct. Take a reading of the combustion data and measure the combustion efficiency.
- press the button **-** to make the boiler operate at minimum power "Lo". The message "Lo" will appear on the display together with the flashing symbols and

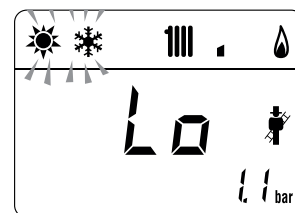



- take the combustion data reading
- press the button **OR** to exit the "Chimney sweeper Procedure". The boiler water delivery temperature will appear on the display

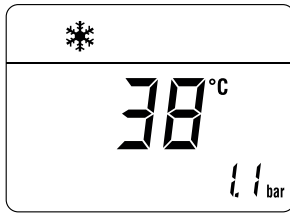

- disconnect the pressure gauge, carefully close the pressure point (6), put the control panel back to the original position and refit the front panel (2).


#### Gas supply pressure


Type of gas	NATURAL GAS	UNIVERSAL LPG
Pressure (mbar/kPa)	11.3/1.13	27.5/2.75

### 9.8 Domestic hot water comfort function (preheating)


**Brava Slim HE 40** models have a "domestic hot water comfort" function which ensures the best performance in terms of domestic hot water, reducing the time necessary for the hot water to become available and ensuring that the temperature is stable.


To activate the function:

- select parameter "**PAR 22**" (see "**Parameter setting and display**") and set it to **1**
- exit parameter settings and press button **+** for approximately 5 seconds until the symbol  and **RESET** appears on the display and begins to flash indicating that the function has been activated.

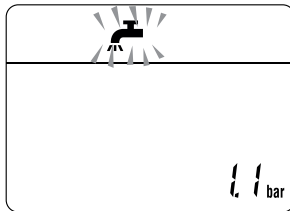

To deactivate the function:

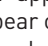- press button **+** again for approximately 5 seconds until the symbols  and **RESET** appear on the display and begin to flash indicating that the function has been deactivated.

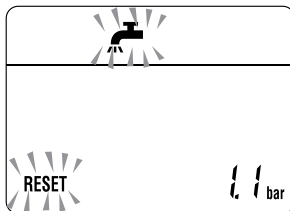

### 9.9 Gas conversion

**Brava Slim HE 40** models can work with NATURAL GAS or UNIVERSAL LPG without the need for any mechanical conversion. Select parameter "**PAR 03**" (see "**Parameter setting and display**") and set the type of gas to be used.

If changing the type of gas to be used, carry out the entire appliance "**COMMISSIONING**" phase.



## 10 MAINTENANCE

### 10.1 Adjustments

For the appliance to operate correctly and efficiently it is recommended that the User calls upon the services of a Professionally Qualified Technician to carry out **BI-ANNUAL** maintenance.



#### CAUTION


The maintenance interventions described must **ONLY** be carried out the professionally qualified personnel.



#### WARNING

Before carrying out any interventions described:

- set the main system switch to "OFF"
- close the gas valve
- make sure that no hot parts inside the appliance are touched.

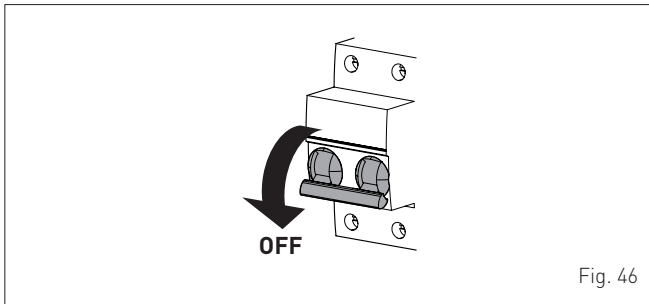

### 10.2 External cleaning

#### 10.2.1 Cleaning the cladding

When cleaning the cladding, use a cloth dampened with soap and water or alcohol for stubborn marks.



#### IT IS FORBIDDEN


to use abrasive products.

### 10.3 Cleaning the inside of the appliance


#### 10.3.1 Removing components

To access the internal parts of the boiler:

- disassemble the smoke outlet duct of the **Brava Slim HE 40 e**
- remove the screws (1), pull the front panel (2) forwards and release it from the top by lifting it

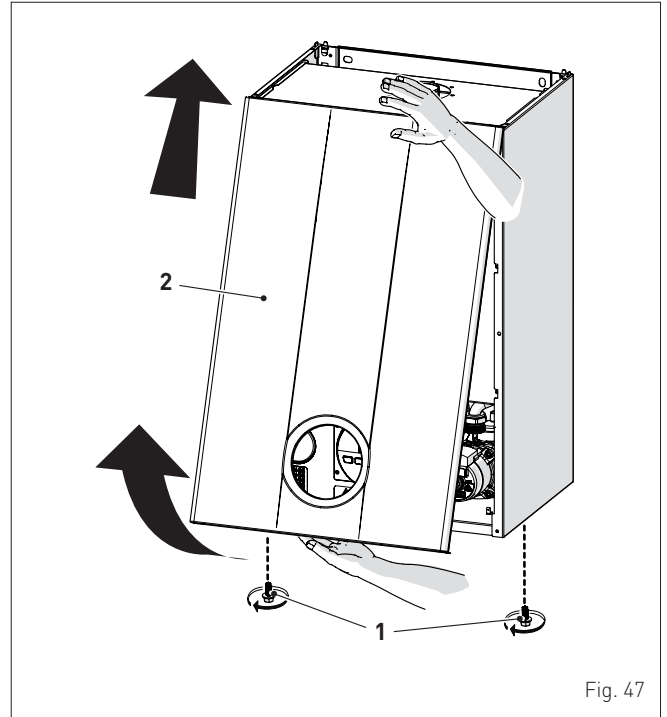

- remove the screws (3) securing the control panel (4)
- move the panel (4) upwards (a) but keeping it in the side guides (5) to the end of travel
- bring it forwards and down (b) until it is horizontal

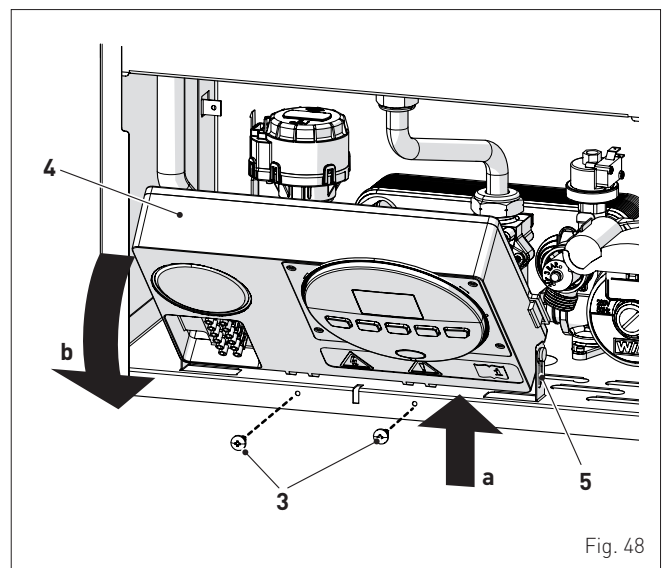

- loosen the clips (6) and extract the air inlet pipe (7)
- unscrew the swivel joint (8)
- extract the connectors (9) from the fan and disconnect the electrode cable (10)

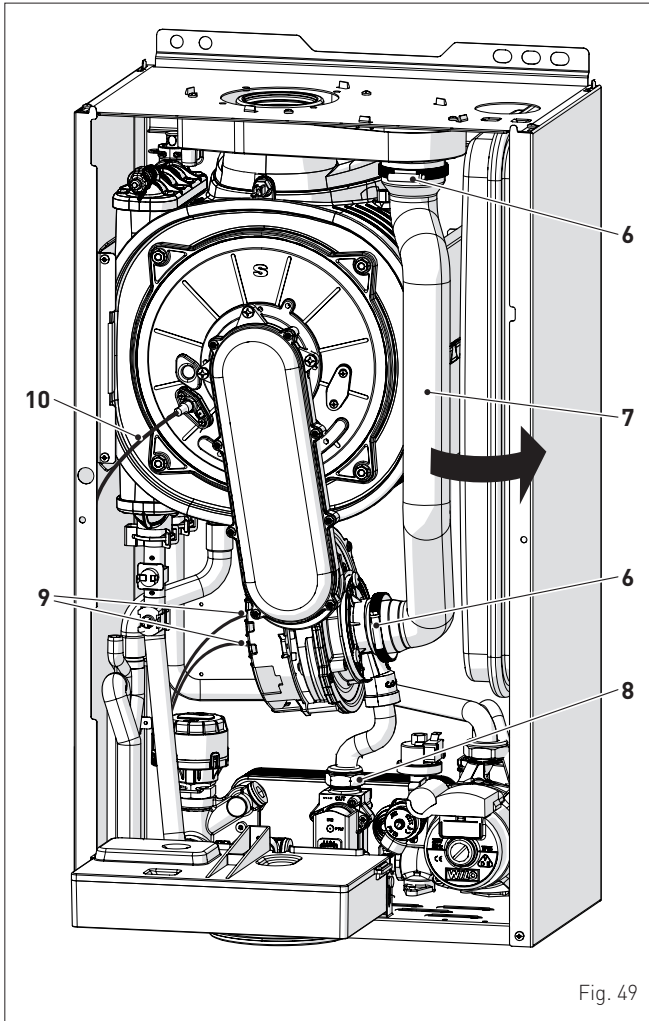


Fig. 49

- Unscrew the four nuts (11) securing the combustion chamber door (12)
- pull the fan-sleeve-door assembly (13) forwards and remove it.

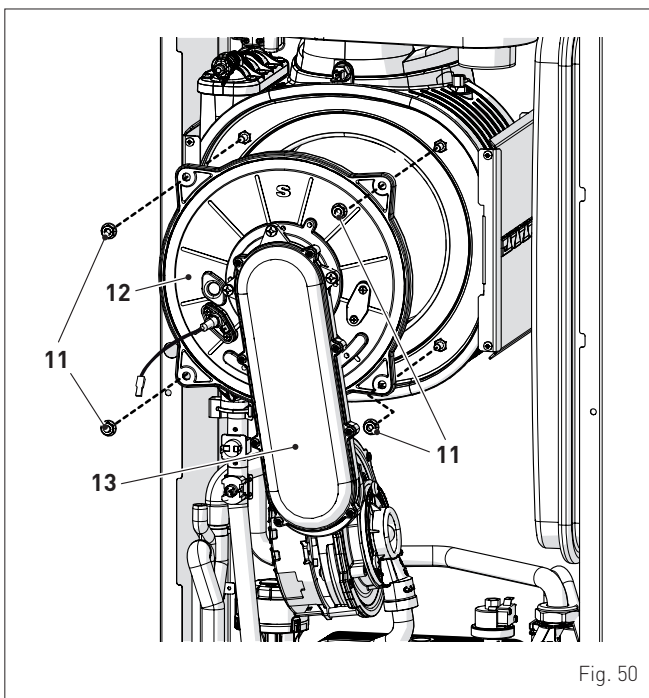


Fig. 50



### CAUTION

Work carefully when removing the assembly (13) to prevent any damage occurring to the internal insulation of the combustion chamber and the door seal.

For more details refer to the drawings in the spare parts catalogue.

### 10.3.2 Cleaning the burner and the combustion chamber

The combustion chamber and the burner do not require any particular maintenance. Simply brush them with a soft brush.

### 10.3.3 Checking the ignition/detection electrode

Check the state of the ignition/detection electrode and replace if necessary. Check the measurements as per the drawing whether the ignition/detection electrode is replaced or not.

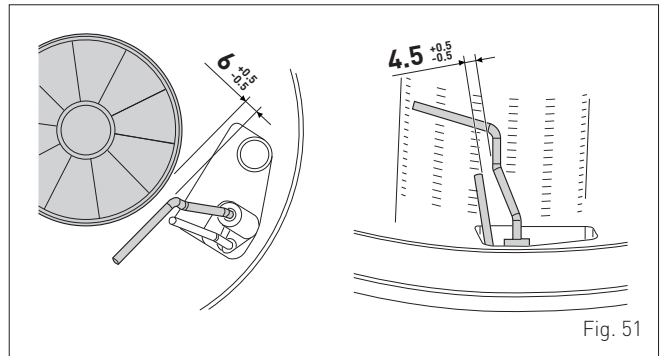


Fig. 51

### 10.3.4 Final operations

After having cleaned the combustion chamber and the burner:

- remove any carbon residue
- check that the seal and the insulation of the door (12) to the combustion chamber are integral. Replace if necessary
- refit the assembly by carrying out the same operations for removal but in the reverse order and tighten the screws (11) of the door to the combustion chamber
- reconnect the connections to the fan and the electrode.

## 10.4 Checks

### 10.4.1 Checking the smoke duct

It is recommended that the user checks that the combustion air inlet duct and smoke outlet duct are integral and airtight.

### 10.4.2 Checking the expansion vessel pressure

It is recommended that the expansion vessel on the water side is drained and that the prefilling pressure is not less than **1 bar (100 kPa)**. If this is not the case, pressurize it to the correct value (see section **Expansion vessel**).

Once the checks described above have been completed:

- refill the boiler as described in section **"REFILL operations"**
- check that the siphon has been filled correctly
- Start the boiler, activate the **"Chimney sweeper function"** and carry out a smoke analysis and/or measure the combustion efficiency
- refit the front panel securing it with the two screws which were removed previously.

## 10.5 Unscheduled maintenance

If replacing the **electronic board**, the user **MUST** set the parameters as indicated in the table.

Type	No.	Description	Setting for Brava Slim HE 40	
			40 i	40 e
PAR	01	Index showing boiler power in kW 1 = 25; 2 = 30; 3 = 35; 4 = 40	4	
PAR	02	Hydraulic configuration 0 = rapid 1 = storage tank with thermostat or heating only 2 = hot water tank with sensor 3 = bithermic 4=instant with solar power input 5 = open vent 6 = boiler with heat pump	0	
PAR	03	Gas Type Configuration 0 = NATURAL GAS; 1 = UNIVERSAL LPG	0 or 1	

To enter "**Parameter setting and display**" refer to the indications provided in the specific section.

Once the parameters in the table have been set, you must carry out the entire phase of "**Self-calibrating procedure**" described in the specific section.

If the **gas valve** and/or the **ignition/detection electrode**, and/or the **burner**, and/or the **fan** are replaced, the user must still carry out the entire phase of "**Self-calibrating procedure**" described in the specific section.

## 10.6 Possible faults and solutions

### LIST OF MALFUNCTION/FAULT ALARMS


Type	No.	Fault	Solution
ALL	02	Low water pressure in system	- Restore pressure - Check for any leaks in the system
ALL	03	High water pressure in system	- Empty the system via the drain valve on the hydraulic assembly and bring the pressure to approximately 1.2 bar (120 kPa)
ALL	04	Domestic hot water sensor fault	- Check connections - Replace the sensor
ALL	05	Delivery sensor fault	- Check connections - Replace the sensor
ALL	06	No flame detection	- Check the integrity of the electrode and check that it is not grounded - Check gas availability and pressure - Check the integrity of the gas valve and the card
ALL	07	Sensor or safety thermostat intervenes	- Check the sensor or thermostat connections - Deaerate the system - Check the bleed valve - Replace the sensor or the thermostat - Check that the pump impeller is not blocked
ALL	08	Fault in the flame detection circuit	- Check the integrity of the electrode and check that it is not grounded - Check gas availability and pressure - Check the integrity of the gas valve and the card
ALL	09	No water circulating in the system	- Check the rotation of the pump rotor - Check the electrical connections - Replace the pump

Type	No.	Fault	Solution
ALL	10	Auxiliary sensor fault	- Check PAR 02 "hydraulic configuration" - Check the electrical connection
ALL	11	Gas valve modulator disconnected	- Check the electrical connection
ALL	12	Incorrect configuration of the open /sealed chamber	- Set the parameter PAR 04 (Combustion configuration) to 0
ALL	13	Smoke probe intervention	- Replace the smoke probe - Contact the Technical Assistance Centre
ALL	14	Smoke probe fault	- Replace the smoke probe - Check the electrical connection of the smoke probe, if the problem is not resolved, contact the Assistance Centre
ALL	15	Fan check cable disconnected	- Check the connection cable between the fan and the board
ALL	18	Condensate level fault	- Check for any clogging in the pipe which takes the condensate to the siphon - Check that the siphon is not clogged
ALL	28	Maximum number of consecutive resets reached	- Contact the Technical Assistance Centre
ALL	30	Return sensor (SR) fault	- Replace the return probe - Contact the Technical Assistance Centre
ALL	37	Fault due to low network voltage.	- Check with tester - Contact network provider (ENEL)
ALL	40	Incorrect network frequency detected	- Contact network provider (ENEL)
ALL	41	Flame loss more than 6 consecutive times	- Check the detection electrode - Check the gas supply (open valve) - Check mains gas pressure
ALL	42	Button fault	- Check that buttons are working
ALL	43	Open Therm communication fault	- Check the electrical connection of the remote control
ALL	62	Self-calibrating procedure is required	- Carry out the self-calibrating procedure (see the specific section)
ALL	72	Incorrect positioning of the delivery sensor	- Check that the delivery sensor is attached to the delivery pipe
ALL	77	EV2 SGV current max/min absolute limits error	- Contact the Technical Assistance Centre
ALL	78	EV2 SGV current upper limit error	- Contact the Technical Assistance Centre
ALL	79	EV2 SGV current lower limit error	- Contact the Technical Assistance Centre
ALL	80	Fault on the valve control logic line/ valve cable damaged	- Check the valve cable - Contact the Technical Assistance Centre
ALL	81	Block due to combustion during start-up	- Check for blockage in chimney - Bleed the air from the gas circuit
ALL	82	Block due to numerous combustion control failures	- Check electrode - Check outlets
ALL	83	Irregular combustion (temporary error)	- Check for blockage in chimney
ALL	84	Flow rate reduced for (presumed) low pressure on mains gas	- Check gas flow rate

Type	No.	Fault	Solution
ALL	88	Internal error (board component protection)	- Contact the Technical Assistance Centre
ALL	89	Unstable combustion feedback signal error	- Contact the Technical Assistance Centre
ALL	90	Combustion set cannot be reached error	- Contact the Technical Assistance Centre
ALL	92	System has reached maximum air correction error (at the minimum flow rate)	- Contact the Technical Assistance Centre
ALL	93	Combustion set cannot be reached error	- Contact the Technical Assistance Centre
ALL	95	Flame signal micro interruptions error	- Contact the Technical Assistance Centre
ALL	96	Block due to clogging in smoke outlet	- Check for blockage in chimney
ALL	98	SW error, board start-up	- Contact the Technical Assistance Centre
ALL	99	General board error	- Contact the Technical Assistance Centre
-	-	Frequent relief valve intervention	- Check circuit pressure - Check expansion vessel
-	-	Limited production of domestic hot water	- Check the diverter valve - Check that plate heat exchanger is clean - Check domestic hot water circuit valve


## 11 COMMISSIONING BOILER CHECKLIST

A suggested method of commissioning the boiler; the actual method can vary according to the boiler make, type and installation. The boiler must always be installed and commissioned by an approved gas technician. The installer certifies that this Boiler has been installed to the manufacturer's instructions, has been filled, commissioned and is ready for use.


N°	Description	 When done
1	Read carefully the instruction manuals supplied with this boiler.	
2	BEFORE INSTALLING THIS BOILER FLUSH OUT THE PIPES UNTIL CLEAN WATER IS ACHIEVED.	
3	Turn off all services to this boiler - water, gas and power. Install the boiler as shown in the instructions following and connect all services.	
4	Turn on water to fill system, check for leaks regularly and bleed air from all points. Bleed the air from all the pumps in the system, and rotate the impeller shaft.	
5	Check that all radiators valves are open, remove the thermostatic valve heads, fully open all lockshield valves.	
6	Turn ON gas, bleed air out at the isolation valve union. Reseal and check for gas leaks. Turn gas OFF.	
7	Turn electricity on at the power point. At the boiler front panel set the temperature setting to the lowest setting, switch boiler to ON position. The "Power on" Indicator should light. Turn the boiler off at the front panel.	
8	Turn the room thermostat to the manual ON position set the temperature to a high level so that it does not switch off during the commissioning phase. The thermostat will unusually click and show an indicator in the window.	
9	Switch the boiler ON at the boiler front panel control.	
10	Boiler should start fan, pump and ignite gas. If it fails first few times this may be just residual air in the gas line. A noisy water pump indicates there is air in the water pipes.	
11	Boiler lights and heats the water. Check gas flame is the correct colour and for gas and water leaks as the system heats up.	
12	Check that heat is going to all radiators through the manual or thermostatic first and return via the lockshield valve. If not STOP fix NOW and any leaks.	
13	Allow the boiler to heat up to the set temperature and switch off. Re-adjust the boiler temperature to a mid temperature point. CAUTION, If this is connected to a floor heating system. The boiler should re light and increase the water temperature to the new setting.	
14	Check that all radiators are hot all the way up. If the radiator is cold at the top, then there is usually air in the radiator Bleed the radiator. Balance the system so that all radiators are hot as according to the radiator installation manual. Adjust the boiler water temperature.	
15	Set the room thermostat to the correct times and temperatures according to the manufacture's instructions.	
16	On completion of the commissioning phase, complete the information sheet at the front of this manual. Hand over the installation to the owner and demonstrate how the system works plus basic fault resolution and safety procedures. Make sure that this important document is kept in a safe accessible place.	

# 12 EXPLODED VIEWS


Brava Slim HE 40 i

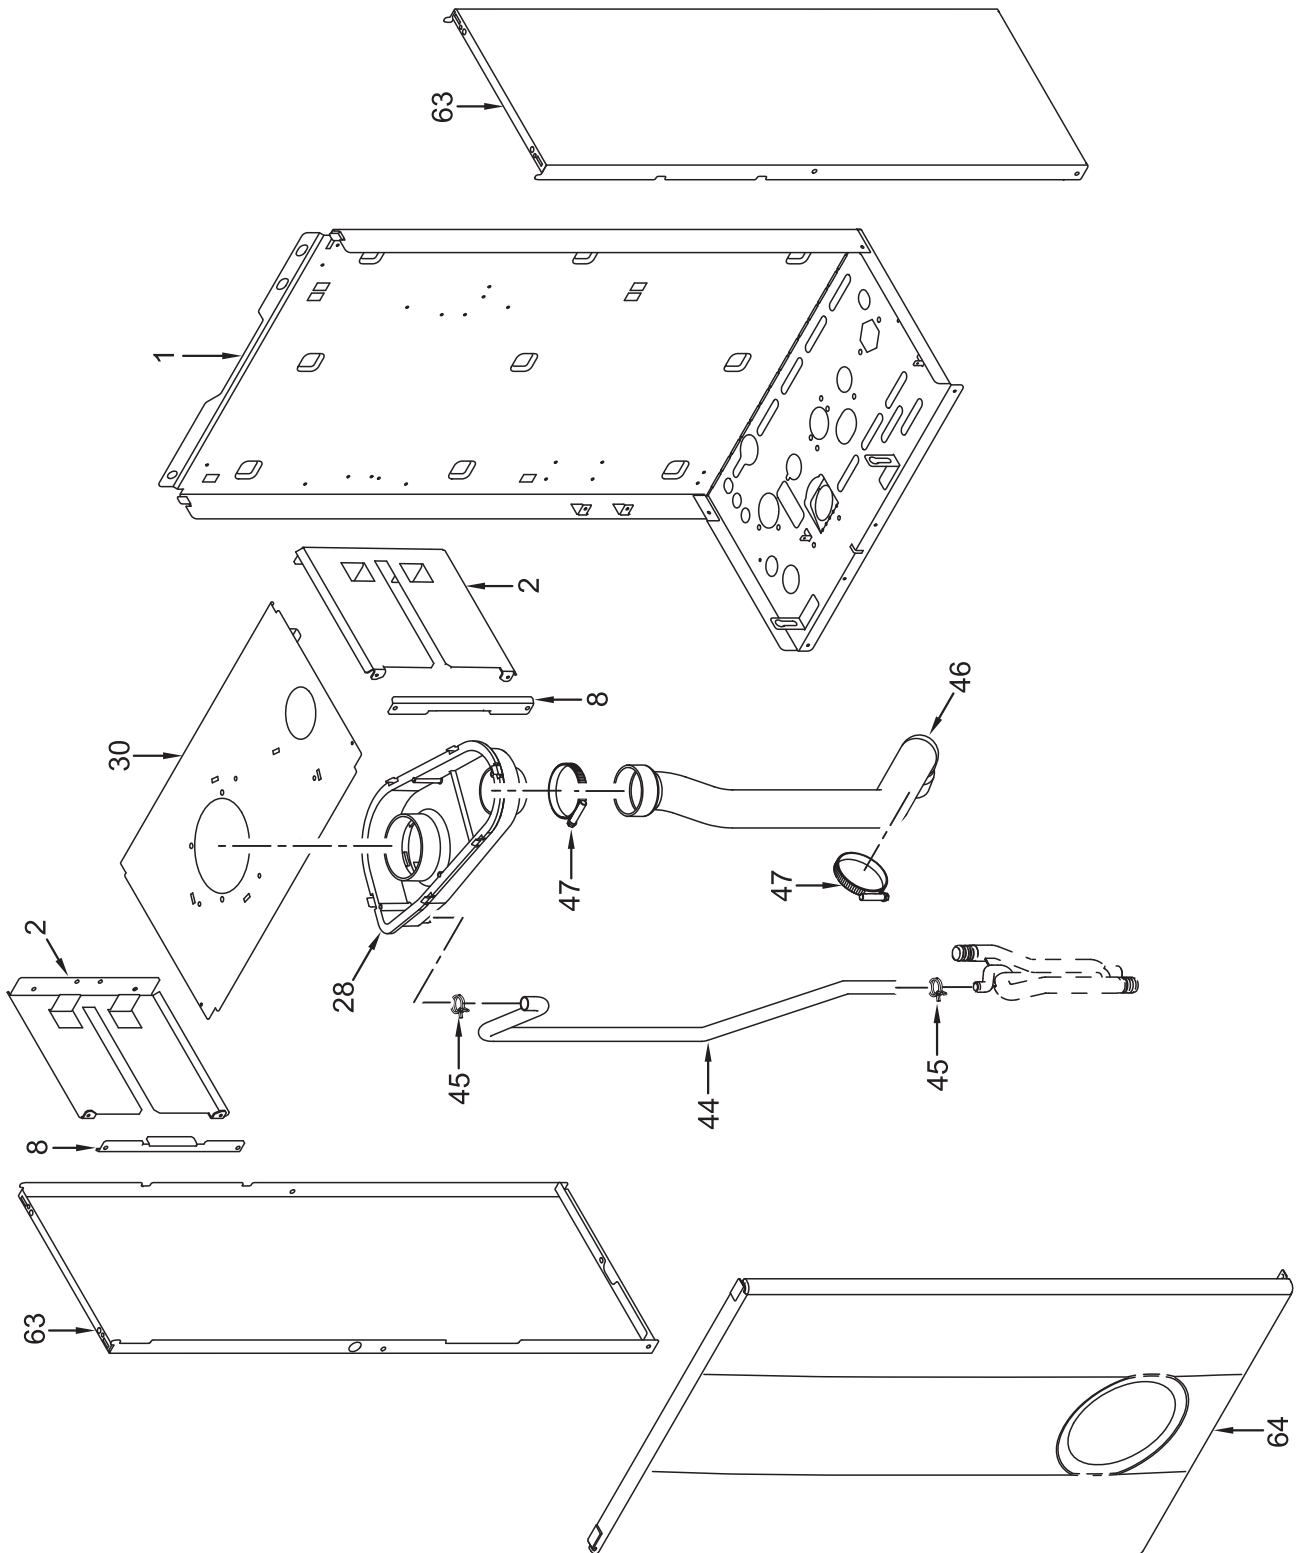

Brava Slim HE 40 e

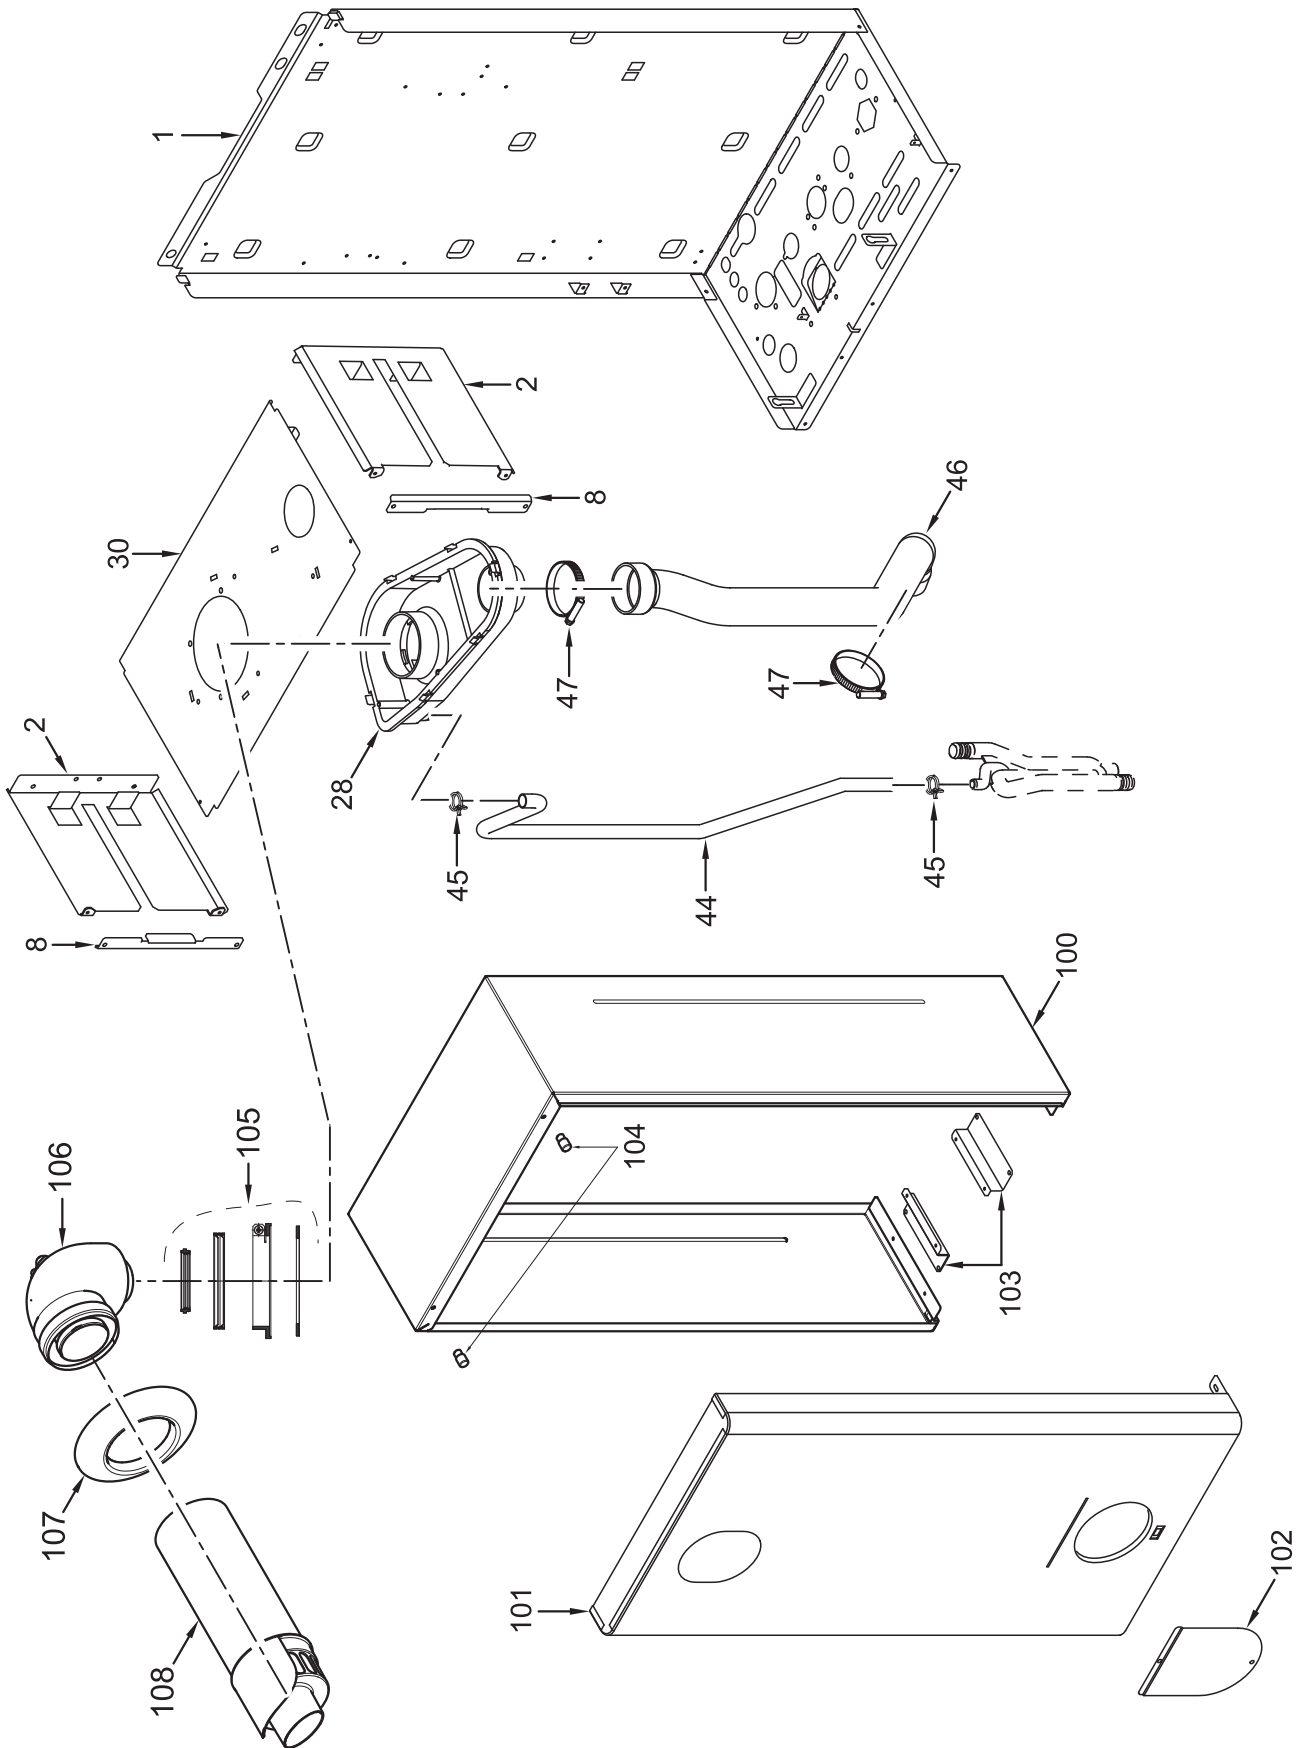


Brava Slim HE 40 i - Brava Slim HE 40 e

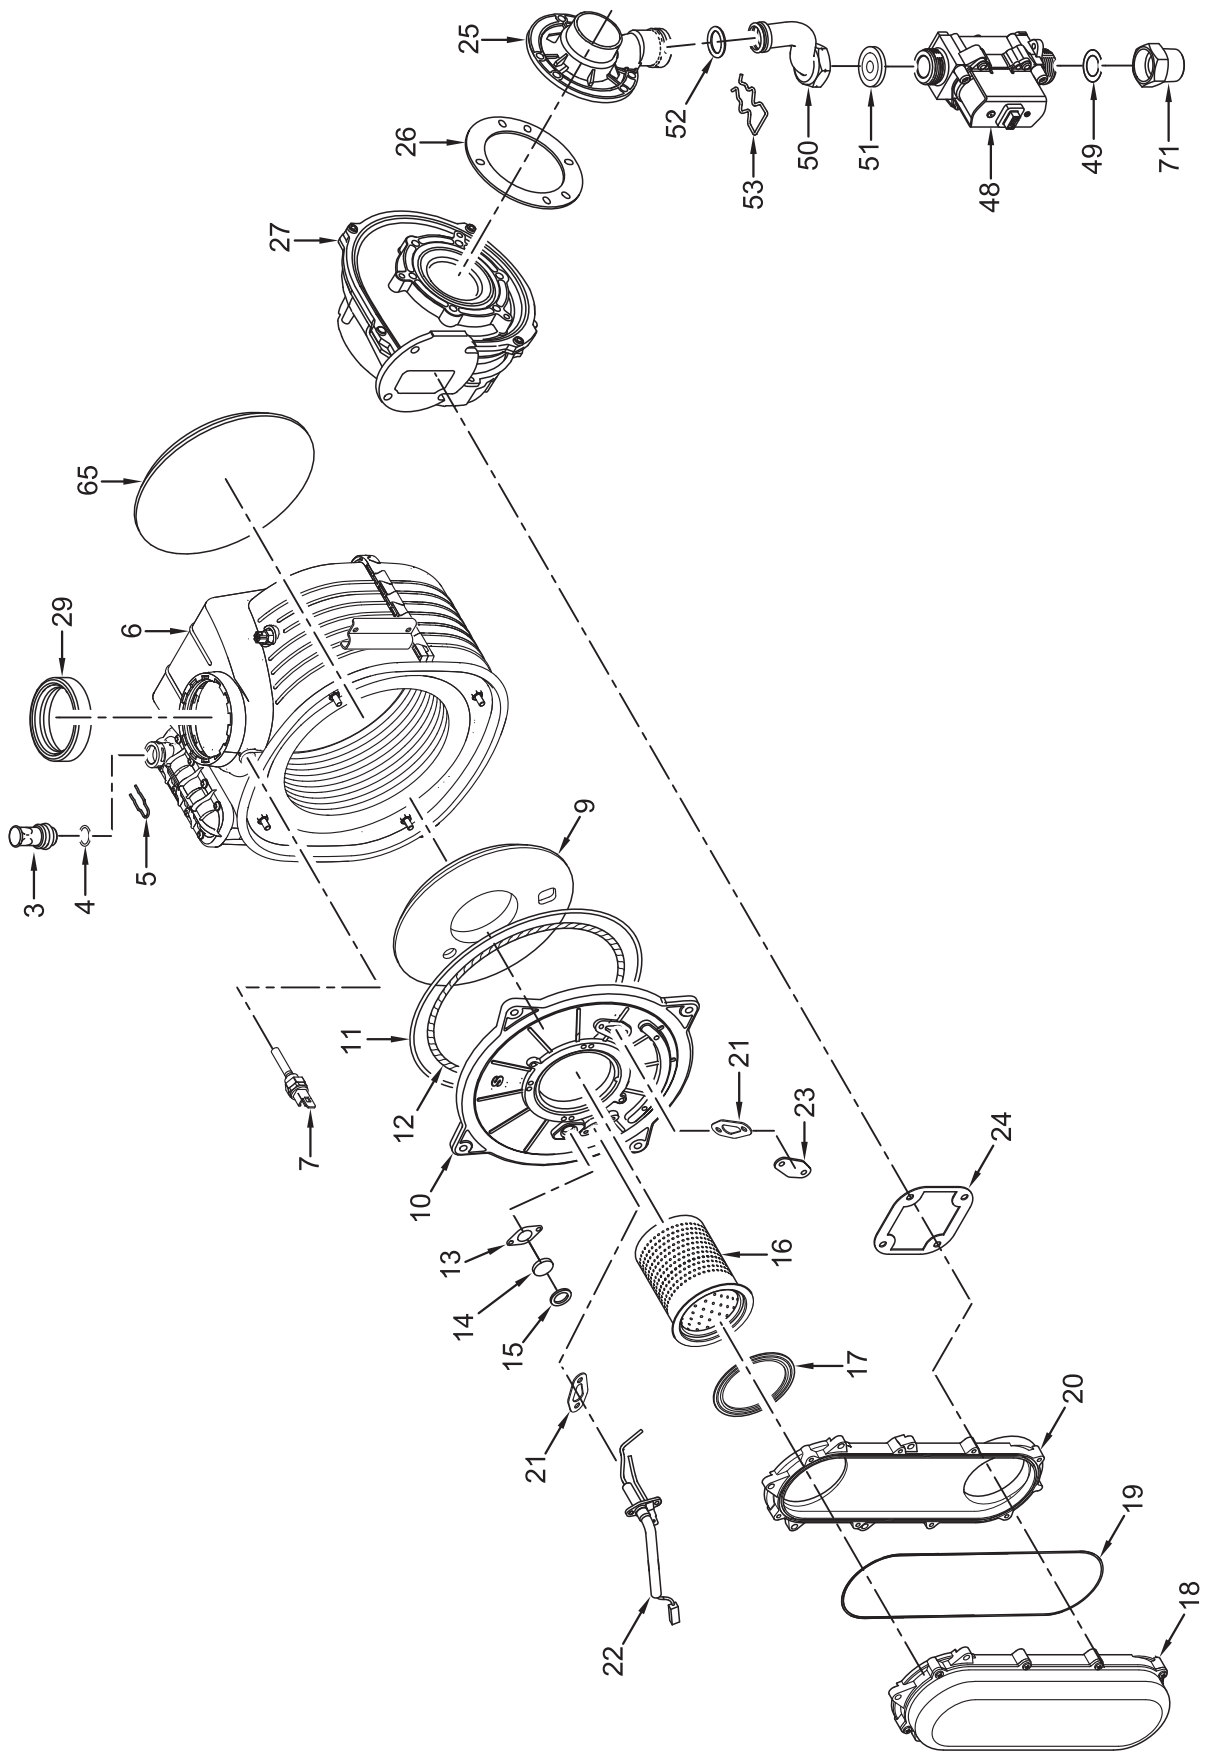




Brava Slim HE 40 i - Brava Slim HE 40 e

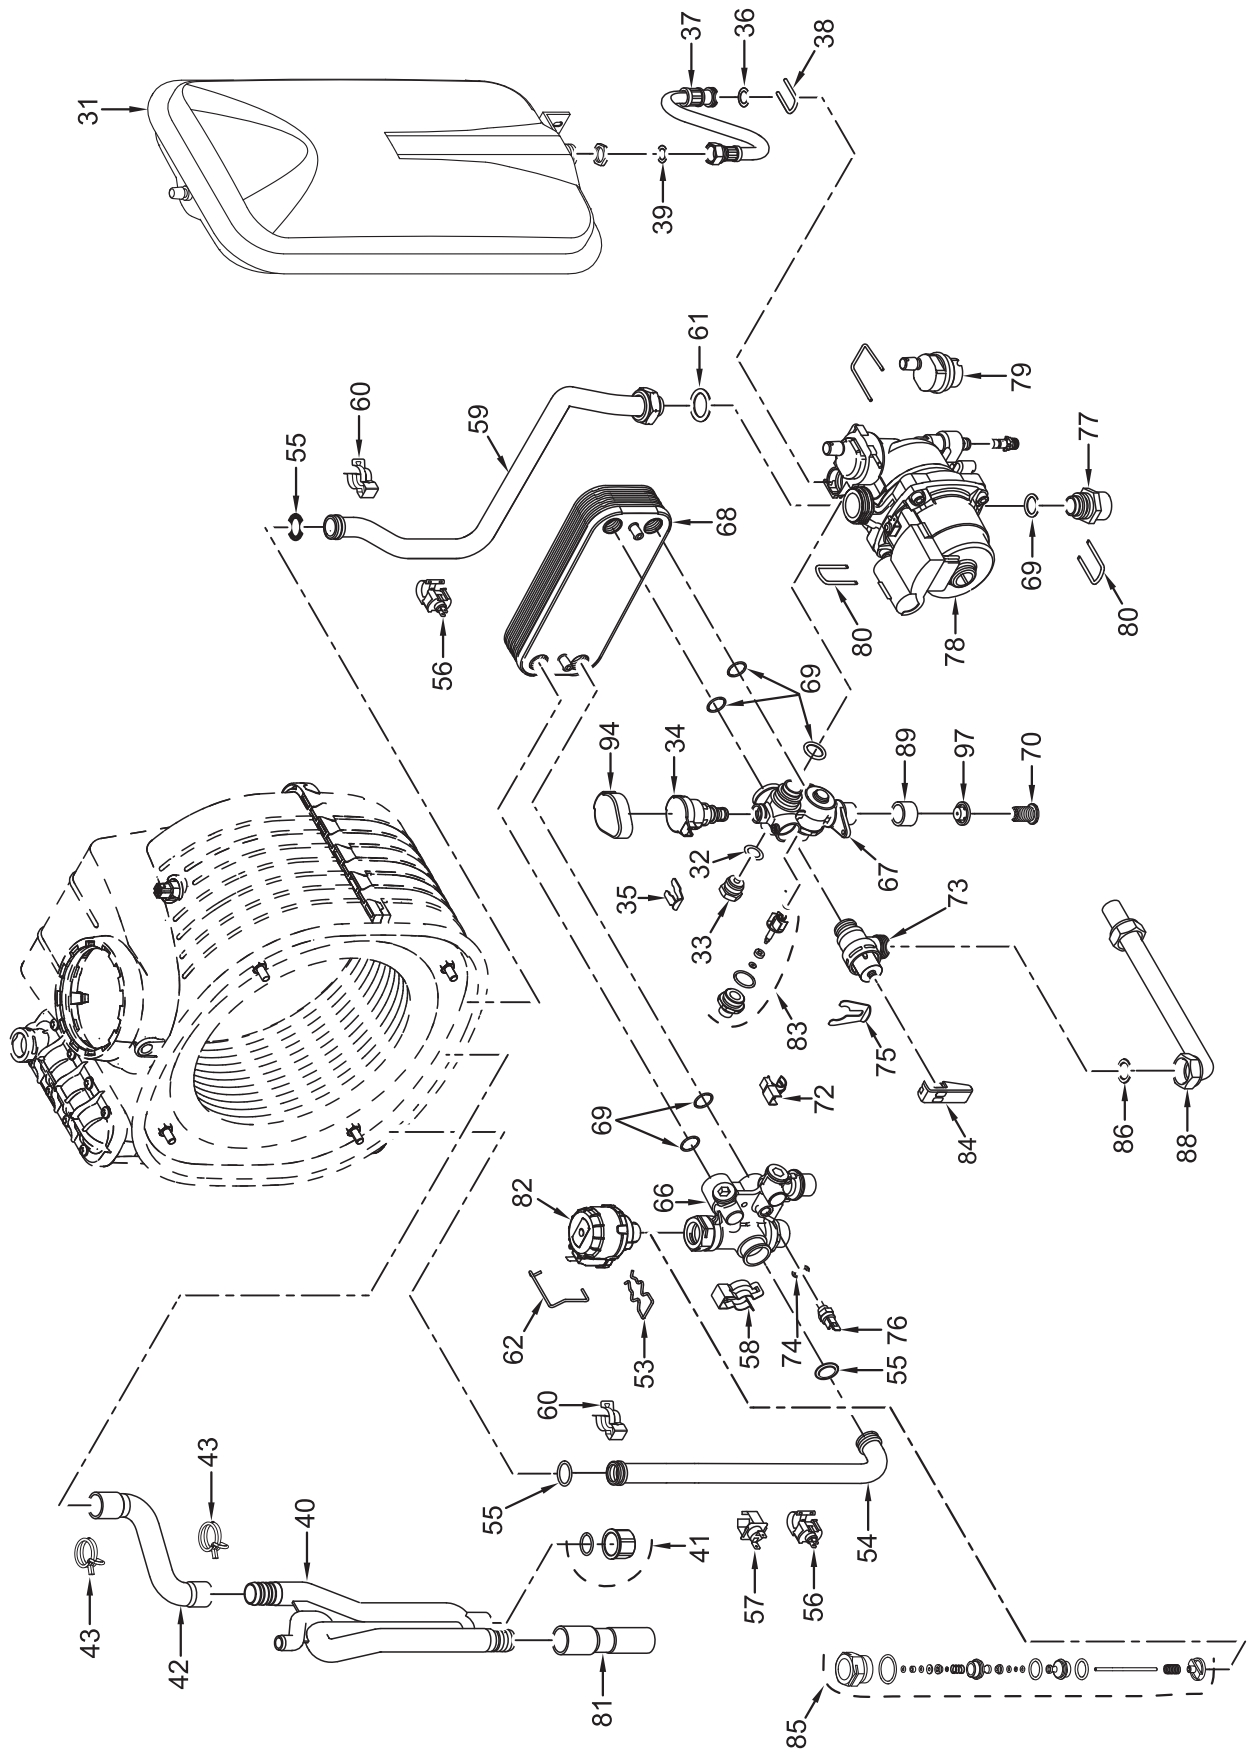

Brava Slim HE 40 i - Brava Slim HE 40 e

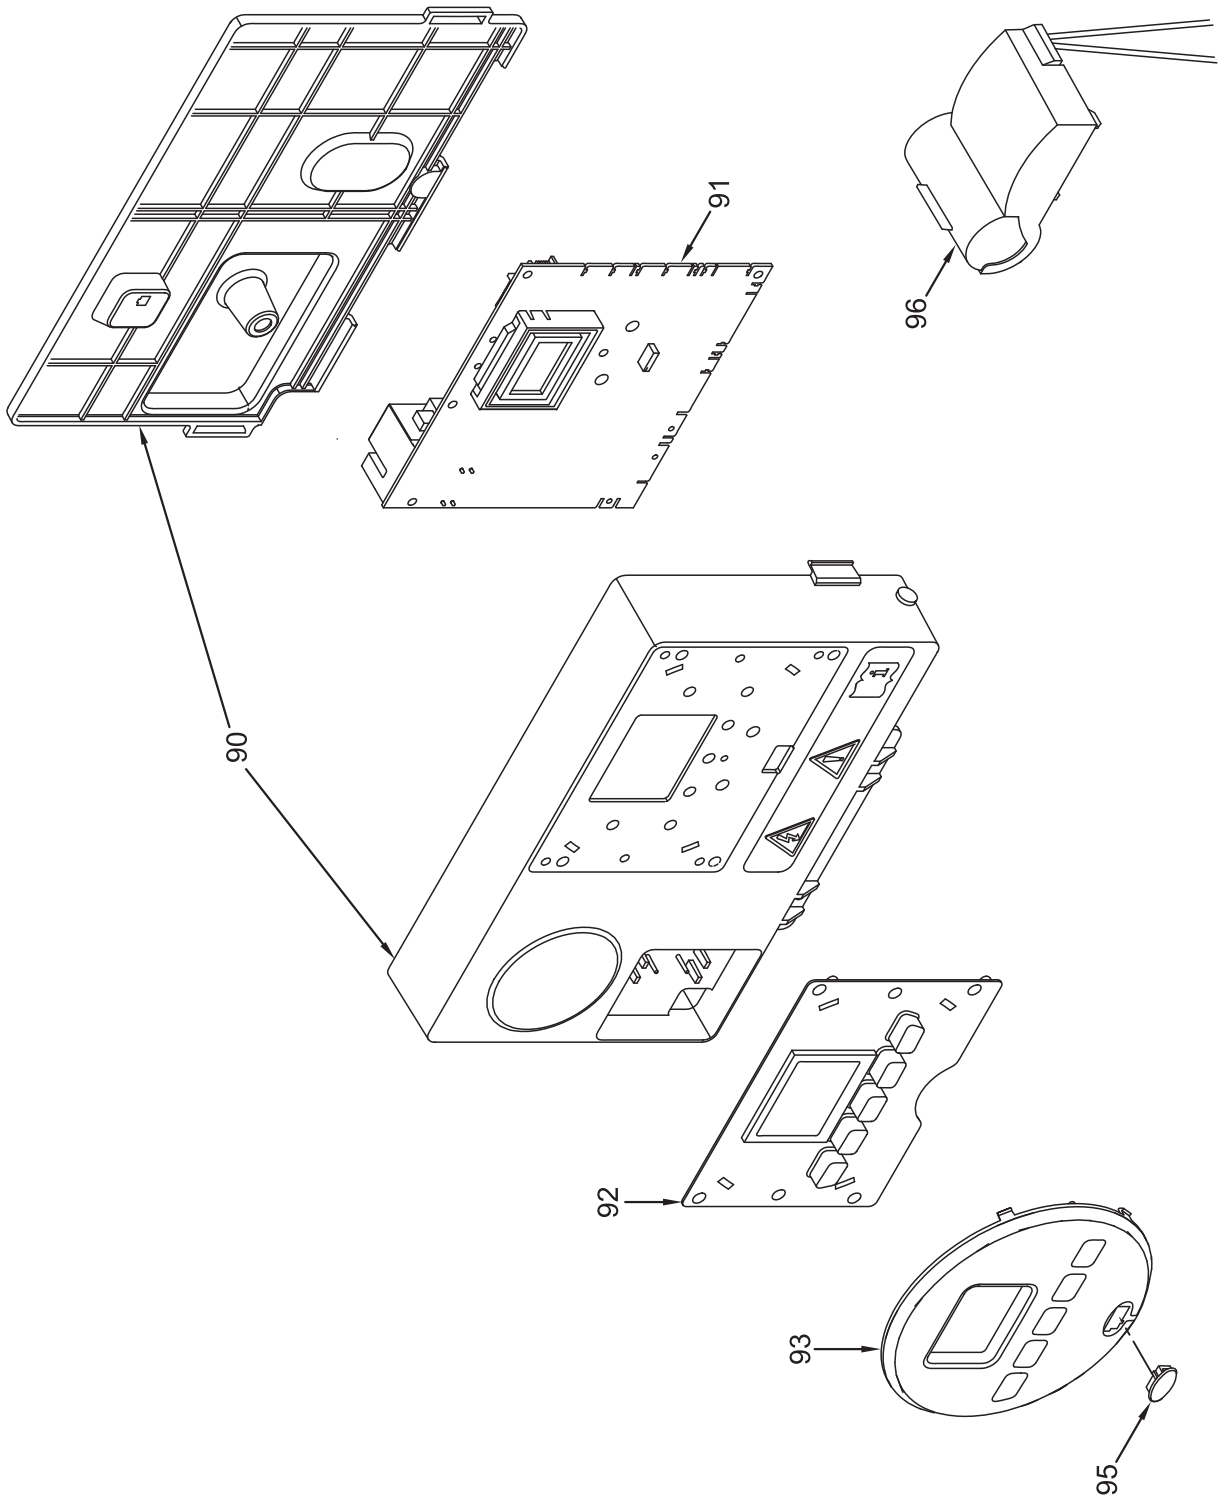

Pos.	Code	Description	BRAVA SLIM HE	
			40 i	40 e
1	6264565	Boiler fixing bracket	x	x
2	6010894	Support exchangers bracket	x	x
3	6147412	Plug for air vent connection	x	x
4	6226464	O-ring 115 diam. 11.91x2.62	x	x
5	6226624	Spring air vent knob	x	x
6	6278910	Main exchanger body	x	x
7	6277130	Probe NTC D.4X40	x	x
8	6010892	Support exchangers bracket	x	x
9	6269008	Main exchanger door insulation	x	x
10	5188360	Main exchanger door	x	x
11	6248870	Combustion chamber O-ring	x	x
12	6248871	Glass fibre sealing cord	x	x
13	6311810	Glass fixing flange	x	x
14	6020103	Sight glass	x	x
15	6248872	Sight glass gasket	x	x
16	8076116	Burner + gasket kit	x	x
17	6174828	Gasket for burner flange	x	x
18	6278892	Air-gas hose	x	x
19	6174819	Air-gas hose gasket	x	x
20	6278891	Side low air-gas hose	x	x
21	6174809	Gasket for ignition electrode	x	x
22	6221670	Ignition-ionisation electrode	x	x
23	6285950	Bracket	x	x
24	6174816	Gasket for fan flange	x	x
25	6274391	Air/gas mixer	x	x
26	6028703	Gasket for duct flange	x	x
27	6261412	Fan	x	x
28	6278703	Smoke chamber	x	x
29	6248855	P.C. inlet/outlet smokes gasket	x	x
30	6291151	Upper protection shield	x	x
31	5183730	Rectang. expansion vessel L.10	x	x
32	2030225	Gasket Ø 5.5x11x2	x	x
33	6147401	Plug 1/4"	x	x
34	6273608	Water pressure transducer	x	x
35	6226639	Spring clip	x	x
36	6226476	ORing diam.15x2	x	x
37	6017405	Flexible pipe M.F. 3/8" L=300	x	x
38	6226643	Pipe fixing spring	x	x
39	2030226	Gasket Ø 10.2x14.8x2	x	x
40	6277211	Water trap	x	x
41	6119381	Cap G 1/2"	x	x
42	6034155	Condensate drainage pipe	x	x
43	2051123	Clamp diam. 24.2	x	x
44	1010215	Rubber pipe dia. 15x2.5	x	x
46	6001162	Clamp diam. 17.3	x	x
47	2051203	Air intake pipe 40	x	x
48	6243838	Hose clamp Ø 40-60	x	x
49	2030249	Gas valve	x	x
50	6277446	Pipe connecting gas valve-mixer	x	x
51	6050472	Nozzle 650	x	x
52	6226477	Rubber gasket OR Ø 17x3	x	x
53	6226636	D.H.W. elektrovalve fix.spring	x	x
54	6227466	Flowing pipe to C.H. system	x	x
55	6226412	O-ring 3068	x	x
56	6231372	Temperature sensor	x	x
57	6146729	100° C safety stat	x	x
58	6226601	Spring for heat exchanger connection	x	x
59	6227539	Return pipe from C.H. system	x	x

Pos.	Code	Description	BRAVA SLIM HE	
			40 i	40 e
60	6226619	Spring for heat exchanger connection	x	x
61	2030267	Piracriten gasket Ø 30x17x2	x	x
62	6226638	Divertor valve motor spring clip	x	x
63	6304465	casing left/right side panel	x	
64	6325010	Casing front panel	x	
65	6281545	Replacement rear insulat. kit	x	x
66	6265871	C.H. flow manifold	x	x
67	6265830	C.H. return manifold	x	x
68	6265659	18 plate-type heat exchanger	x	x
69	6226475	ORing diam.18.64x3.53	x	x
70	6222003	D.H.W. filter	x	x
71	6104708	M.F. bushing 3/4" UN1x3/4" NPT	x	x
72	6131440	Flowmeter sensor	x	x
73	6040211	Pressure relief valve 3 bar	x	x
74	6022010	Sensor gasket	x	x
75	6226626	Pipe fixing spring	x	x
76	6231351	Plunged sensor	x	x
77	6120560	Pump nipple 3/4"	x	x
78	6272349	Modulating circulating pump	x	x
79	6013182	Automatic air vent	x	x
80	6226644	Spring clip for rotating connection	x	x
81	6034167	Condensate drainage pipe	x	x
82	6087332	Motor for diverting valve	x	x
83	6319644	Flowmeter group	x	x
84	6275911	Pressure relief valve operation lever	x	x
85	6319645	Three-way plates group	x	x
86	2030227	Gasket Ø 12x18x2	x	x
88	6157653	Pressure relief valve drain pipe	x	x
89	6175180	Flow control spacer	x	x
90	6304720	Control panel	x	x
91	6324920	Main P.C.B.	x	x
92	6305131	Rubber button	x	x
93	6304831	Interface panel	x	x
94	6319650	Bitron transducer cap	x	x
95	6305140	Rubber cap	x	x
96	6245380	Pump connector	x	x
97	6281430	18 l/min. flow control	x	x
100	6255816	Boiler casing		x
101	6255883	Casing door		x
102	6255913	Flap door		x
103	6262910	Boiler casing support		x
104	6133100	Pin M5 ZnCr		x
105	8102110	Gasket and flange kit		x
106	8085606	90° elbow with take-off points		x
107	6230400	Rubber sealing ring Ø 100 mm		x
108	6230310	Flue terminal		x
700	6281534	Gaskets kit	x	x
701	6319695	Murelle-Format-.....o-ring kit	x	x
702	6211794	Peephole kit	x	x
703	6319700	Springs / clamps kit DIN	x	x
704	5202550	Complete control panel	x	x
705	6323877	14 pole cable connector CN15+CN5	x	x
706	6323874	4 pole cable connector CN13	x	x
707	6323875	6 pole cable connector CN12	x	x
708	6323876	4 pole cable connector CN14	x	x
709	6323872	9 pole cable connector CN1	x	x
710	6323873	6 pole cable connector CN2	x	x

## 13 REMOVING COMPONENTS



### CAUTION

The maintenance interventions described must ONLY be carried out the professionally qualified personnel.



### WARNING

Before carrying out any interventions described:

- set the main system switch to "OFF"
- close the gas valve
- make sure that no hot parts inside the appliance are touched.

## 13.1 Remove panels

### 13.1.1 Front panel

To access the internal parts of the boiler:

- disassemble the smoke outlet duct of the **Brava Slim HE 40 e**
- remove the screws (1), pull the front panel (2) forwards and release it from the top by lifting it

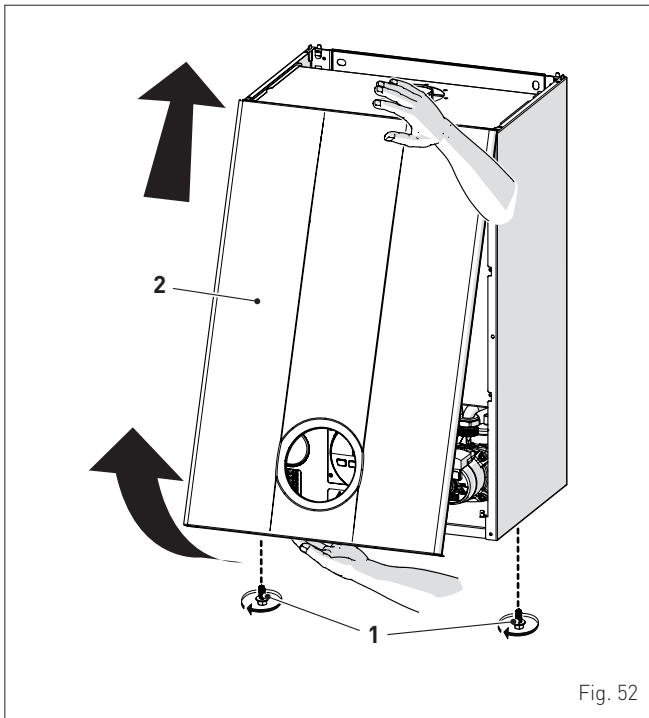


Fig. 52

### 13.1.2 Side panels

- Unscrew the screws (3)
- pull the side panel (4) outwards to release it from the top

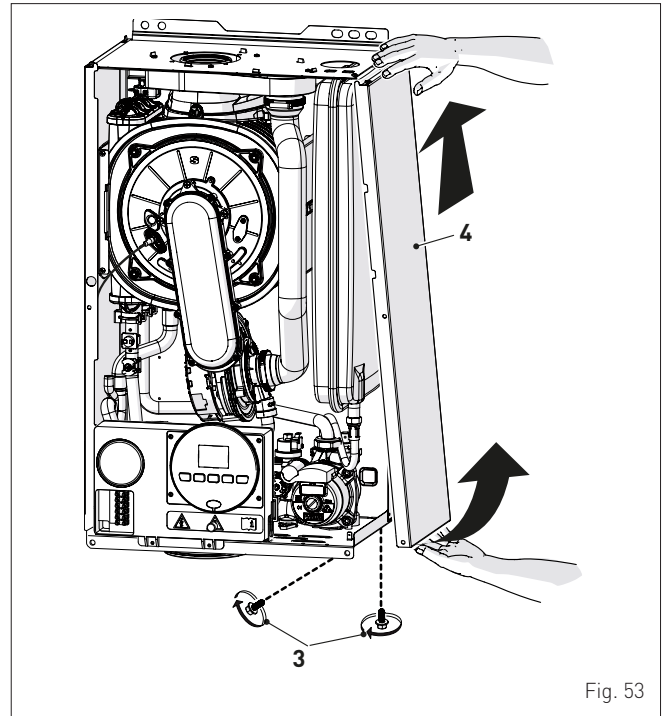


Fig. 53

- proceed in the same way for the other panel.

## 13.2 Rotate control panel

- Remove front panel (see "Remove panels" on page 48)
- remove the screws (3) securing the control panel (4)
- move the panel (4) upwards (a) but keeping it in the side guides (5) to the end of travel
- bring it forwards and down (b) until it is horizontal

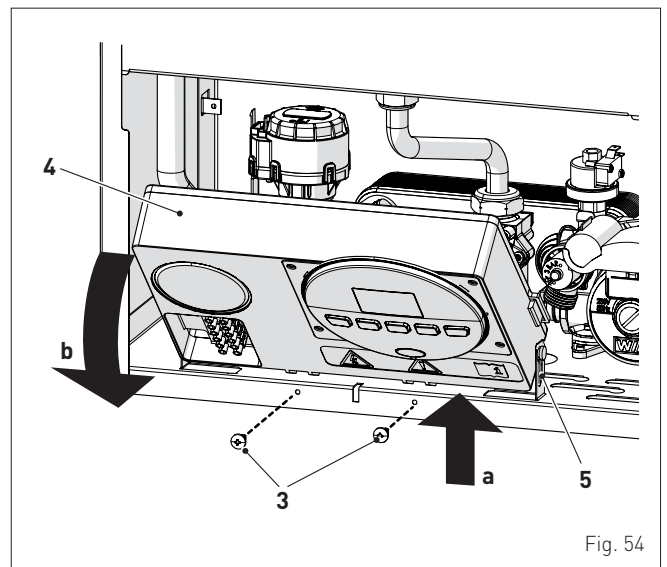


Fig. 54

### 13.3 Remove/replace sensor and thermostat

#### 13.3.1 Smoke flue gas probe

- Remove front panel (see "Remove panels" on page 48)
- disconnect the connector (1)

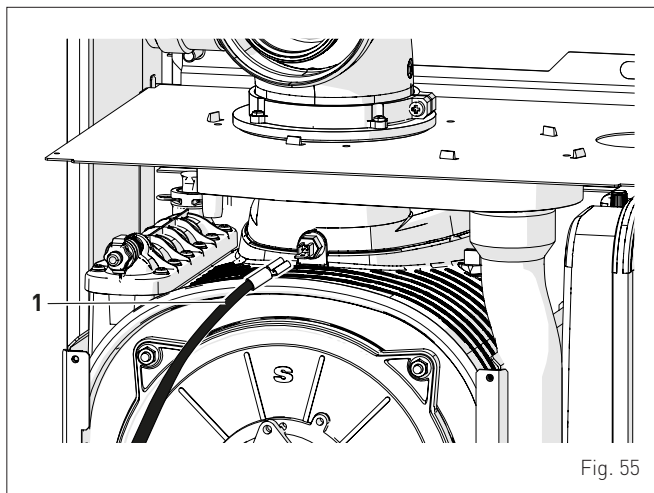


Fig. 55

- using a suitable tool, rotate the sensor 90° anti-clockwise (2)

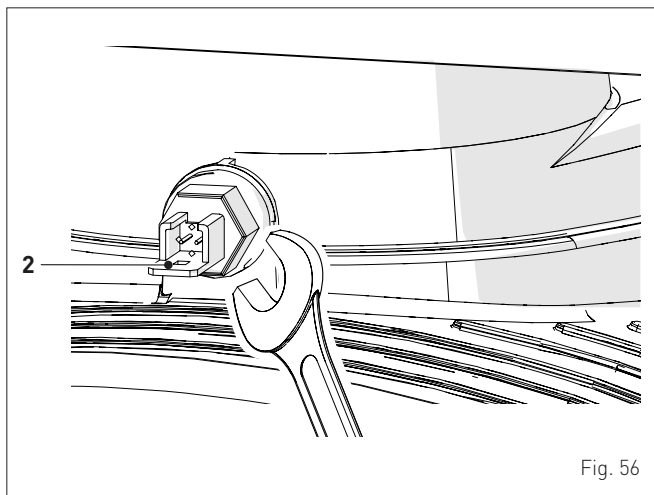


Fig. 56

- extract the sensor (2)

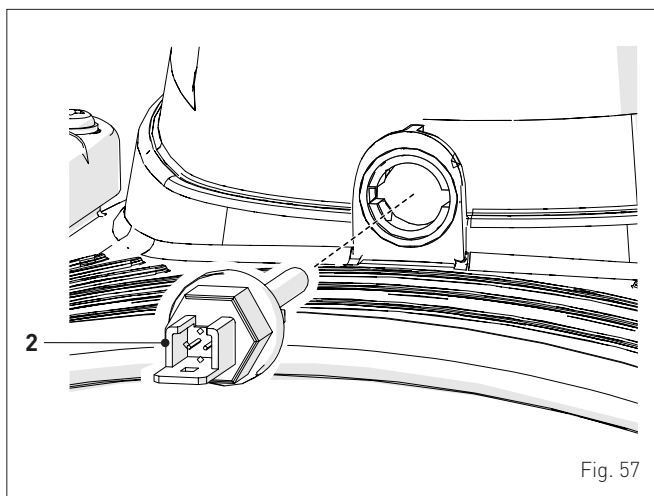


Fig. 57

#### 13.3.2 Domestic hot water sensor

- Remove front panel (see "Remove panels" on page 48)
- move the control panel (A) into a horizontal position (see "Rotate control panel" on page 48)
- disconnect the connector (1)

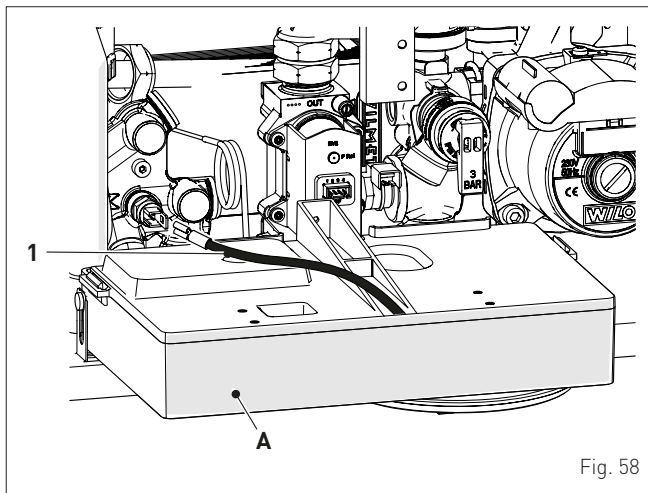


Fig. 58

- extract the sensor (2)

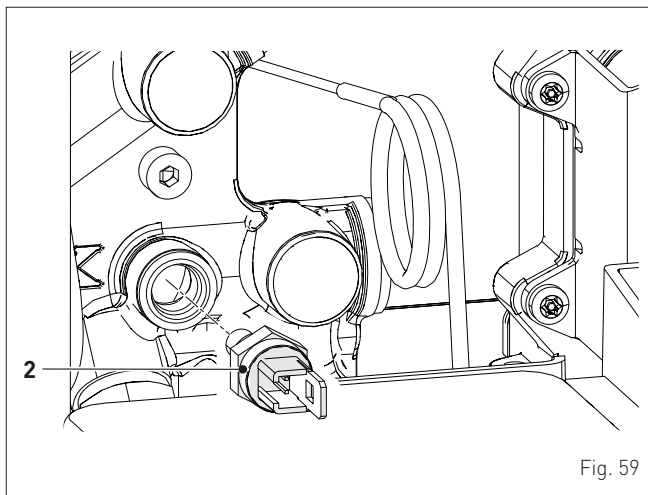


Fig. 59

### 13.3.3 Delivery sensor

- Remove front panel (see "Remove panels" on page 48)
- disconnect the connectors (1)

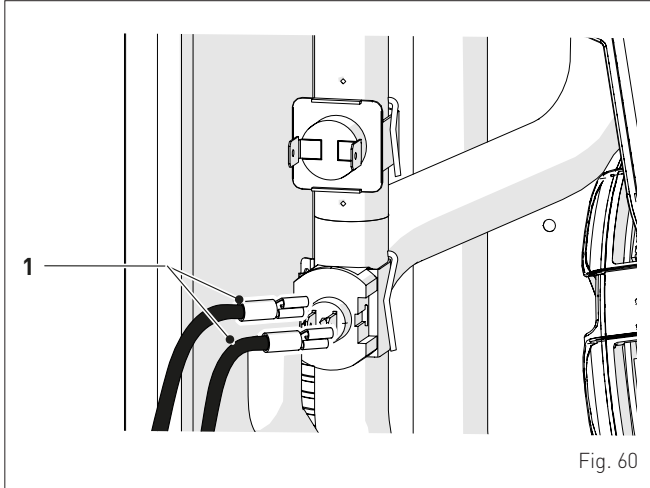


Fig. 60

- remove the rear locking clip (2)
- disconnect the sensor (3) from the pipe

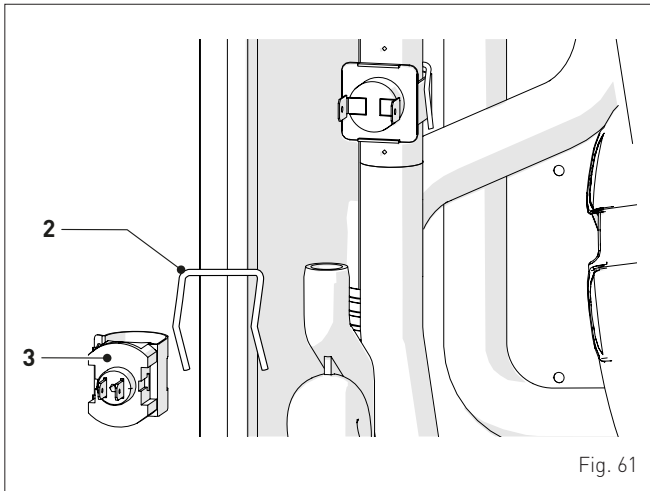


Fig. 61

### 13.3.4 Heat safety thermostat

- Remove front panel (see "Remove panels" on page 48)
- disconnect the connectors (1)

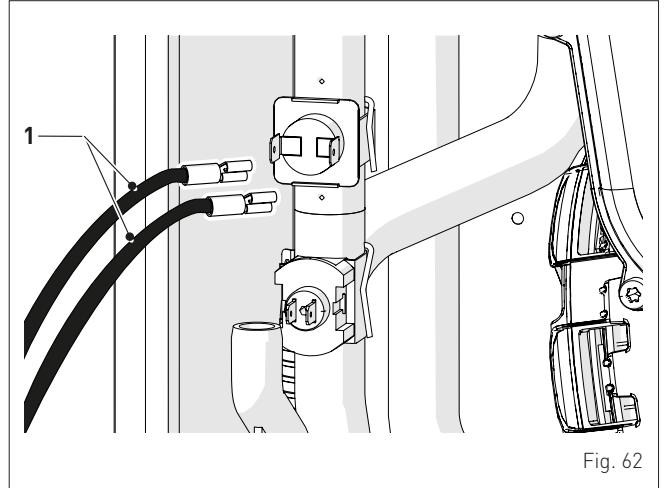


Fig. 62

- remove the rear locking clip (2)
- disconnect the sensor (3) from the pipe


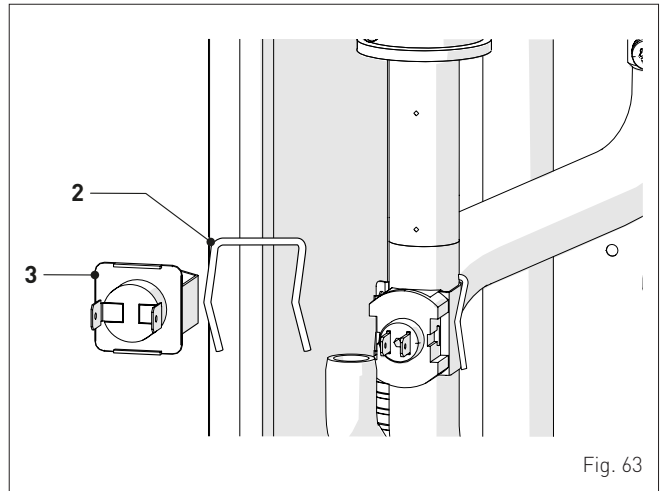


Fig. 63




### 13.4 Remove electronic board


- Remove front panel (see "Remove panels" on page 48)
- move the control panel (A) into a horizontal position (see "Rotate control panel" on page 48)
- unscrew the screw (1)
- press the catches (2) to remove the cover

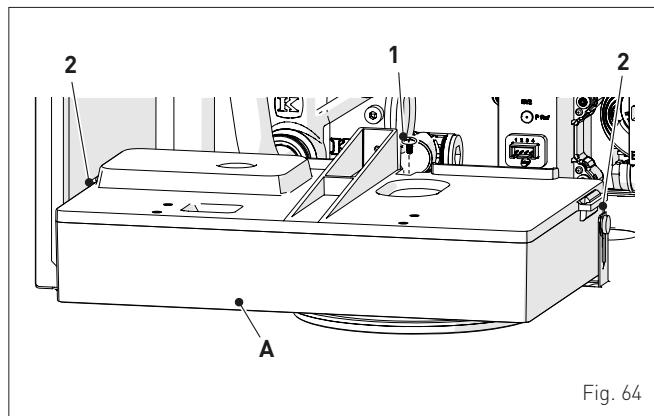

- open the cover (3)

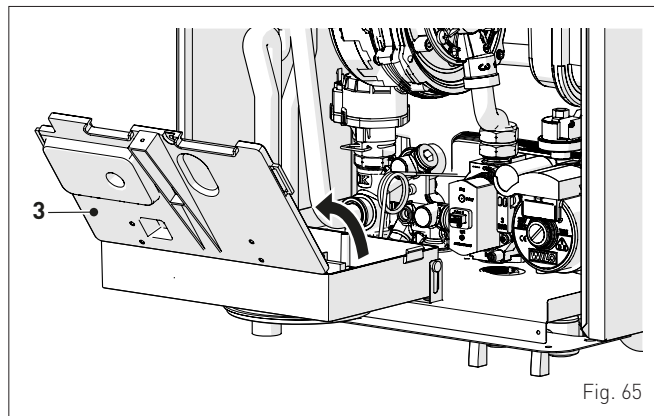


- unscrew the fixing screw (4) on the electronic board
- remove the electronic board (5) by sliding upwards
- disconnect all the connectors (6)

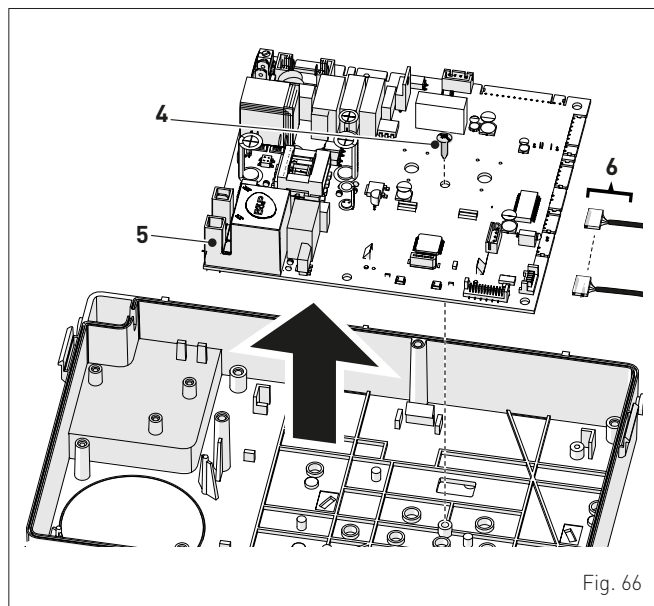


### 13.5 Remove/replace combustion head unit and fan


- Remove front panel (see "Remove panels" on page 48)
- disconnect the fan connectors (1)
- remove the clip (2) and air inlet pipe
- unscrew the swivel joint (3)

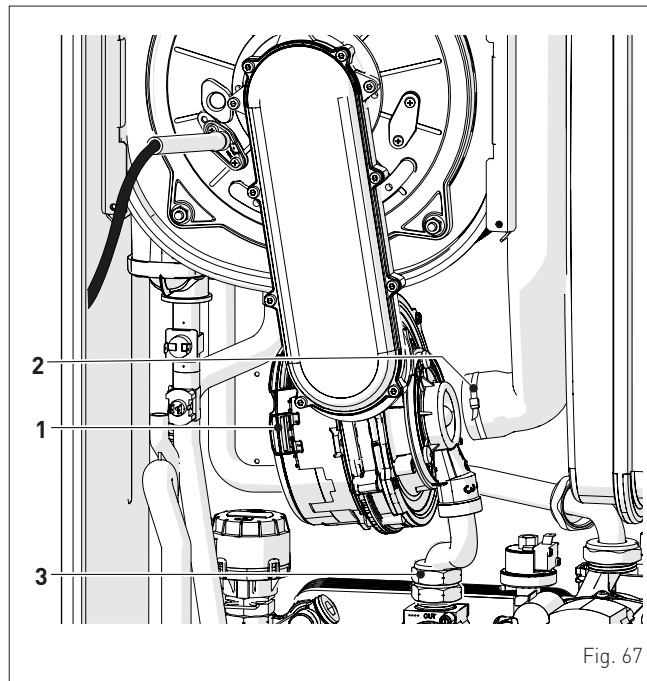

- unscrew the nuts (4)
- remove combustion head unit/conveyor/fan (5)

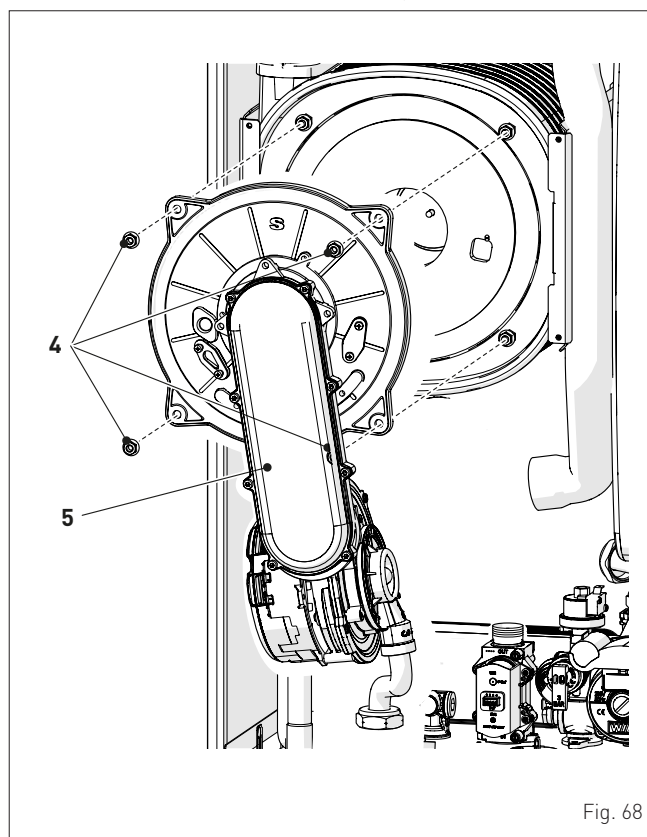


- unscrew the screws (6) and unthread the combustion head (7)
- unscrew the screws (8) and remove the fan (9)

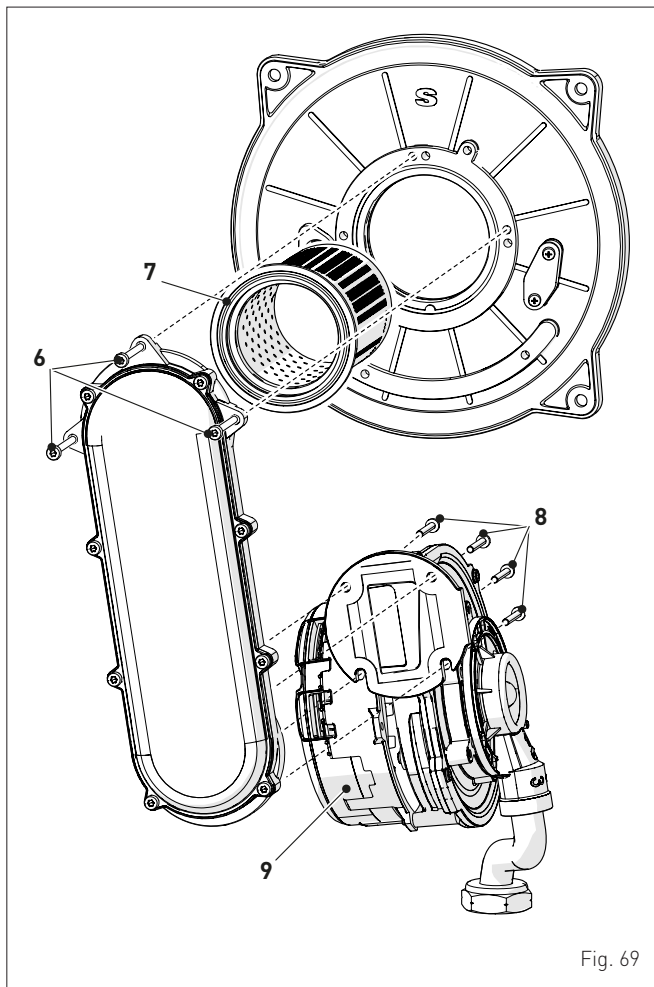


### 13.6 Remove/replace the ignition and flame detection electrode


- Remove front panel (see "Remove panels" on page 48)
- disconnect the connectors (1) and (2)

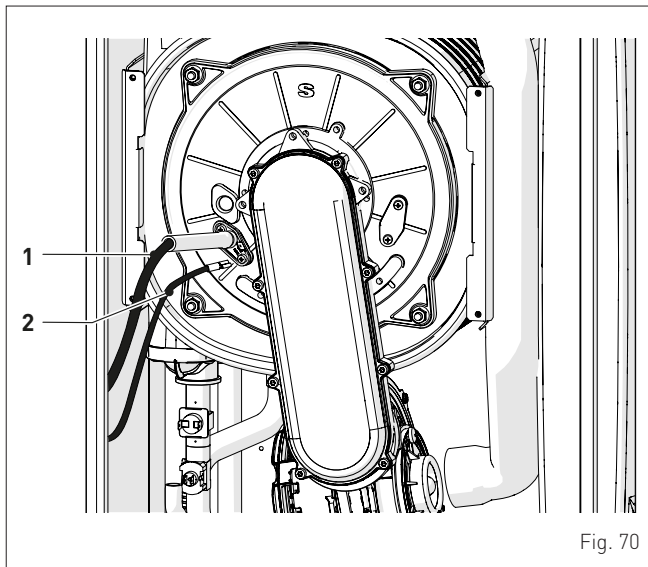

- remove the screws (3)

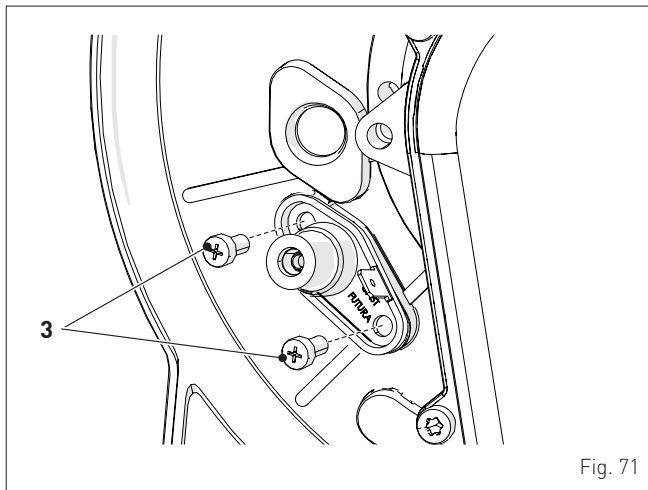

- carefully remove the ignition/flame detection electrode (4)

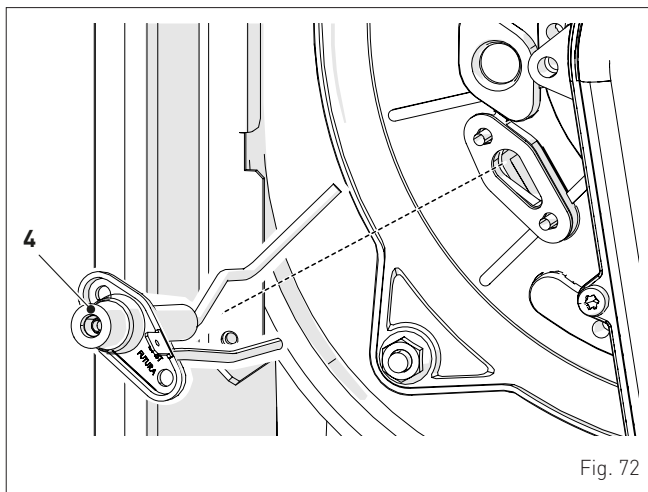

- check the electrode quotas as per chapter "Checking the ignition/detection electrode" on page 38.



### 13.7 Remove/replace the siphon



#### CAUTION

When disassembling, some residual water may leak.

- Remove the panelling (see "Remove panels" on page 48)
- move the control panel (A) into a horizontal position (see "Rotate control panel" on page 48)
- remove the spring clips (1)
- remove the cover (2)

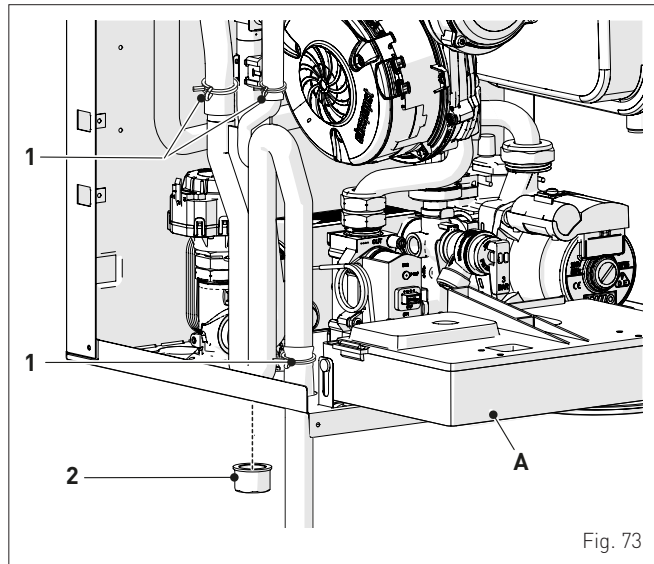


Fig. 73

- slide the siphon upwards (3) and remove

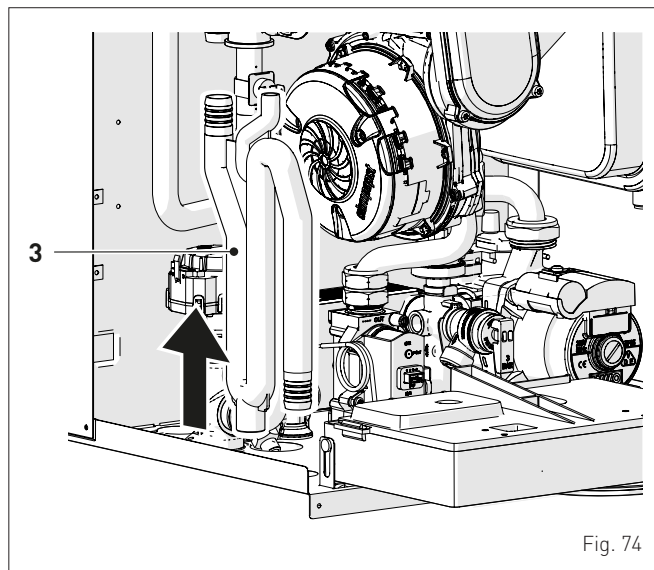


Fig. 74

### 13.8 Remove/replace gas valve

- Close the gas valve
- remove the front panel (see "Remove panels" on page 48)
- move the control panel (A) into a horizontal position (see "Rotate control panel" on page 48)
- disconnect the electrical connector (2)

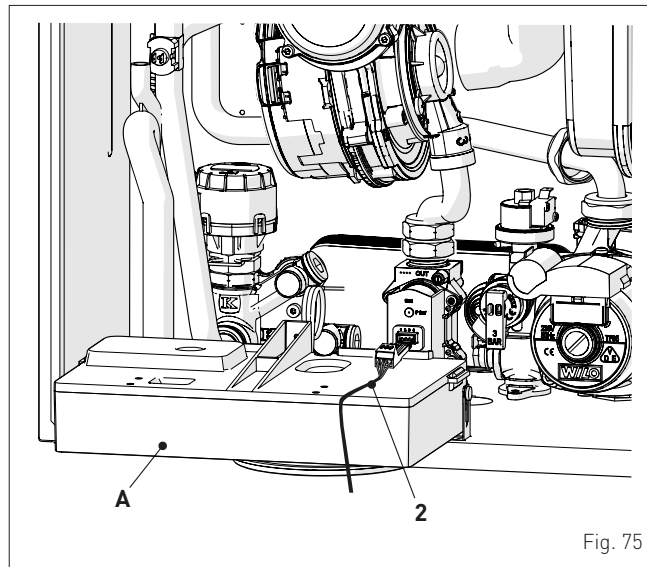


Fig. 75

- unscrew the swivel joints (3) and the screws (4)

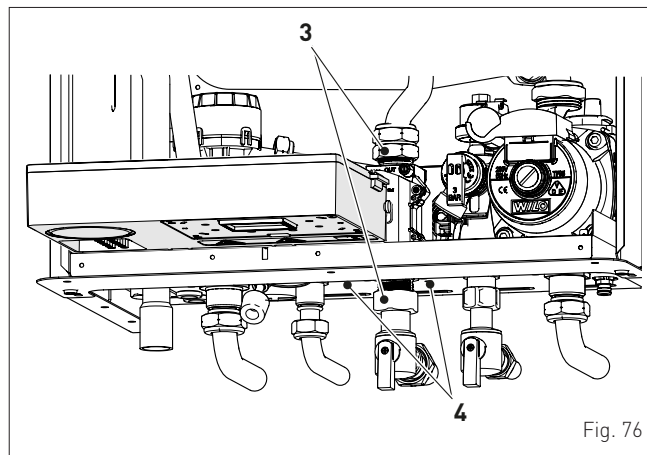


Fig. 76

- extract the gas valve (5)
- the nozzle (6) MUST be used with the new valve

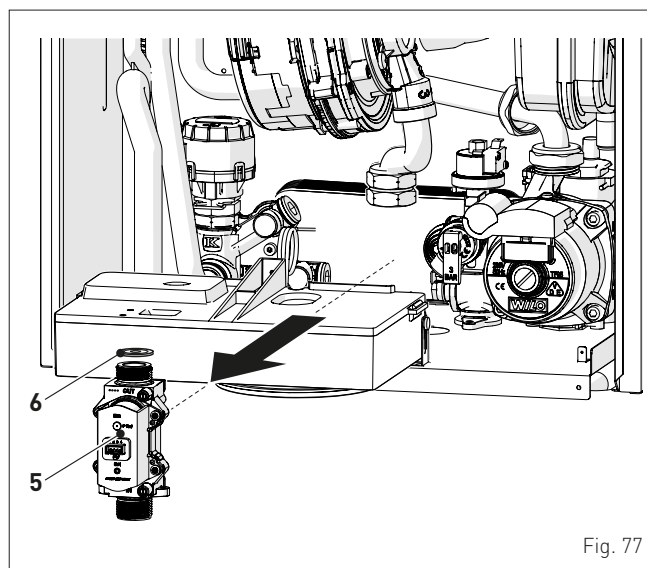


Fig. 77

### 13.9 Remove/replace the expansion vessel

- Shut-off the valves to the system and empty the boiler
- remove the front panel (see "Remove panels" on page 48)
- disconnect the pipe (1)
- unscrew the fixing screw (2) on the rear panel

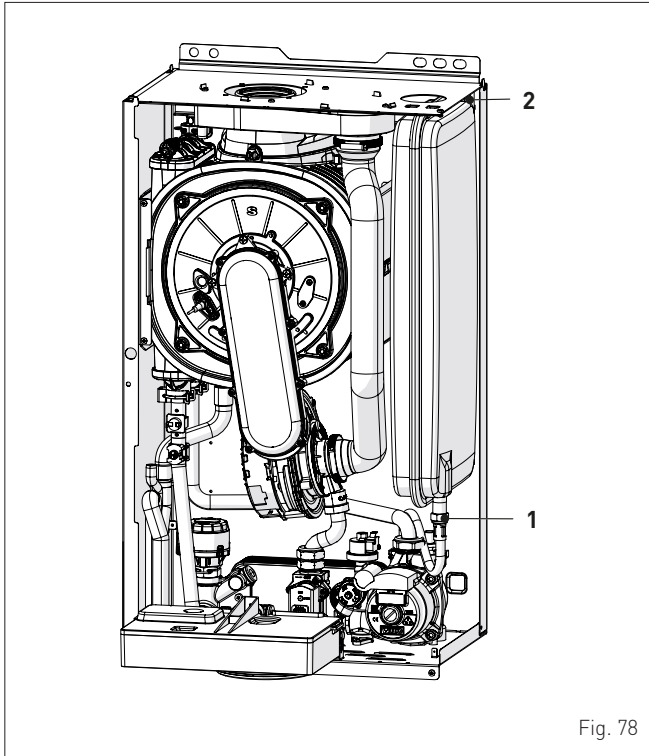


Fig. 78

- release the top section (4)
- pivoting around the hook (5), turn and extract the expansion vessel (3)

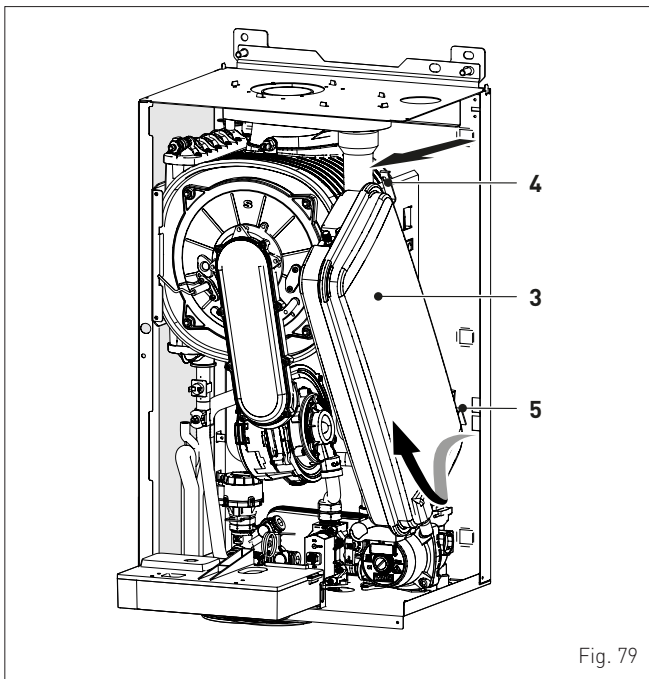


Fig. 79

### 13.10 Remove/replace diverter valve

- Shut-off the valves to the system and empty the boiler
- remove the front panel (see "Remove panels" on page 48)
- move the control panel (A) into a horizontal position (see "Rotate control panel" on page 48)
- remove the spring (1)

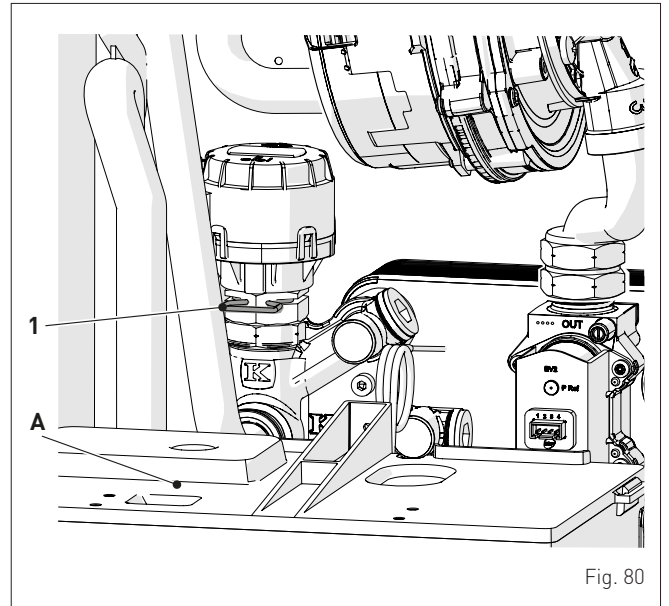


Fig. 80

- extract the deviator valve (2)

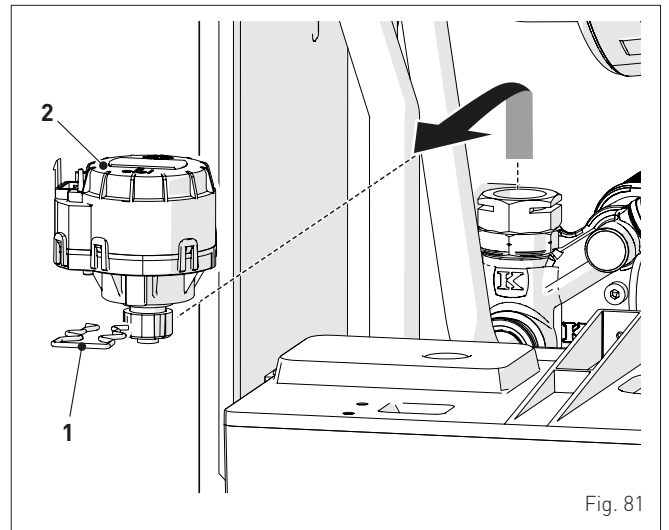


Fig. 81

### 13.11 Remove/replace system pump

- Shut-off the valves to the system and empty the boiler
- remove the front panel (see "Remove panels" on page 48)
- lift the connector (1) using a screwdriver (2)

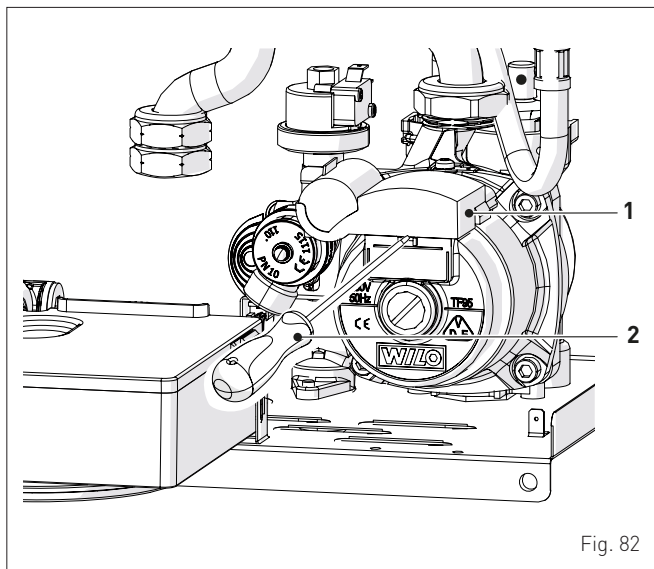


Fig. 82

- unscrew the swivel joints (3) and (4)
- disconnect the pipes (5) and (6)
- unscrew the screw (7)
- unscrew the nut (8) that secures the pump

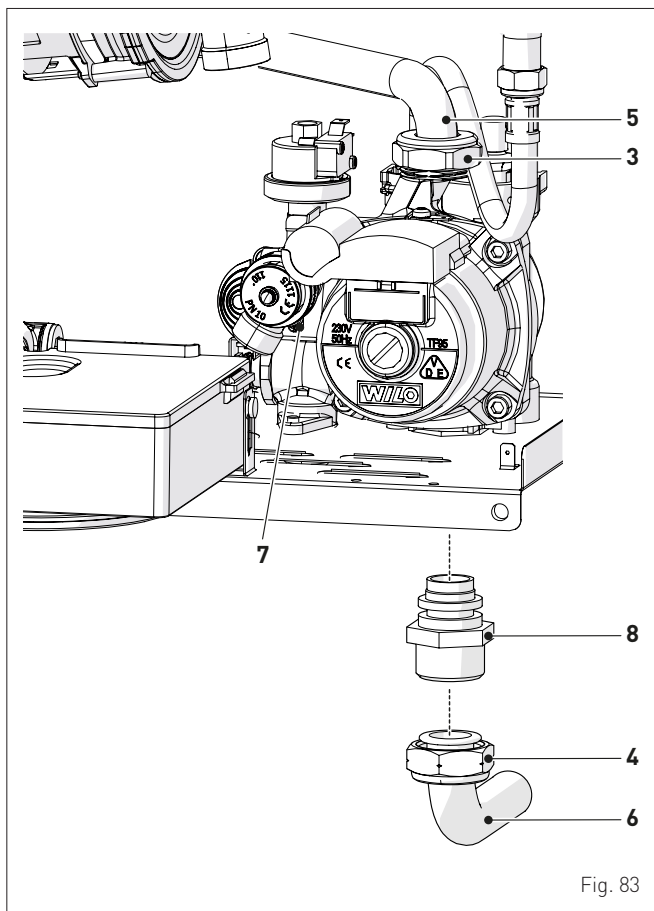


Fig. 83

### 13.12 Remove/replace domestic hot water exchanger



#### CAUTION

If it is easier to remove the pump, follow the instructions of point "Remove/replace system pump" on page 55.

- Shut-off the valves to the system and empty the boiler
- remove the front panel (see "Remove panels" on page 48)
- move the control panel (A) into a horizontal position (see "Rotate control panel" on page 48)
- unscrew and remove the screws (1) connecting to the plate heat exchanger (2)
- move upwards and extract the exchanger and fittings

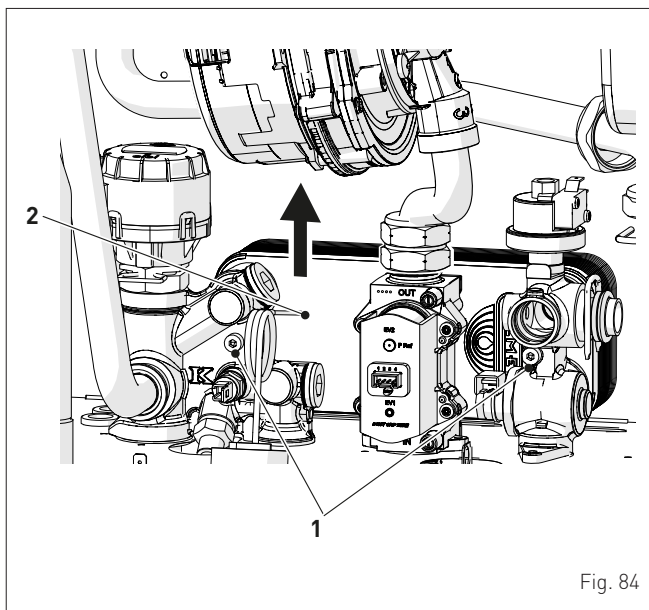


Fig. 84



Fonderie Sime S.p.A - Via Garbo, 27 - 37045 Legnago (Vr)  
Tel. +39 0442 631111 - Fax +39 0442 631292 - [www.sime.it](http://www.sime.it)

Fonderie SIME S.p.A.reserves the right to make changes at any time without prior notice in order to improve its products  
without compromising the essential characteristics.